


AC 164 STF/ 2 AC 164 BUF/ 2

Montageanleitung

Assembling instruction




AC 164 STF/ 2 **AC 164 BUF/ 2**
 AC 164 STF/ 2 AC 164 BUF/ 2

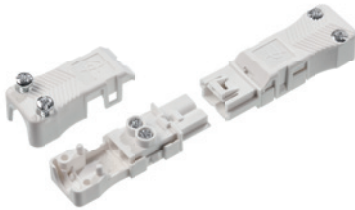

POSITIONIERUNG DER ZUGENTLASTUNGSBRÜCKEN

 Positioning of the Strain Relief Bridges



2 POLE Ø 5,0 - 7,7 mm

| | | | | | |
|----------------|---|--------------------------|---|-------------|---------|
| | | | | | |
| POS. 01 | X | 3,0 X 5,0 Ø 5,0 - 6,2 | X | Ø 6,3 - 7,2 | ≥ Ø 7,3 |


KABELDURCHMESSER ERMITTELN

Determining the cable diameter




KEINE ZEL-BRÜCKE

No ZEL insert

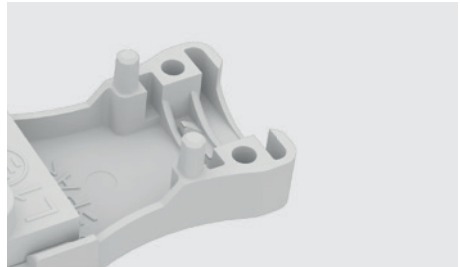

ZEL-BRÜCKE AN POS. 1

ZEL insert on pos. 1

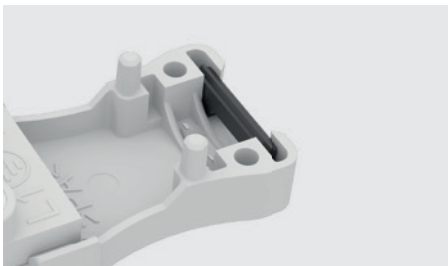

ZEL-BRÜCKE GEDREHT AN POS. 1

ZEL insert turned on pos. 1



01/2019 ZZACT1642