 



|                                                                       |          |                                                                 |           |
|-----------------------------------------------------------------------|----------|-----------------------------------------------------------------|-----------|
| <b>1. PROGRAMMING .....</b>                                           | <b>2</b> | <b>2. STATUS .....</b>                                          | <b>41</b> |
| 1.1 Initialization/Zone selection.....                                | 2        | 2.1 Status time 1 – Off delay timer .....                       | 41        |
| 1.2 Mode 1 - Daylight control with HVAC output .....                  | 4        | 2.2 Status time 2 – HVAC timer .....                            | 41        |
| 1.3 Mode 2 - Daylight control with relay for lighting (On/Off) .....  | 5        | 2.3 Status time 3 – Cut-Off timer .....                         | 42        |
| 1.4 Mode 3 - Daylight control with relay for cut-off.....             | 5        | 2.4 Status time 4 – Orientation light's timer .....             | 42        |
| 1.5 Mode 4 - Daylight control with corridor function (day/night)..... | 5        | 2.5 Status – Lux level .....                                    | 42        |
| 1.6 Select between Auto On or Semi-Auto On (daylight zones).....      | 6        | 2.6 Status – Sensitivity in sector A (red) .....                | 43        |
| 1.7 Select between Auto On or Semi-Auto On (Secondary zone 3).....    | 7        | 2.7 Status – Sensitivity in sector B (green) .....              | 43        |
| 1.8 Select between Auto On or Semi-Auto On (Secondary zone 4).....    | 8        | 2.8 Status – Sensitivity in sector C (blue) .....               | 43        |
| 1.9 Select 2 or 3 daylight zones.....                                 | 9        | 2.9 Status – Burn-in .....                                      | 44        |
| 1.10 Select Minimum or Off, daylight zones .....                      | 10       | 2.10 Status – Constant HVAC output (8 hours) .....              | 44        |
| 1.11 Lux setpoint.....                                                | 10       | 2.11 Status – Mode .....                                        | 44        |
| 1.12 Adjust lux level for individual daylight zones.....              | 11       | 2.12 Status – Minimum or Off, daylight zones .....              | 45        |
| 1.13 Lux setpoint 2000lx .....                                        | 11       | 2.13 Status – 2/3 daylight zones .....                          | 45        |
| 1.14 Adjust standby-light level .....                                 | 12       | 2.14 Status – Zone 1 .....                                      | 45        |
| 1.15 Time 1 – Off delay timer .....                                   | 13       | 2.15 Status – Zone 2 .....                                      | 46        |
| 1.16 Time 2 – HVAC timer: .....                                       | 13       | 2.16 Status – Zone 3 .....                                      | 46        |
| 1.17 Time 3 – Cut-off timer.....                                      | 14       | 2.17 Status – Zone 4 .....                                      | 46        |
| 1.18 Time 4 – Orientation light's timer.....                          | 14       | 2.18 Status – Automatic On or Semi-Auto On (Zone 1) .....       | 47        |
| 1.19 Max illumination output .....                                    | 15       | 2.19 Status – Automatic On or Semi-Auto On (Zone 2) .....       | 47        |
| 1.20 Enable burn-in.....                                              | 15       | 2.20 Status – Automatic On or Semi-Auto On (Zone 3) .....       | 47        |
| 1.21 Disable burn-in.....                                             | 16       | 2.21 Status – Automatic On or Semi-Auto On (Zone 4) .....       | 48        |
| 1.22 Select sensitivity (all sectors - A, B and C).....               | 16       | 2.22 Status - Daylight calibration.....                         | 48        |
| 1.23 Select sensitivity in sector A (red).....                        | 17       | 2.23 Status - Firmware Release.....                             | 48        |
| 1.24 Select sensitivity in sector B (green).....                      | 17       |                                                                 |           |
| 1.25 Select sensitivity in sector C (blue).....                       | 18       | <b>3. OPERATION .....</b>                                       | <b>49</b> |
| 1.26 Enable constant HVAC output (8 hours) .....                      | 18       | 3.1 Operation – On/Off (All zones) .....                        | 49        |
| 1.27 Disable constant HVAC output .....                               | 19       | 3.2 Operation – Dim up (All zones) .....                        | 49        |
| 1.28 Walk test.....                                                   | 20       | 3.3 Operation – Dim down (All zones).....                       | 49        |
| 1.29 Program new daylight calibration.....                            | 20       | 3.4 Operation – Daylight zones to daylight control (Auto) ..... | 50        |
| 1.30 Reset to factory settings.....                                   | 21       | 3.5 Operation – Luminaires On/Off (Zone 1) .....                | 50        |
| 1.31 Program multi-zone (only Mode 1,2,3).....                        | 21       | 3.6 Operation – Luminaires On/Off (Zone 2).....                 | 50        |
| 1.32 Remove luminaires from multi-zone.....                           | 23       | 3.7 Operation – Luminaires On/Off (Zone 3).....                 | 51        |
| 1.33 Program light scene 1 .....                                      | 26       | 3.8 Operation – Luminaires On/Off (Zone 4).....                 | 51        |
| 1.34 Program light scene 2 .....                                      | 29       | 3.9 Operation – Dim up/down luminaires (Zone 1) .....           | 51        |
| 1.35 Program light scene 3 .....                                      | 32       | 3.10 Operation – Dim up/down luminaires (Zone 2) .....          | 52        |
| 1.36 Program light scene 4 .....                                      | 35       | 3.11 Operation – Dim up/down luminaires (Zone 3).....           | 52        |
| 1.37 Add luminaires.....                                              | 38       | 3.12 Operation – Dim up/down luminaires (Zone 4) .....          | 52        |
| 1.38 Non presence light level (night, Mode 4) .....                   | 39       | 3.13 Operation – Light scene 1 .....                            | 53        |
| 1.39 Presence light level (night, Mode 4).....                        | 40       | 3.14 Operation – Light scene 2 .....                            | 53        |
|                                                                       |          | 3.15 Operation – Light scene 3 .....                            | 53        |
|                                                                       |          | 3.16 Operation – Light scene 4 .....                            | 53        |

## 1. Programming

 
### 1.1 Initialization/Zone selection

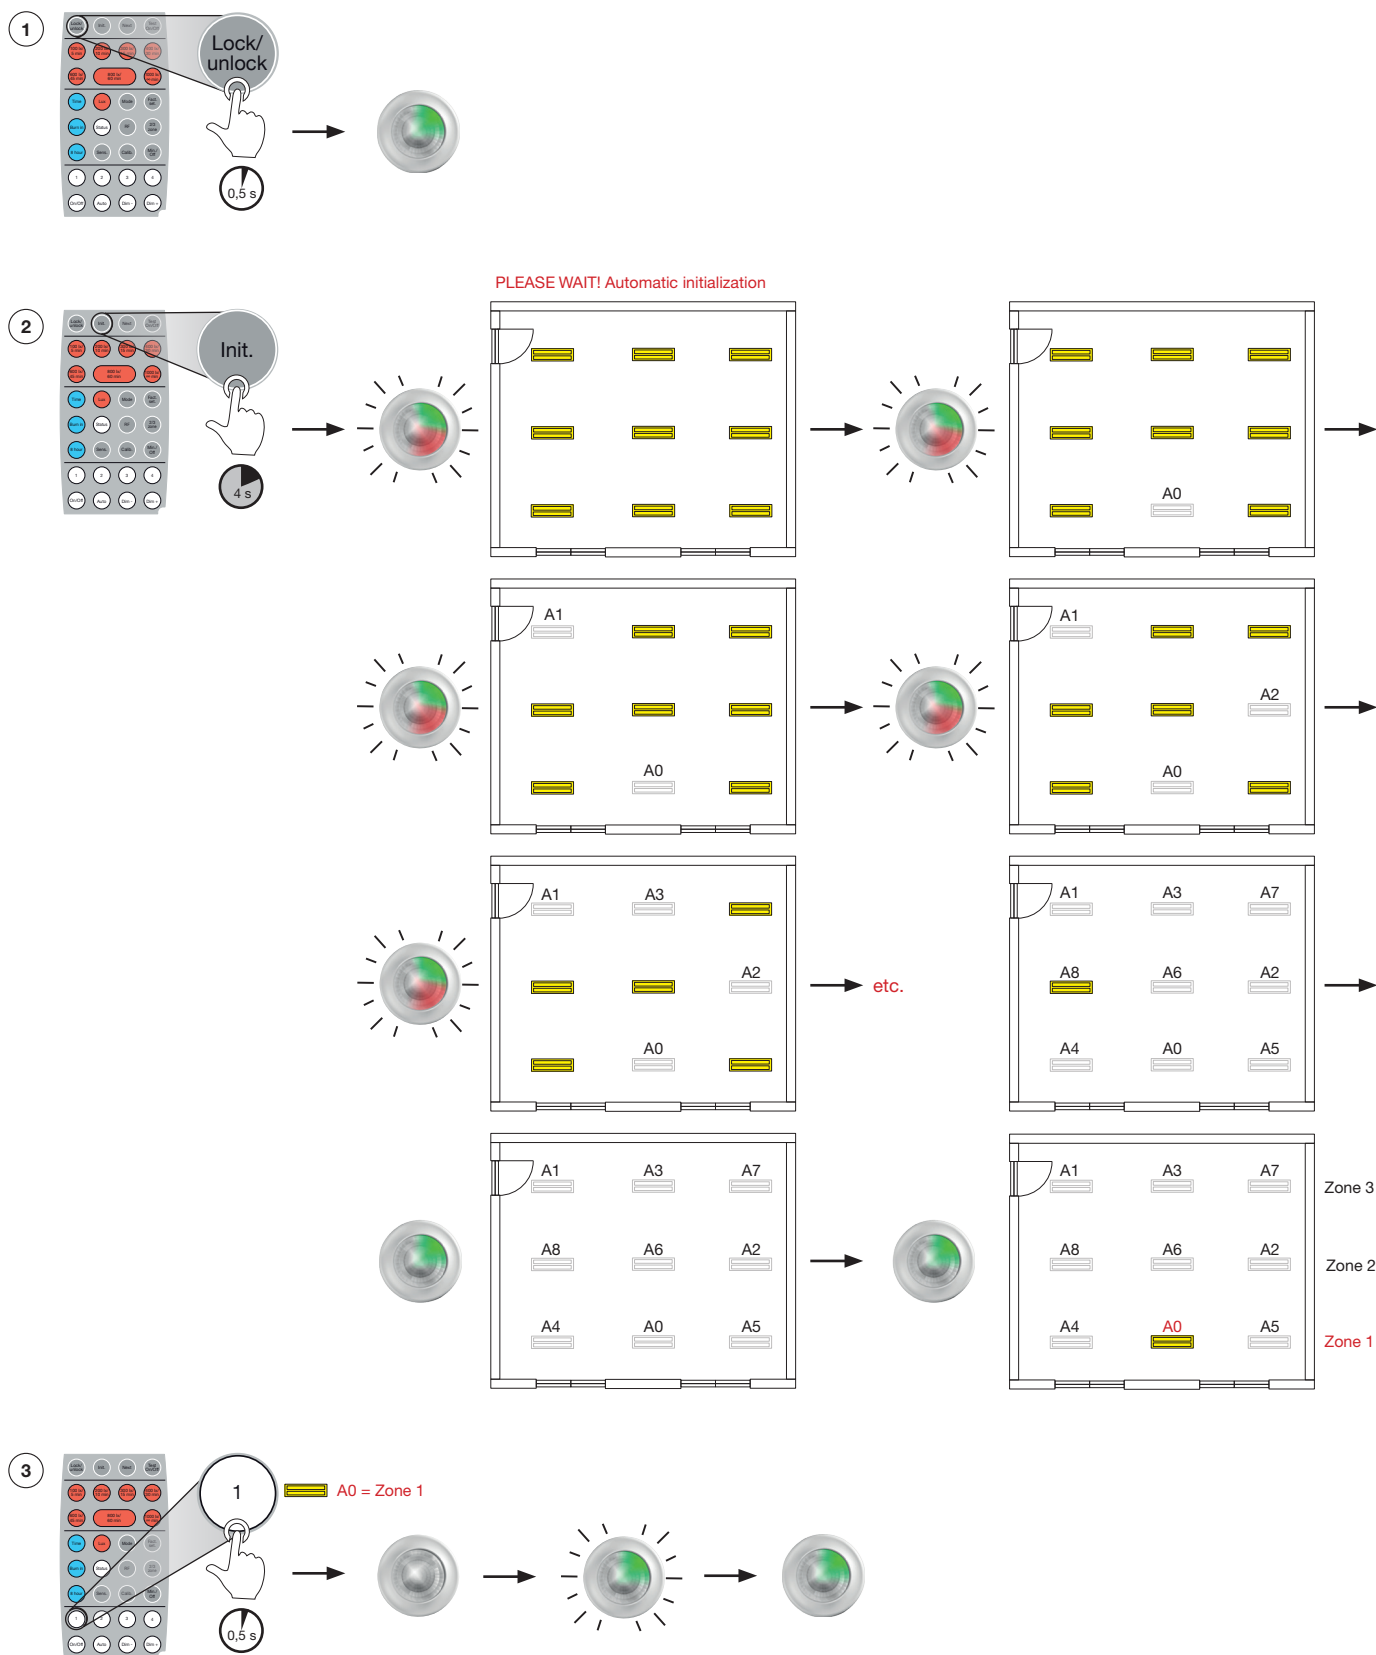


## 1.1 Initialization/Zone selection

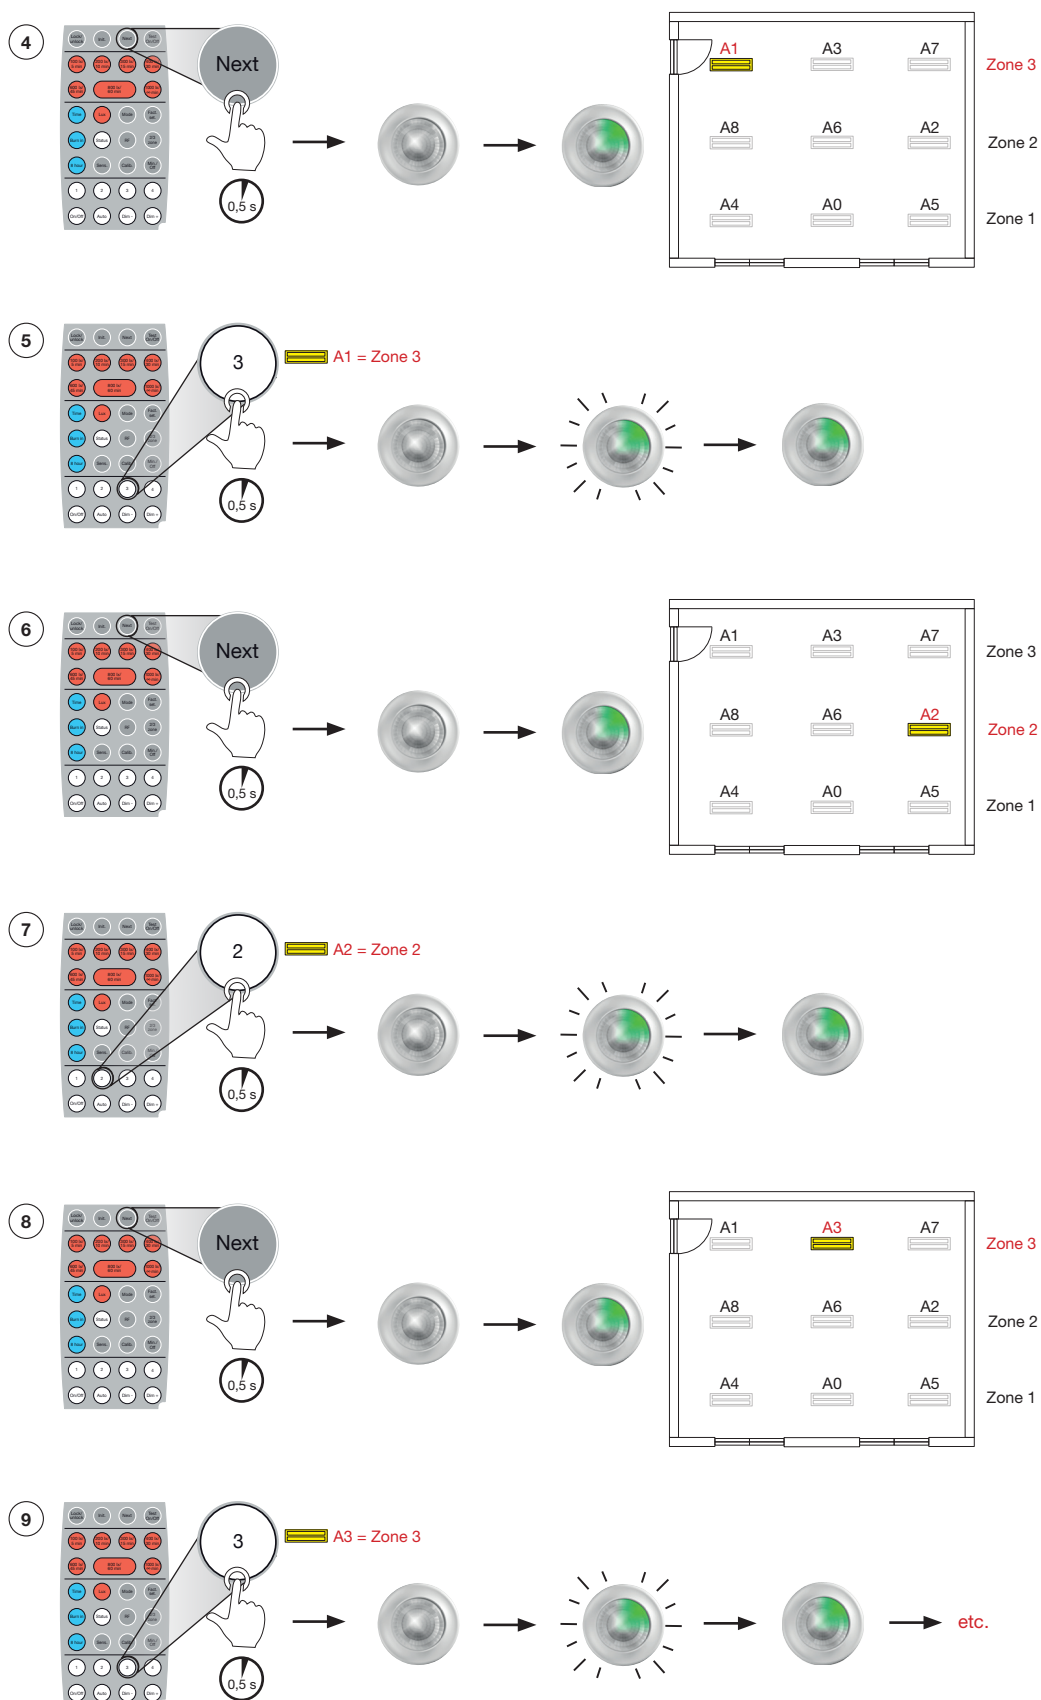

## 1.1 Initialization/Zone selection

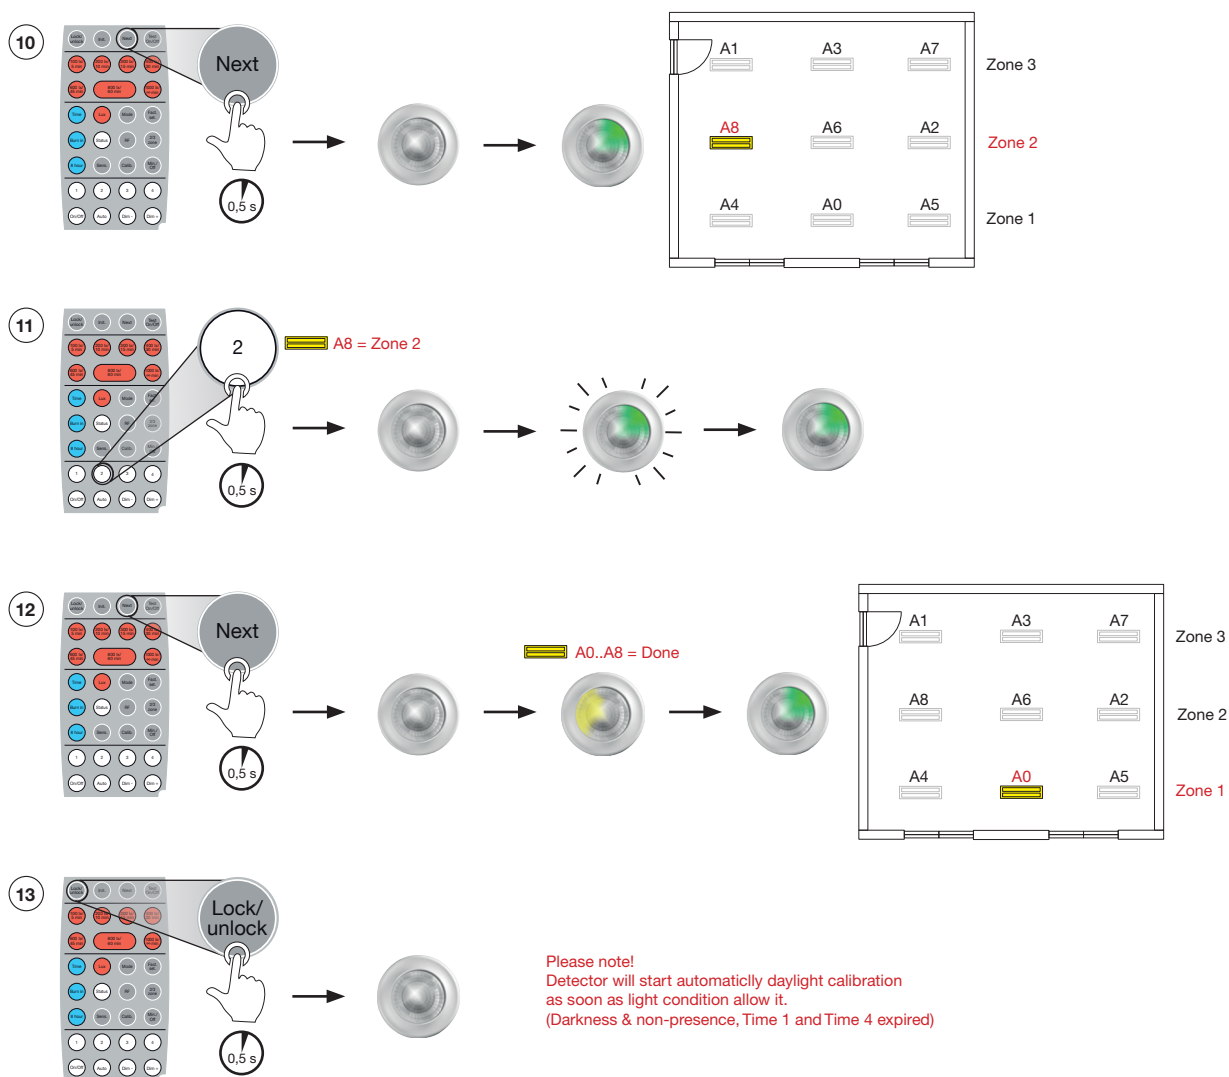 


## 1.2 Mode 1 - Daylight control with HVAC output

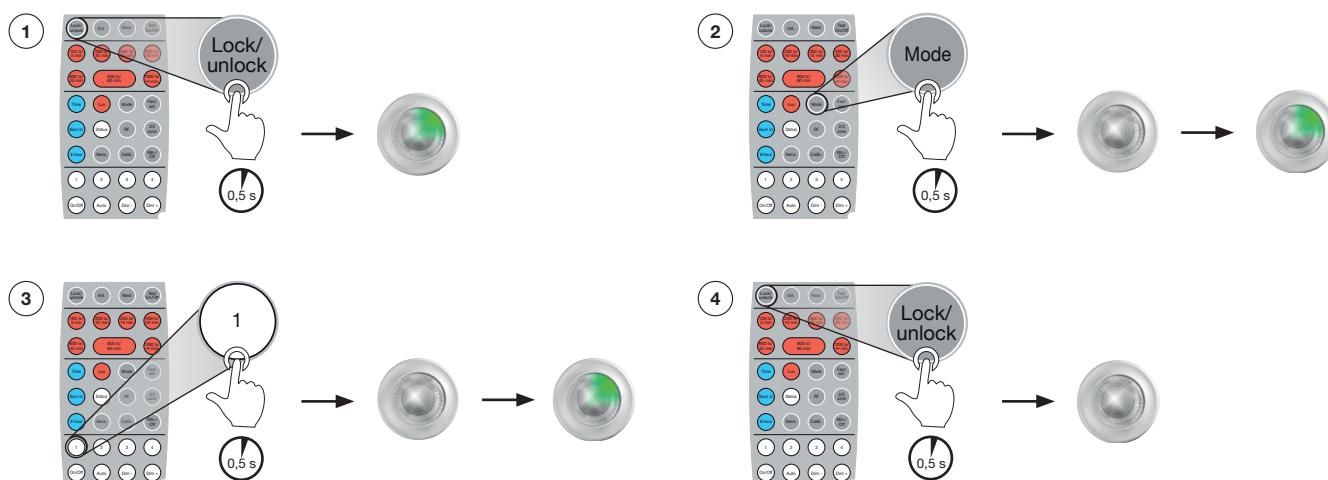 





### 1.3 Mode 2 - Daylight control with relay for lighting (On/Off)

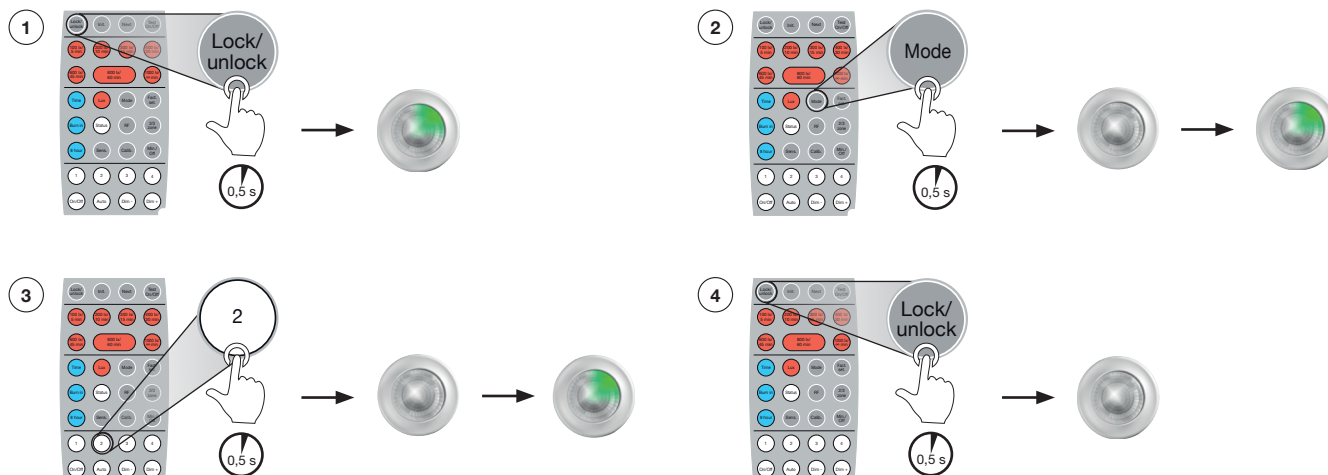 


### 1.4 Mode 3 - Daylight control with relay for cut-off

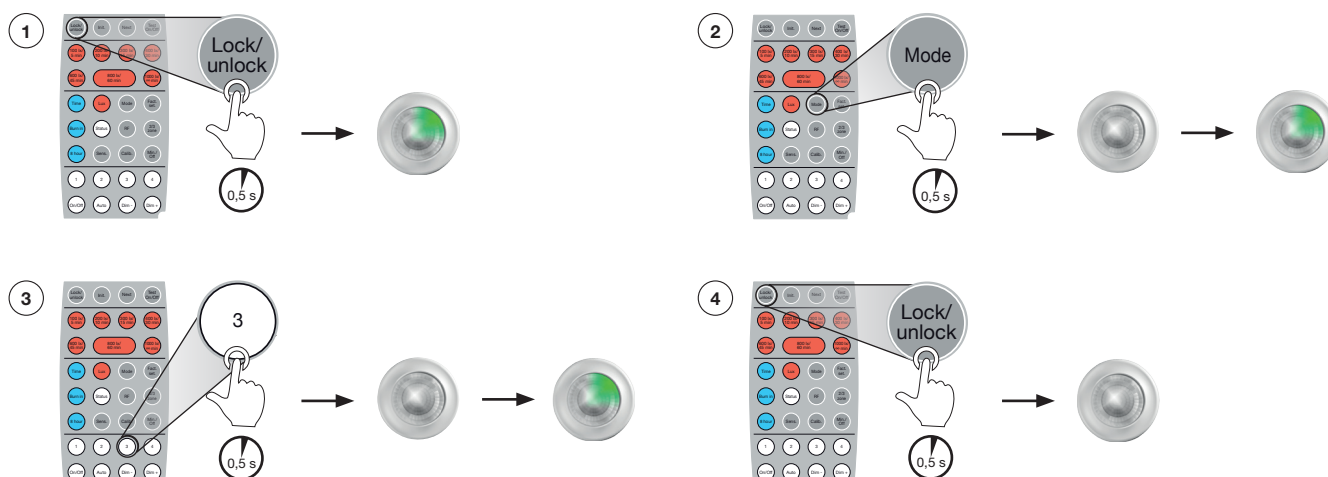 


### 1.5 Mode 4 - Daylight control with corridor function (day/night)

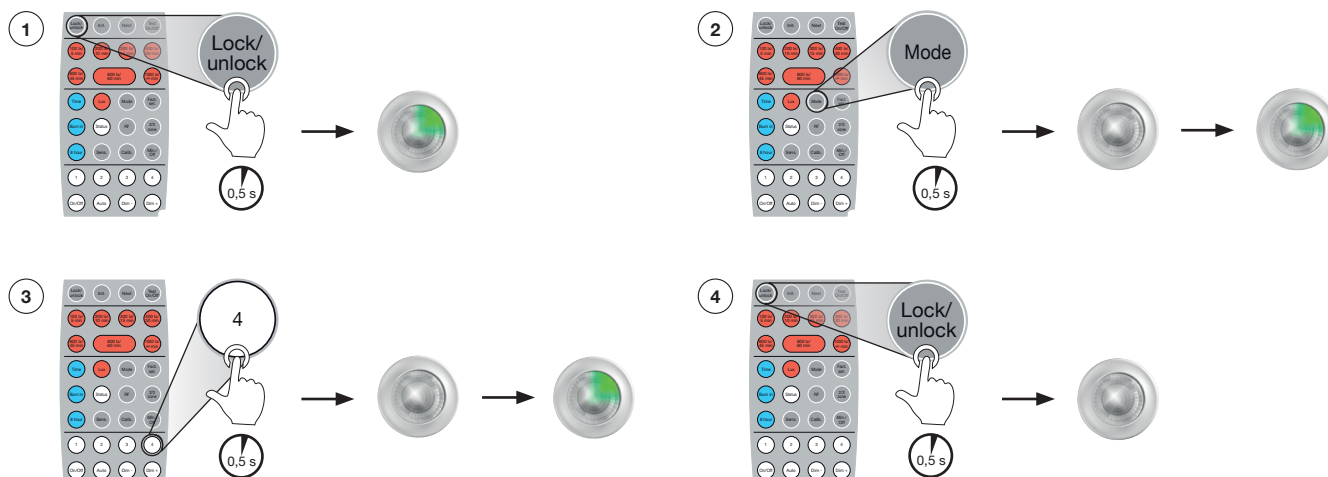 


## 1.6 Select between Auto On or Semi-Auto On (daylight zones)

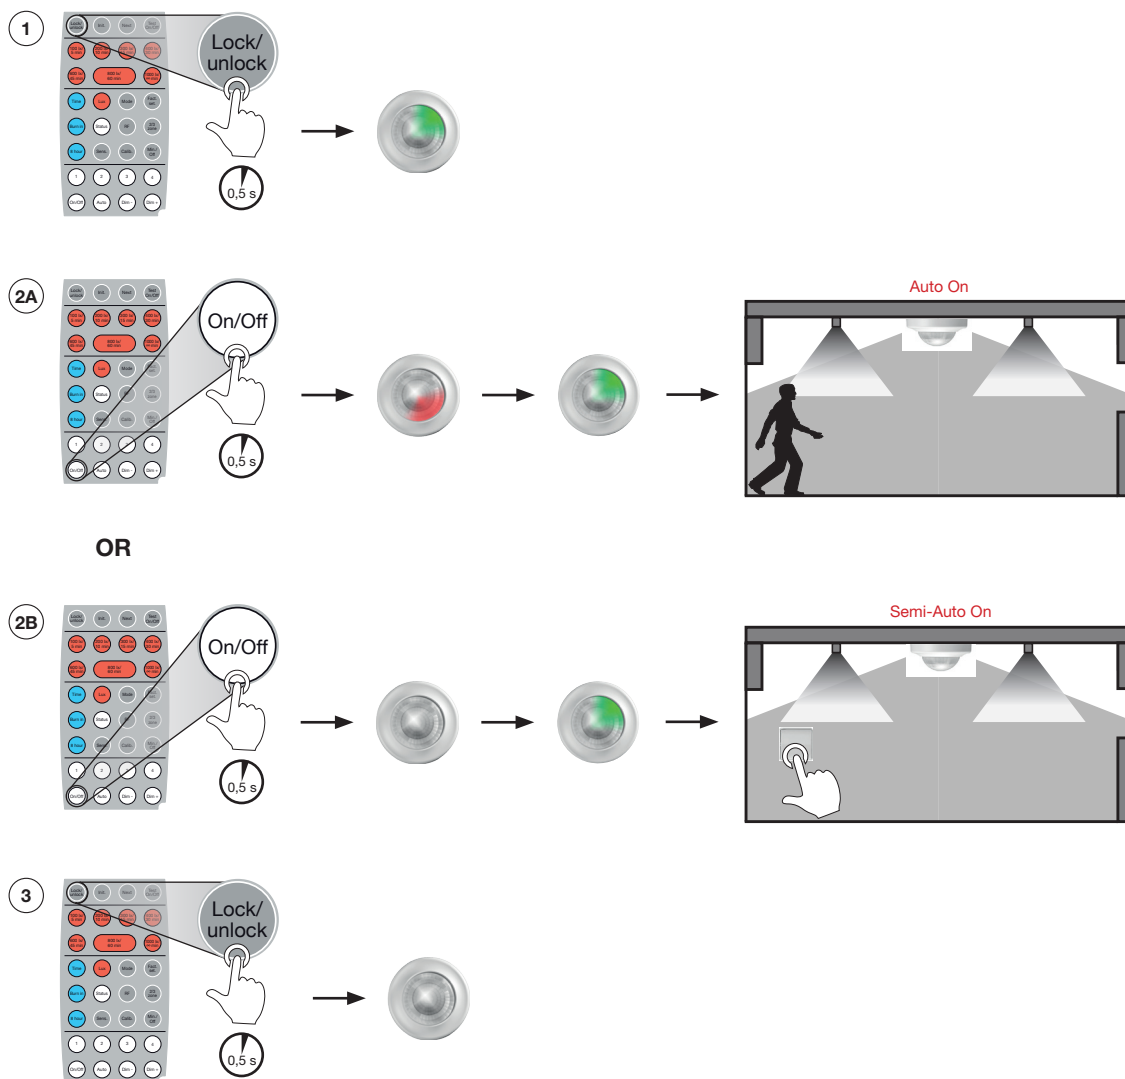 


## 1.7 Select between Auto On or Semi-Auto On (Secondary zone 3)

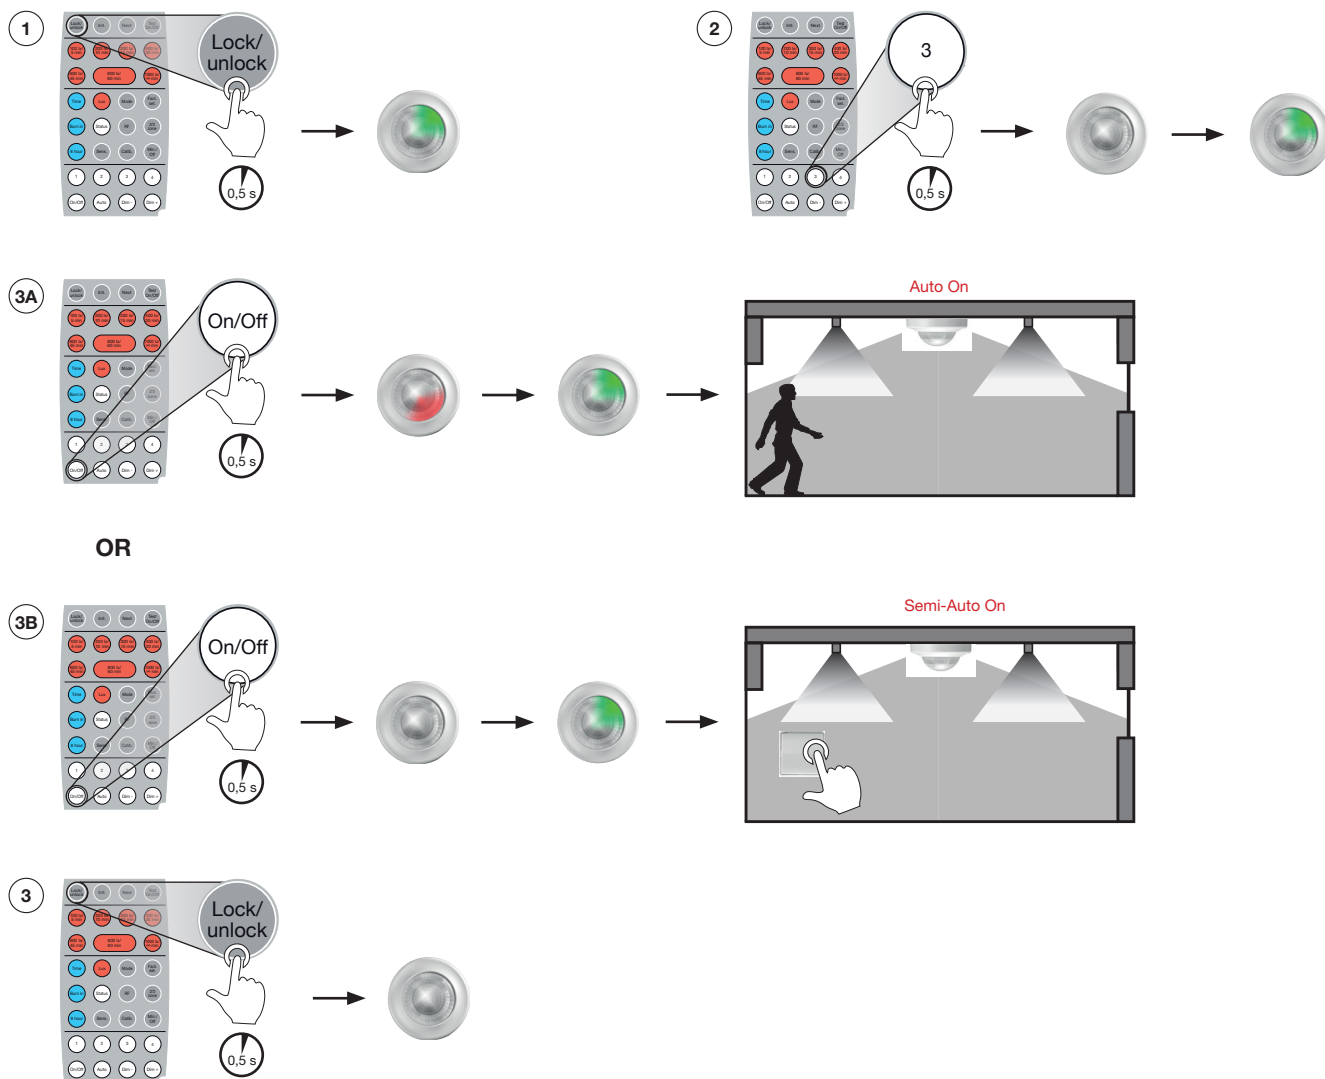 


## 1.8 Select between Auto On or Semi-Auto On (Secondary zone 4)

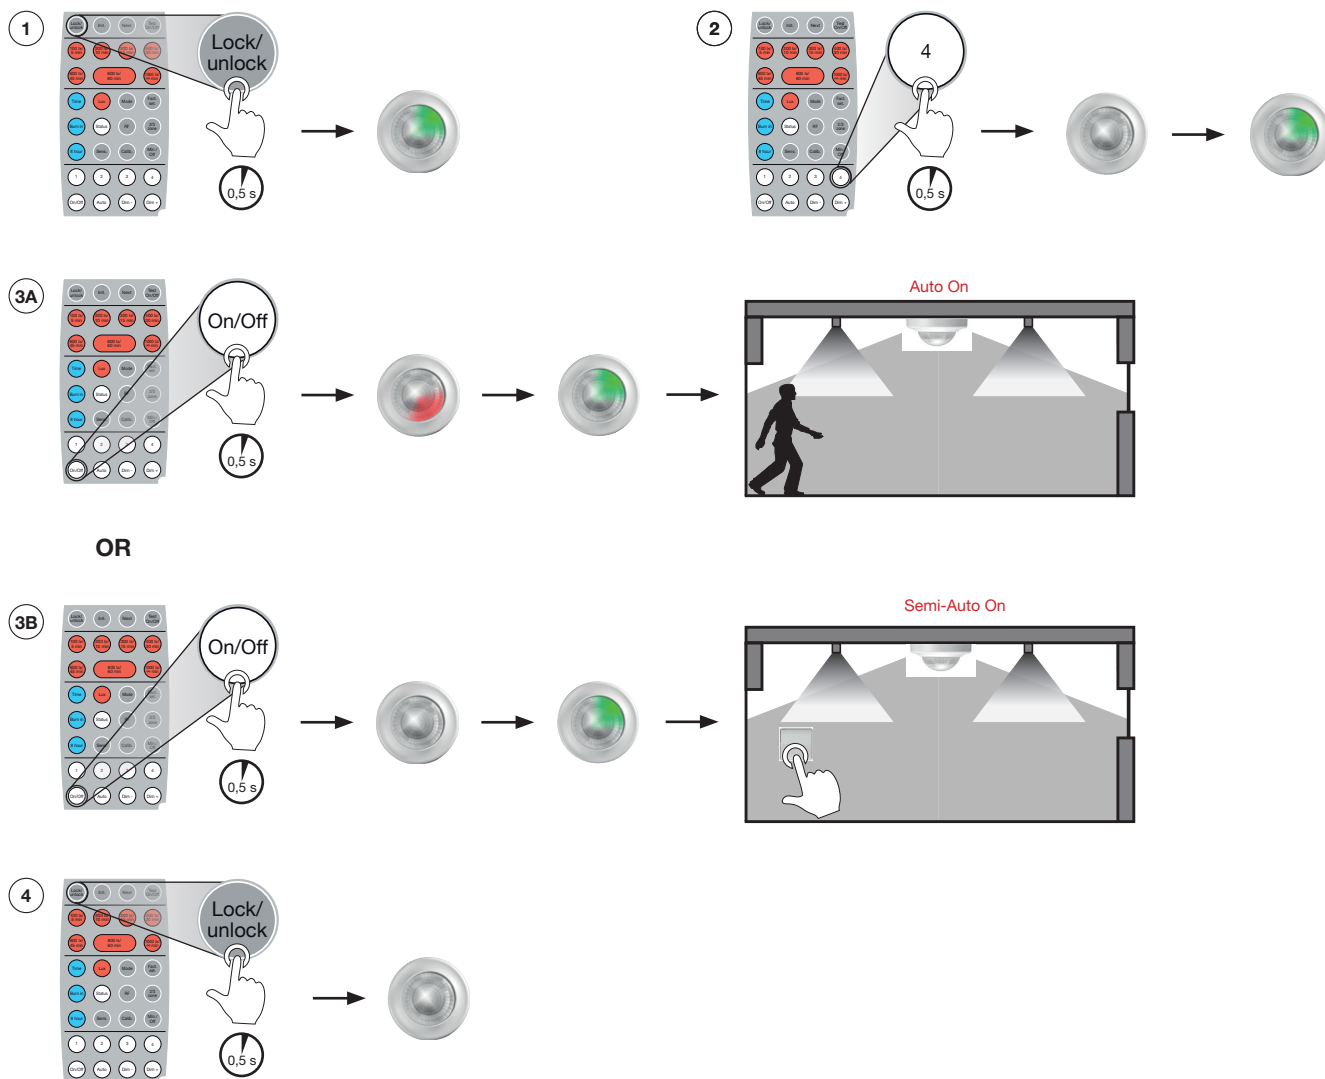 


## 1.9 Select 2 or 3 daylight zones

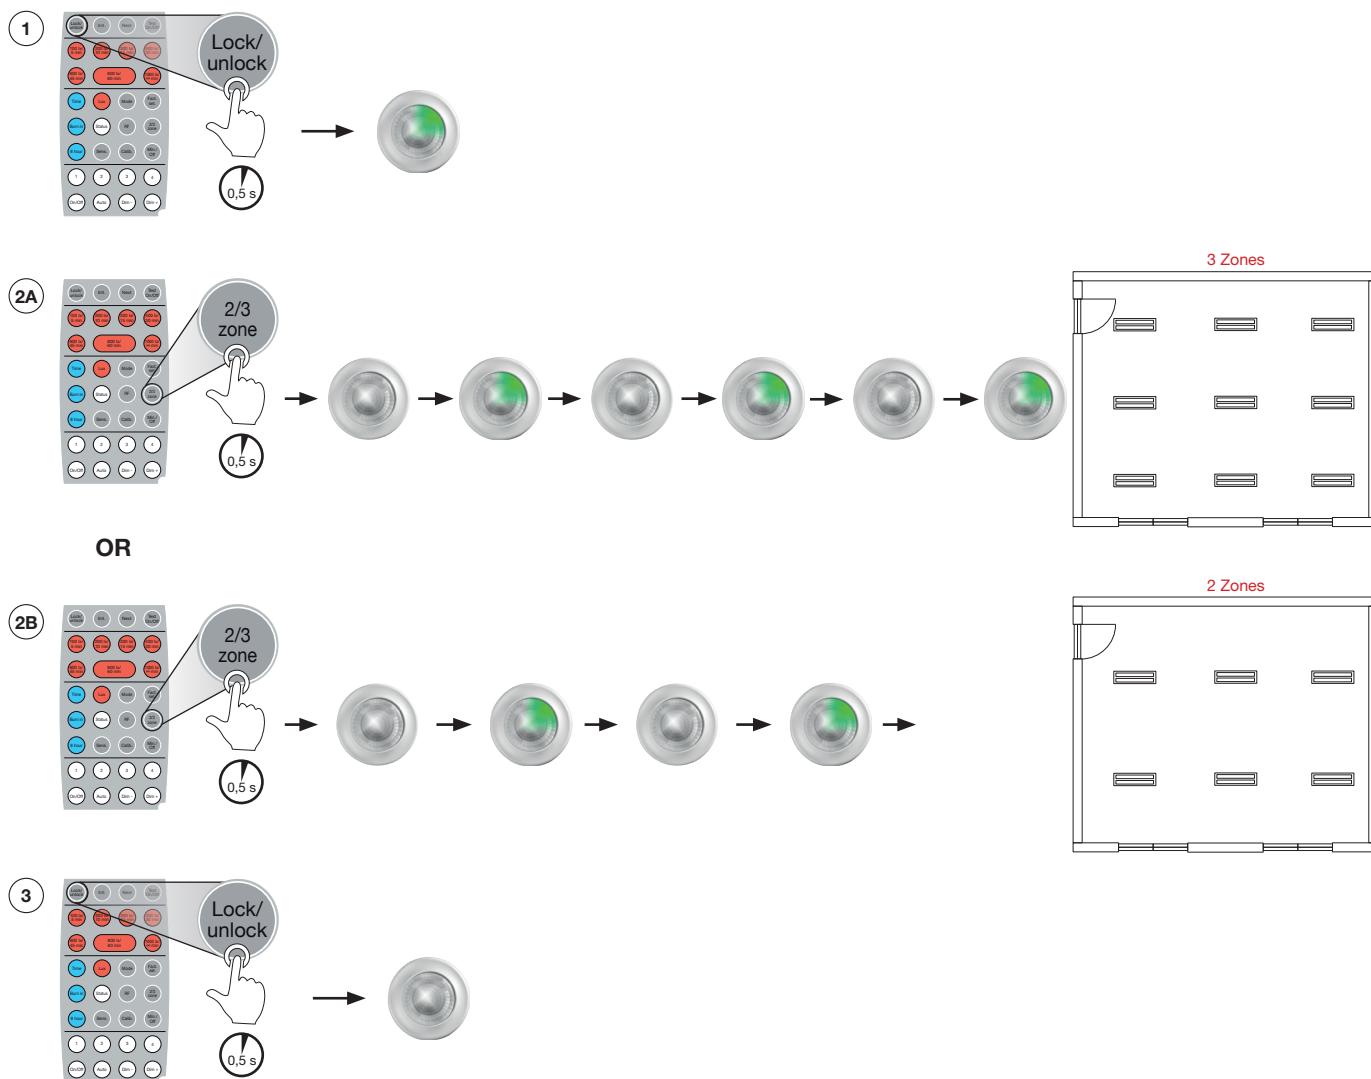 


## 1.10 Select Minimum or Off, daylight zones

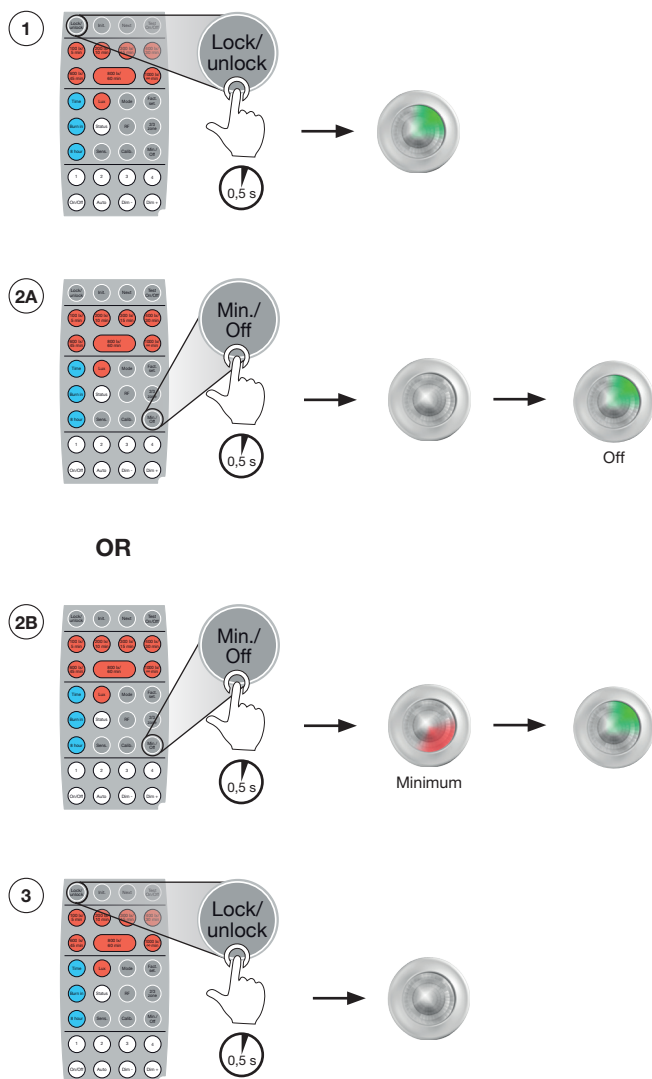 


## 1.11 Lux setpoint

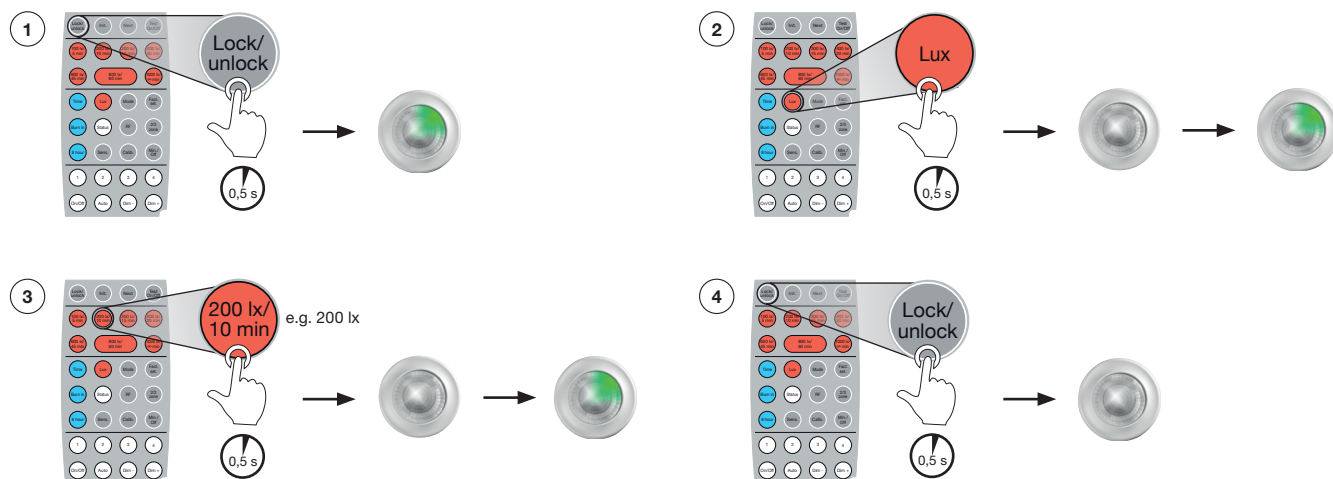 

## 1.12 Adjust lux level for individual daylight zones

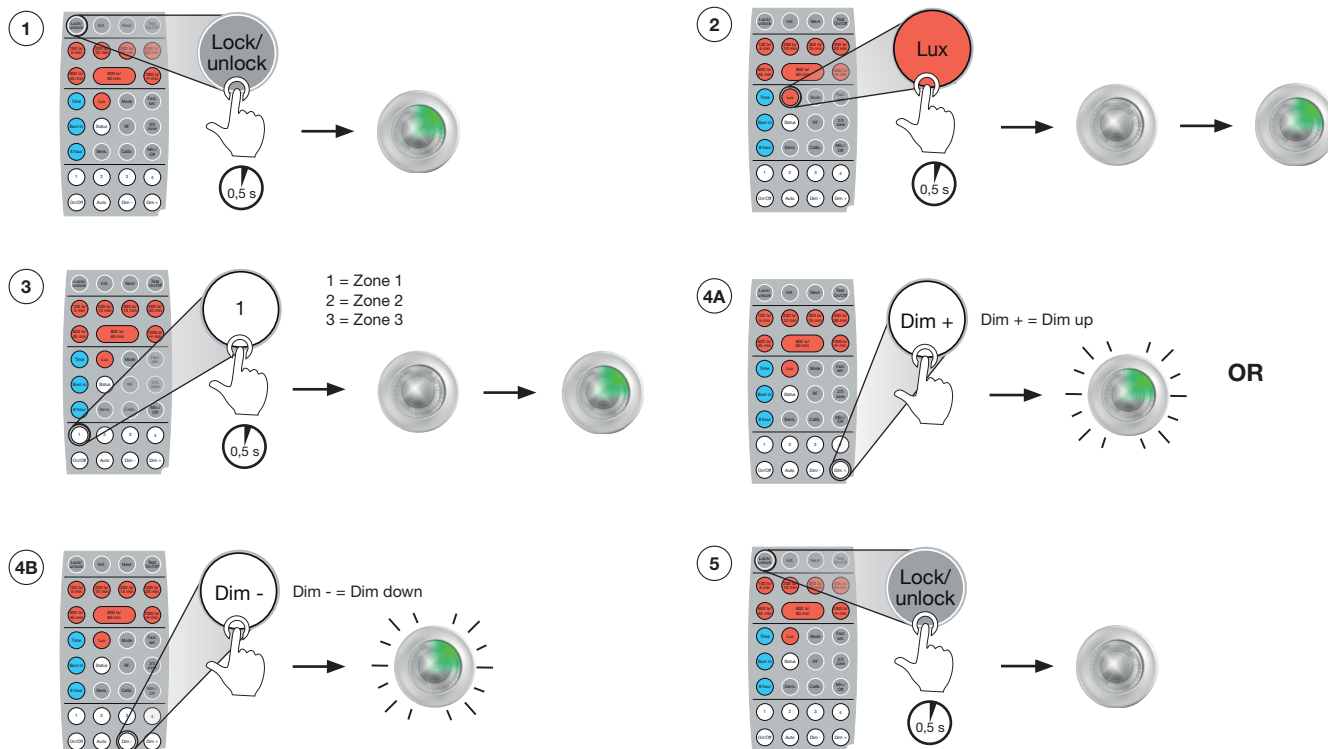 


## 1.13 Lux setpoint 2000 lx

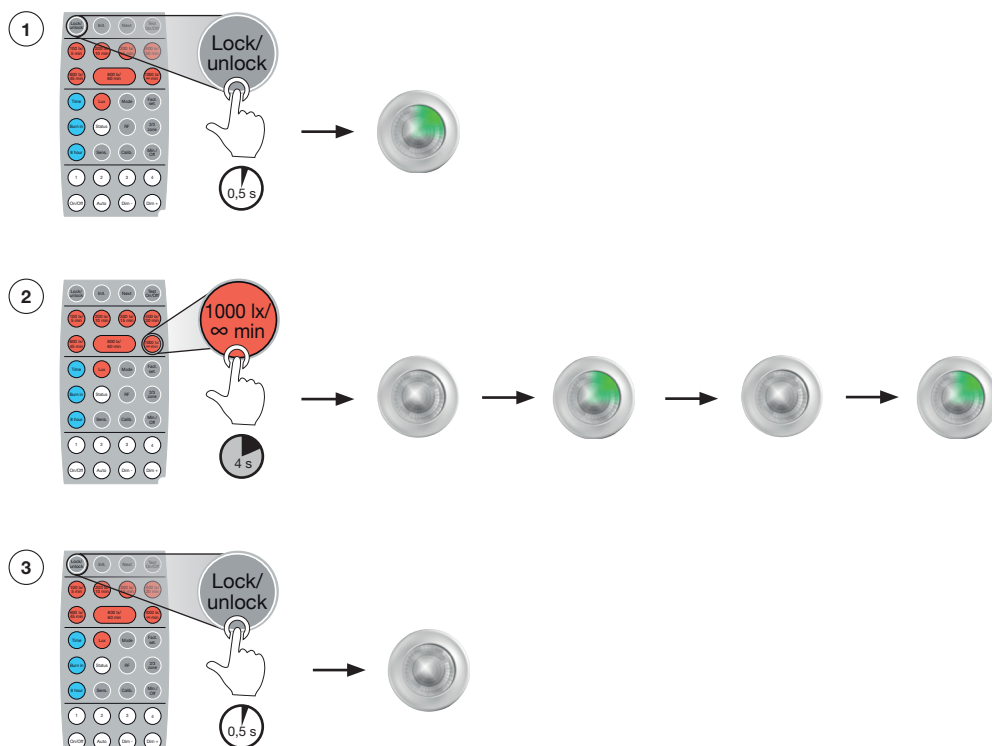 





## 1.14 Adjust standby-light level

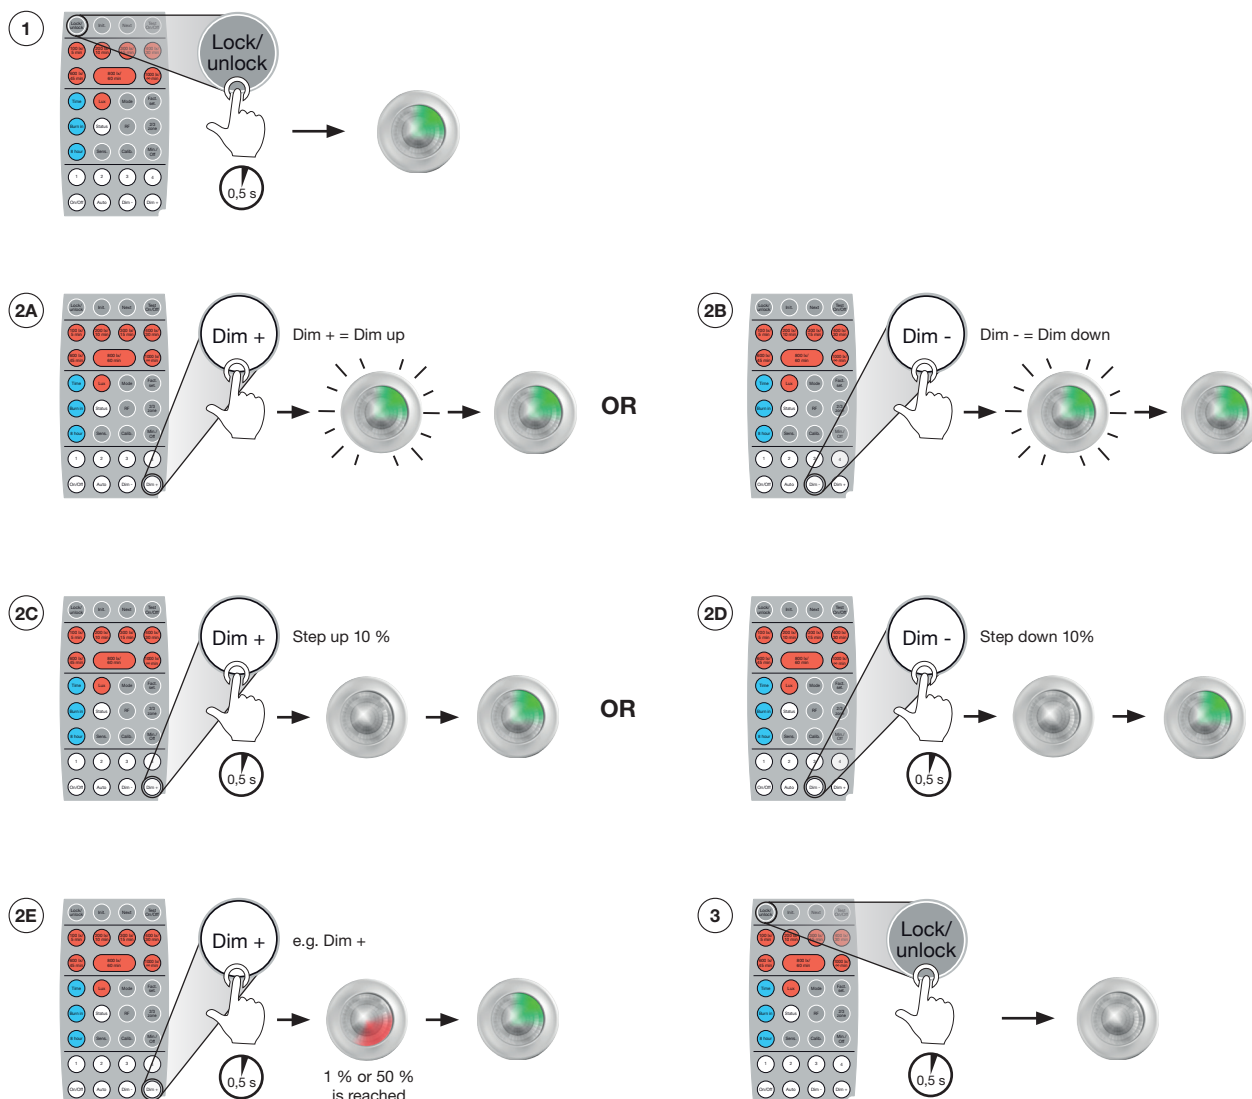 


## 1.15 Time 1 – Off delay timer

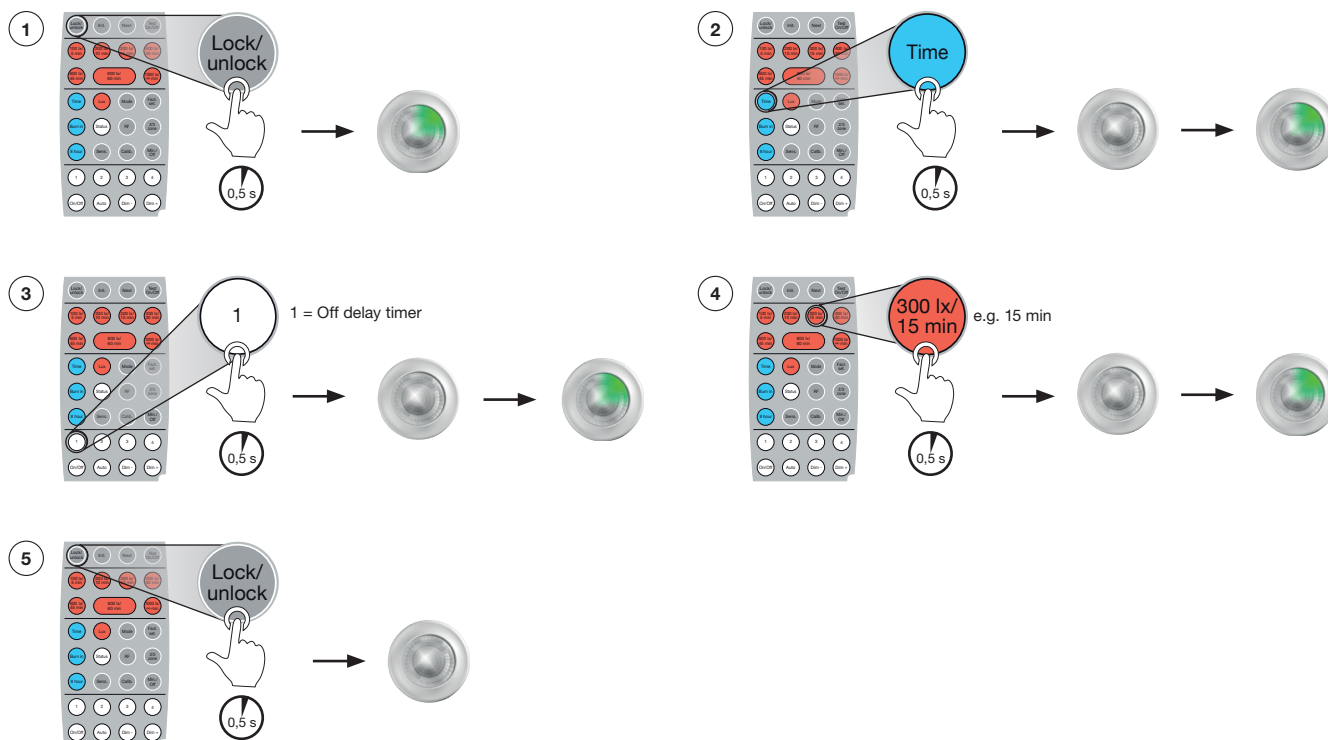 


## 1.16 Time 2 – HVAC timer:

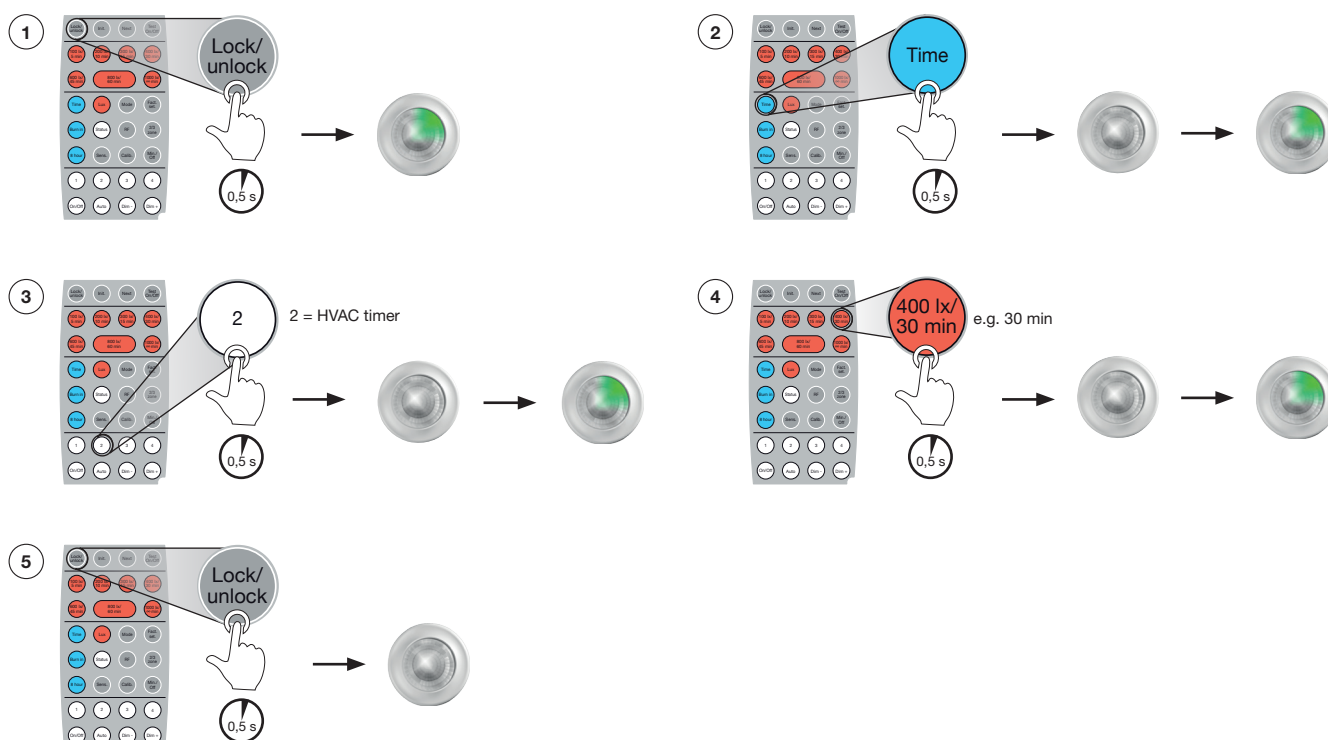 


## 1.17 Time 3 – Cut-off timer

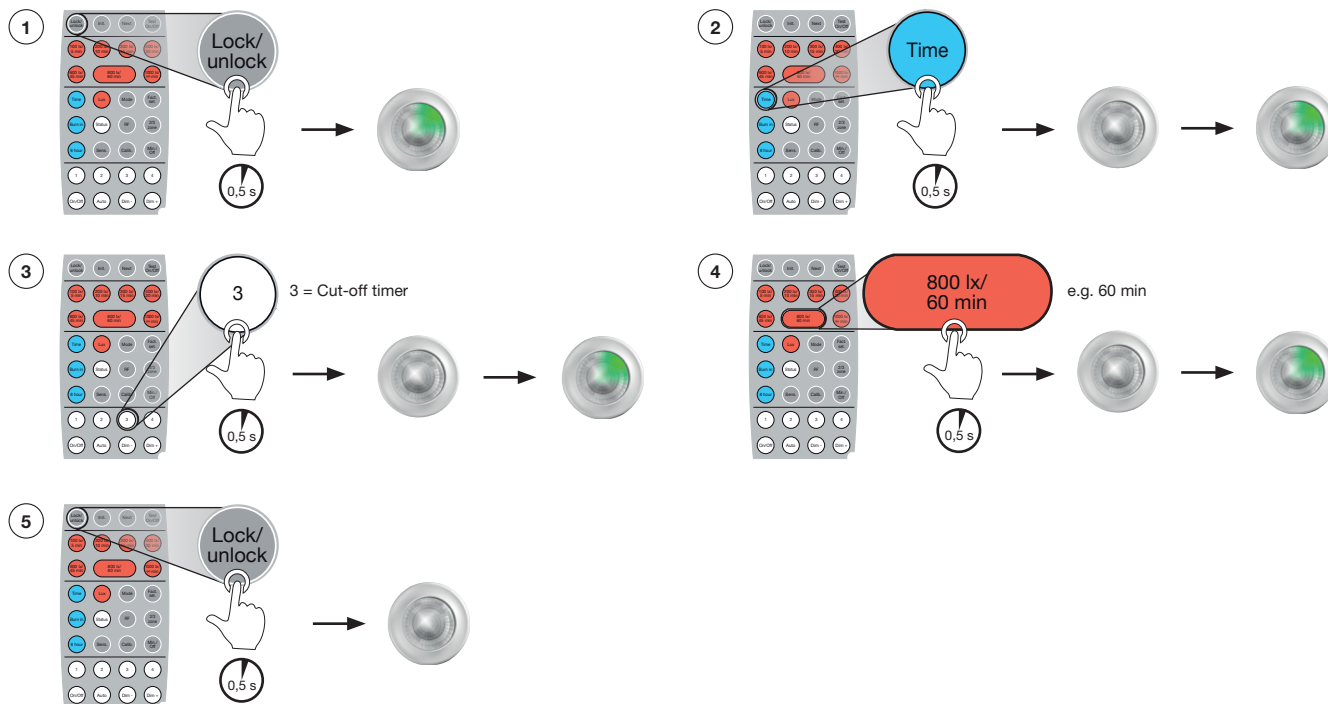 


## 1.18 Time 4 – Orientation light's timer

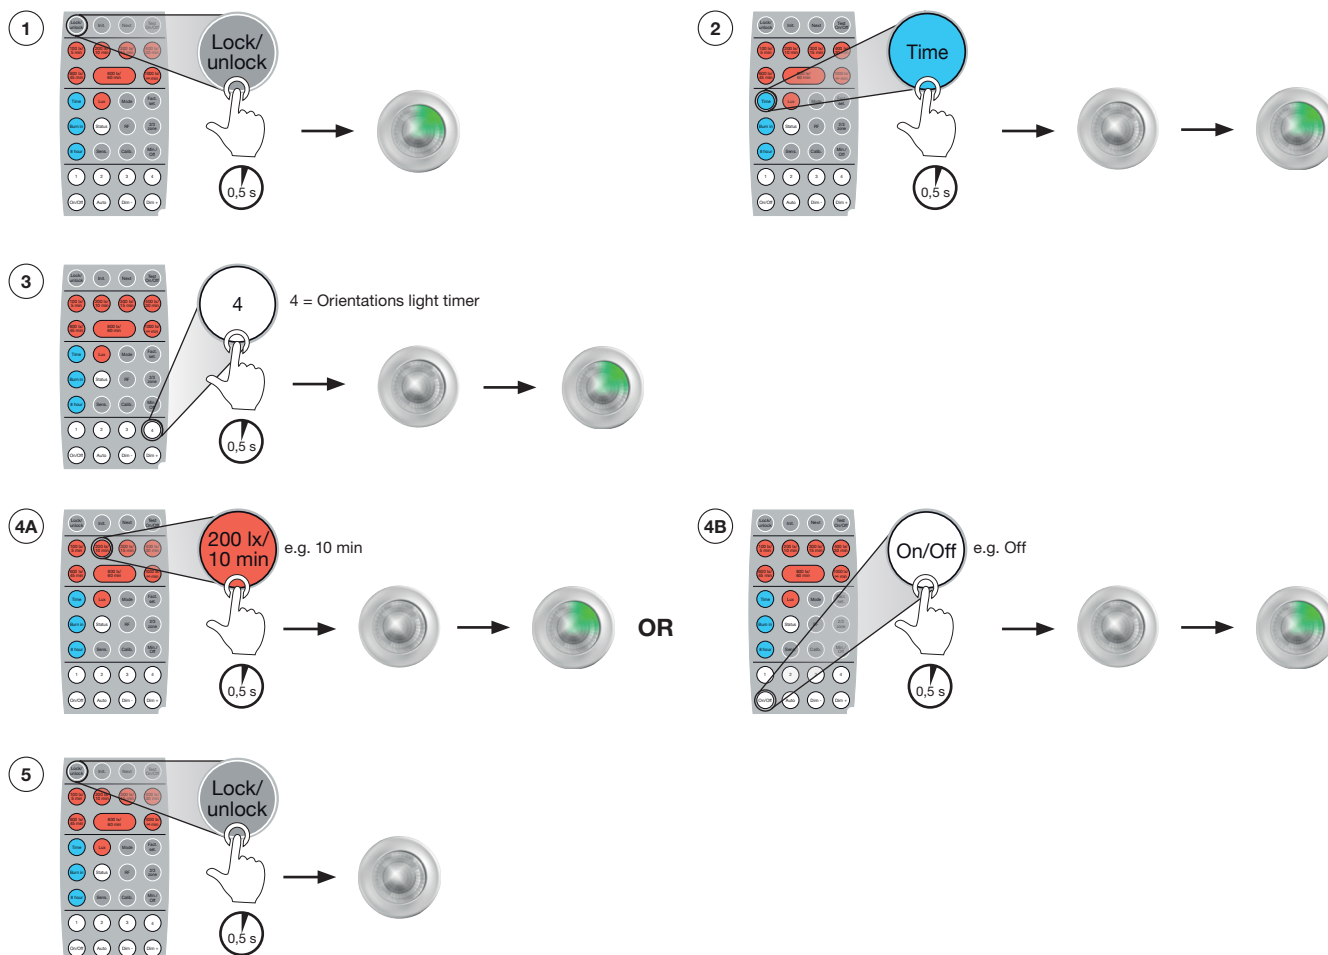 


## 1.19 Max illumination output (Step 1.11 must be done first)

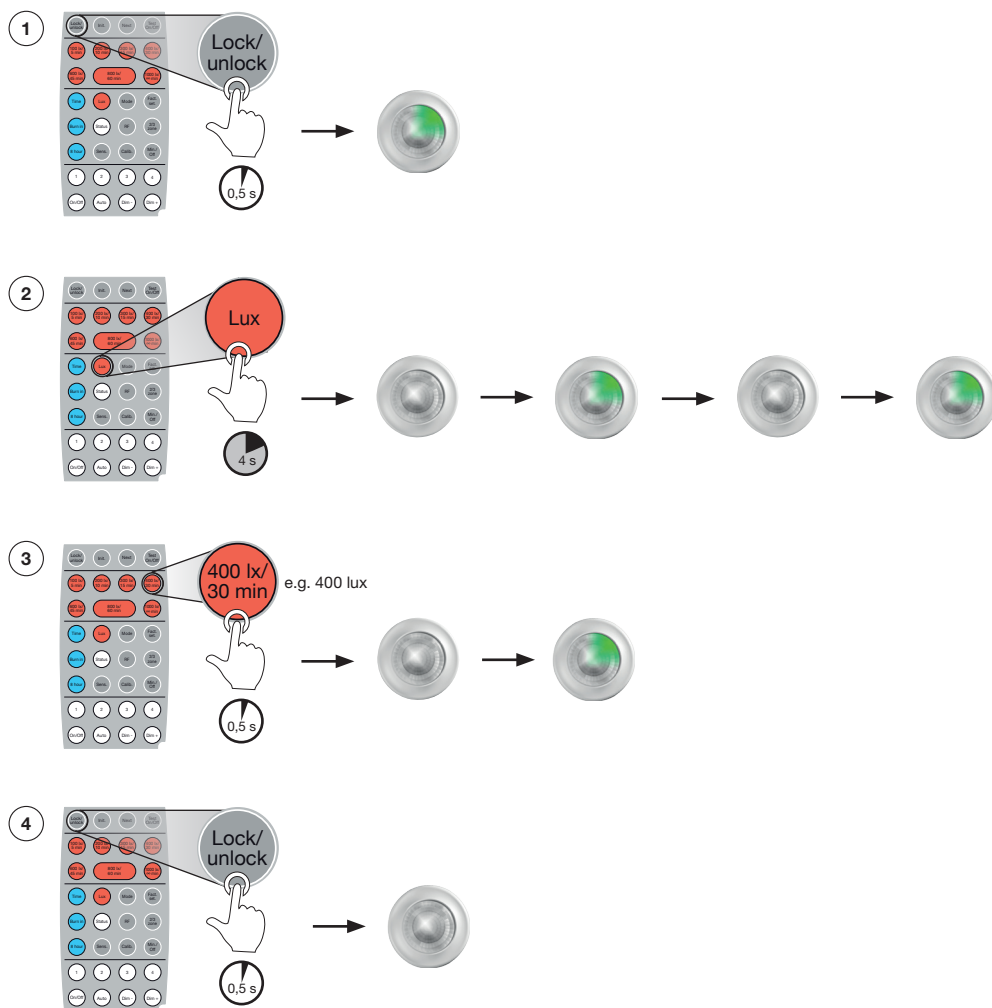 


## 1.20 Enable burn-in

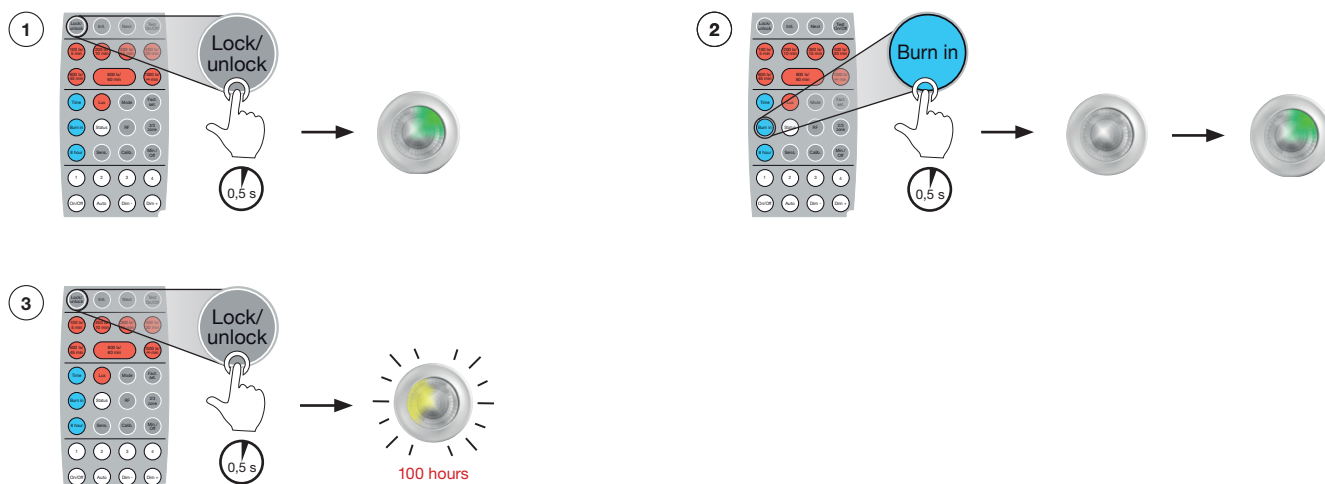 


## 1.21 Disable burn-in

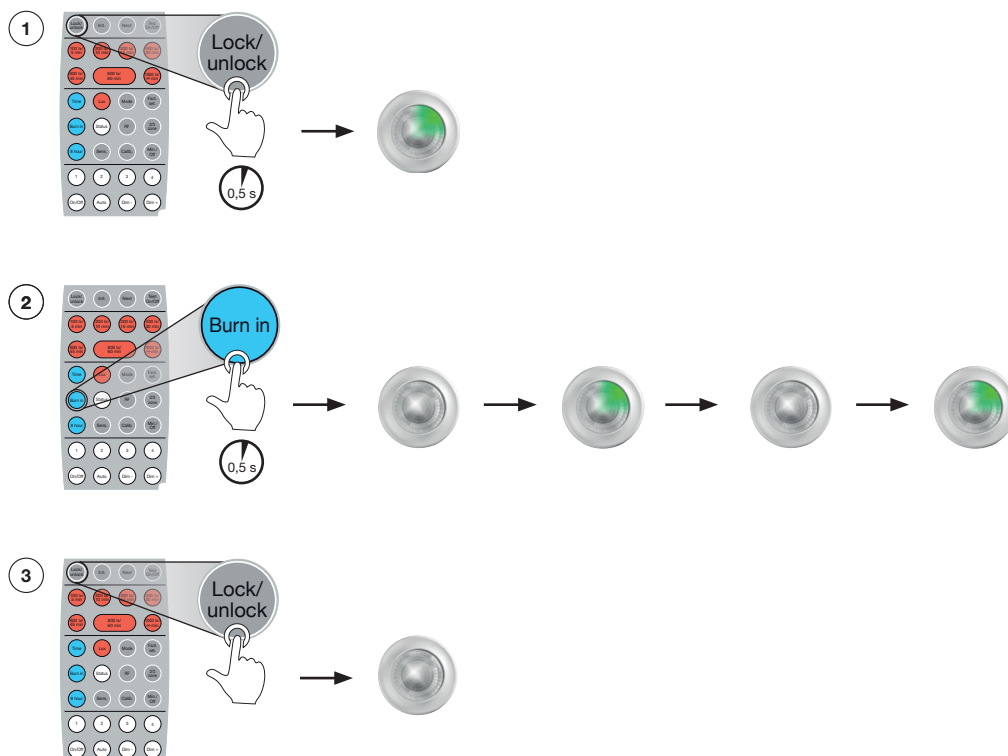 


## 1.22 Select sensitivity (all sectors - A, B and C)

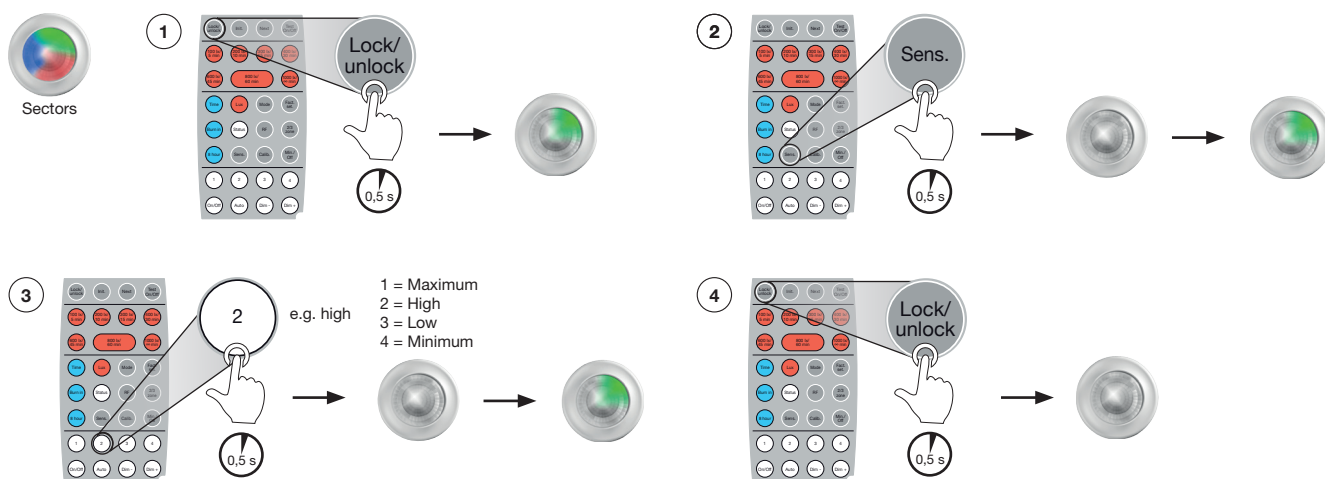 


## 1.23 Select sensitivity in sector A (red)

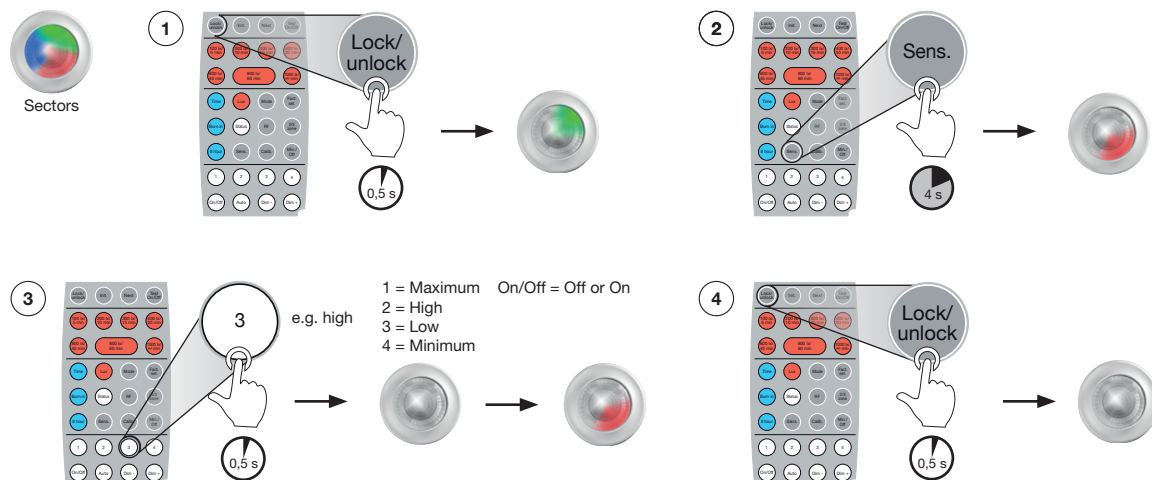 


## 1.24 Select sensitivity in sector B (green)

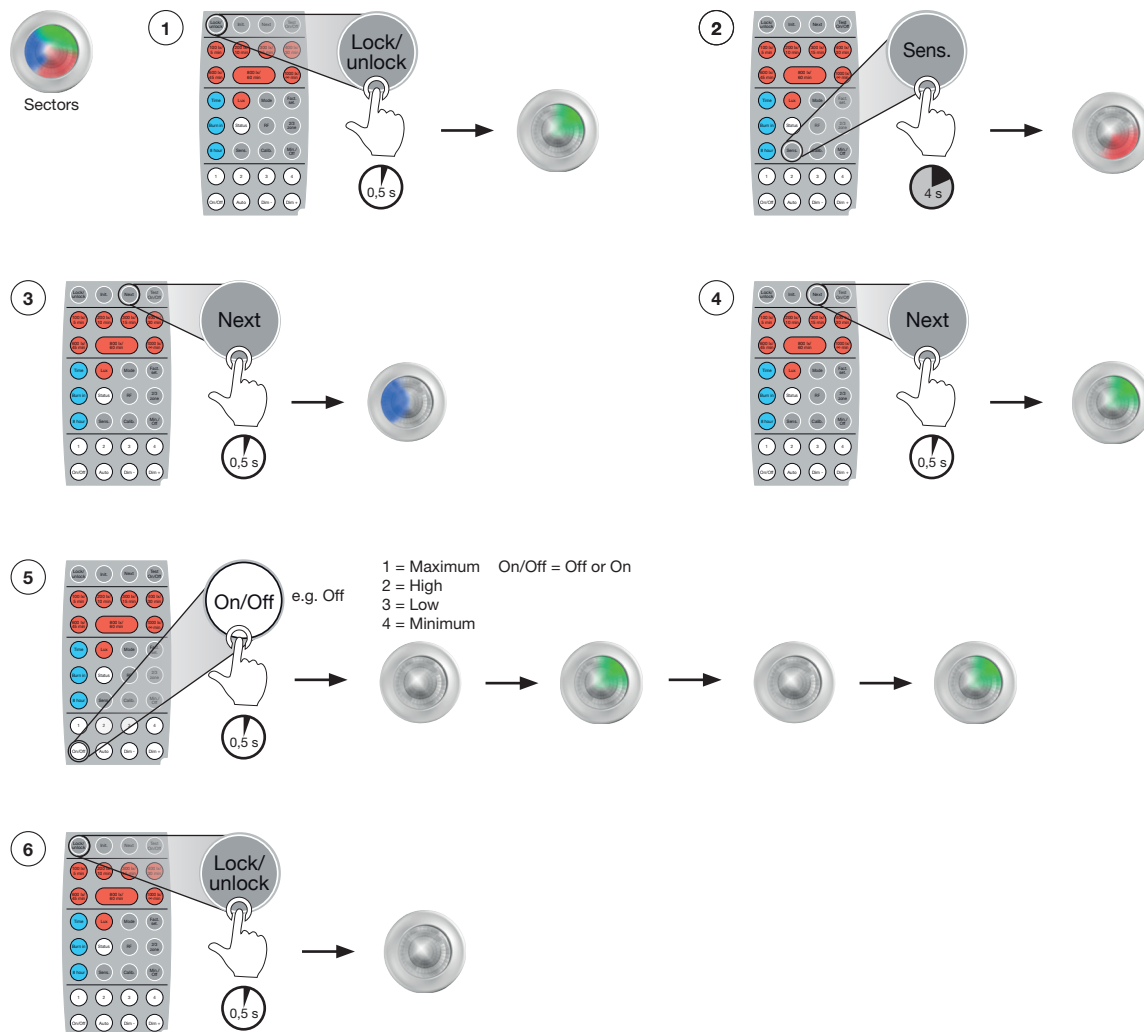 

## 1.25 Select sensitivity in sector C (blue)

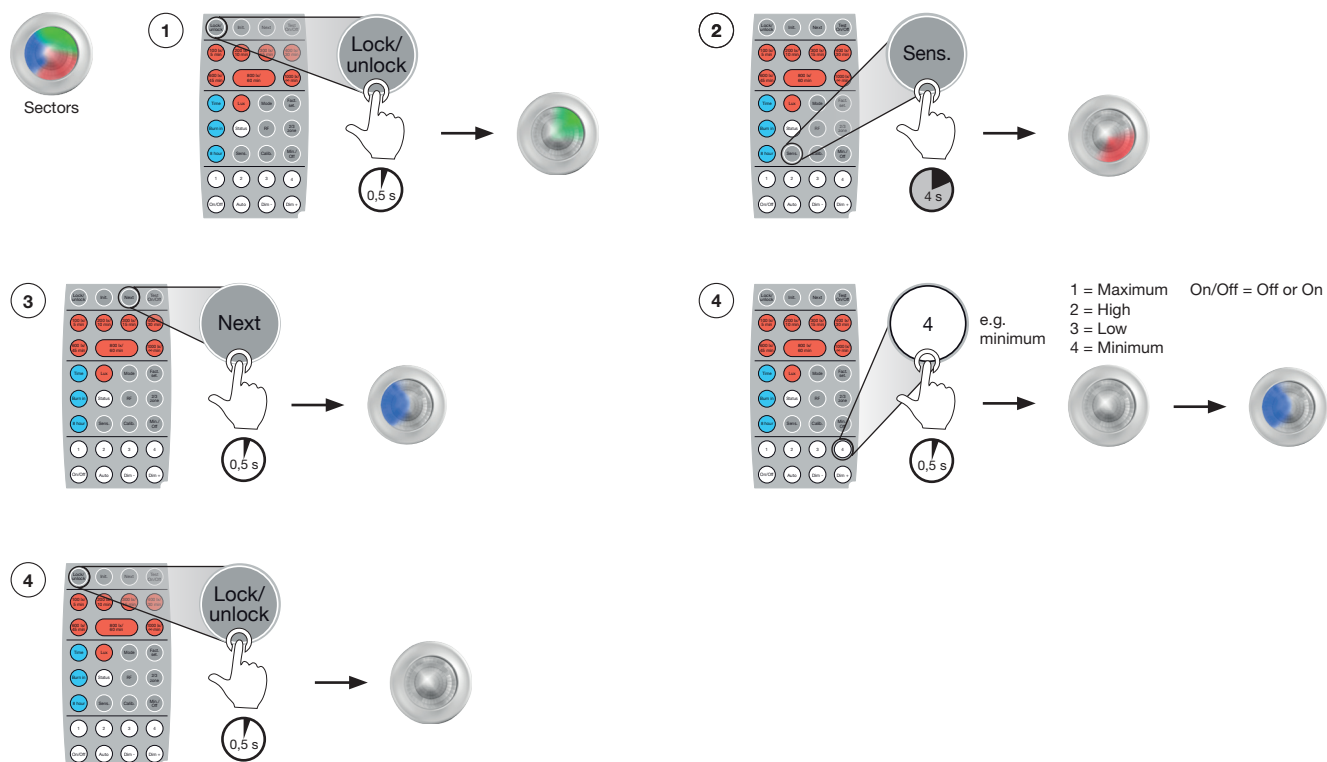 


## 1.26 Enable constant HVAC output (8 hours)

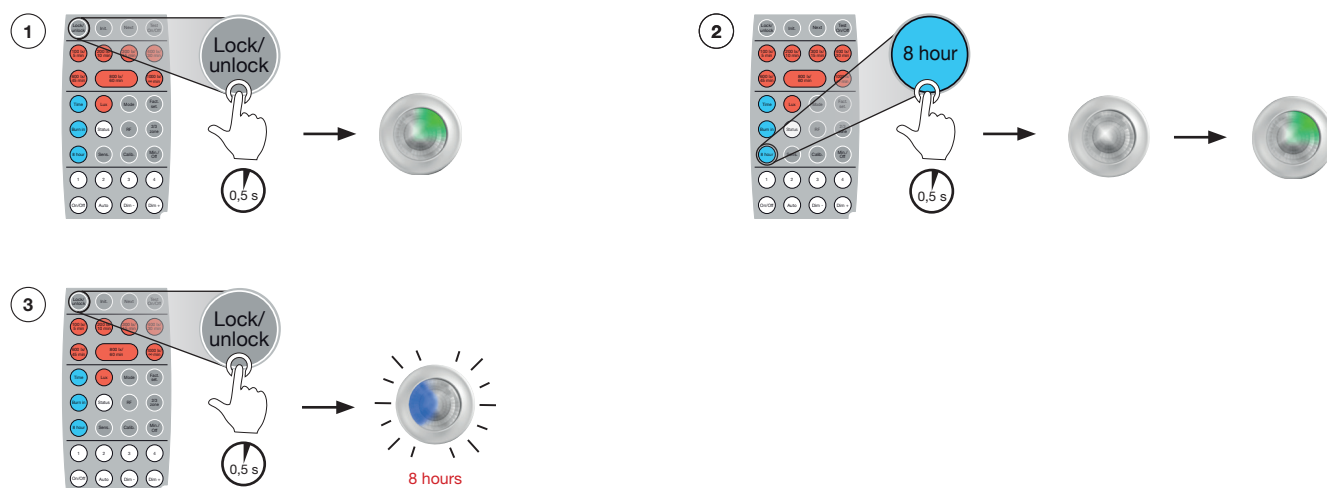 





## 1.27 Disable constant HVAC output

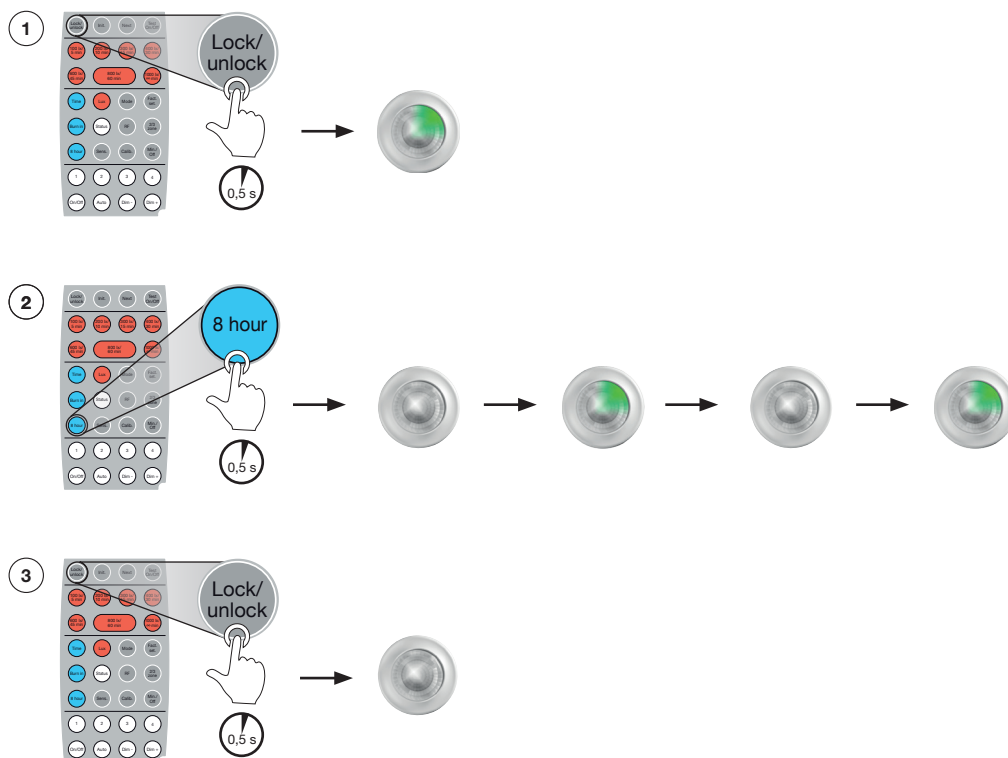 


## 1.28 Walk test

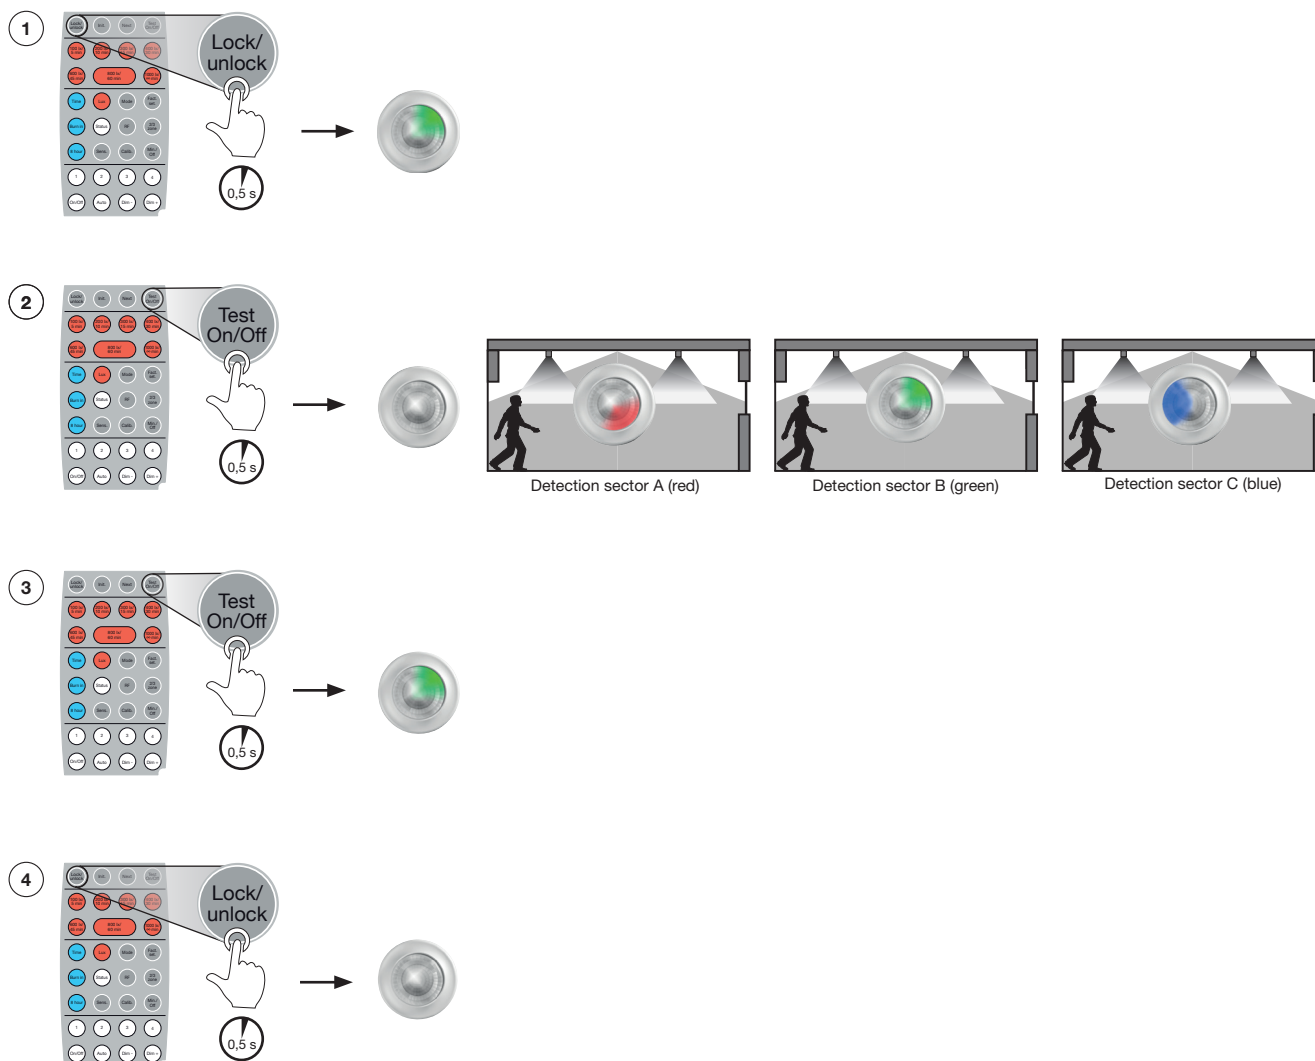 


## 1.29 Program new daylight calibration

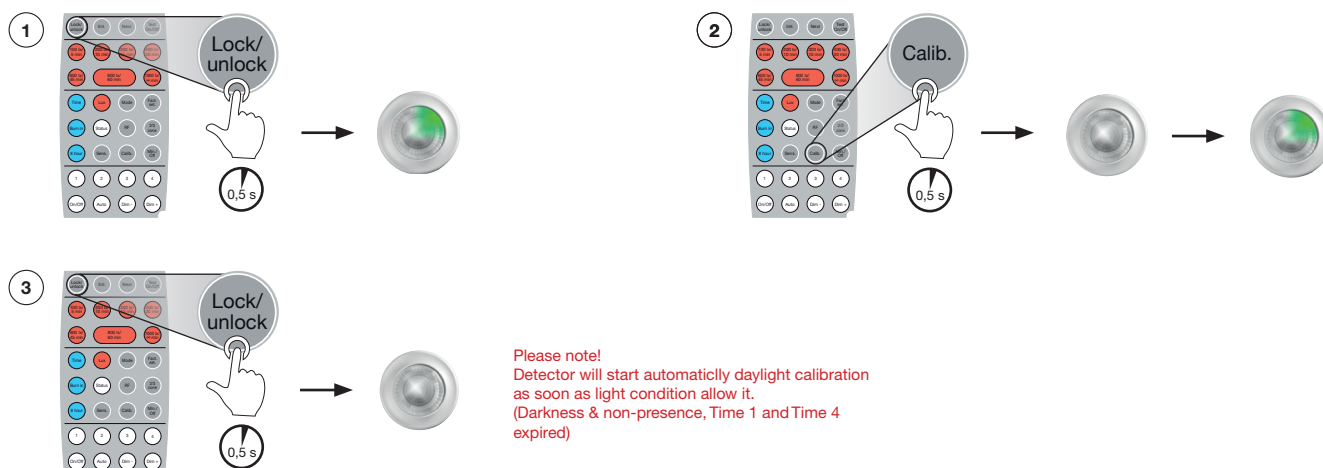 


### 1.30 Reset to factory settings

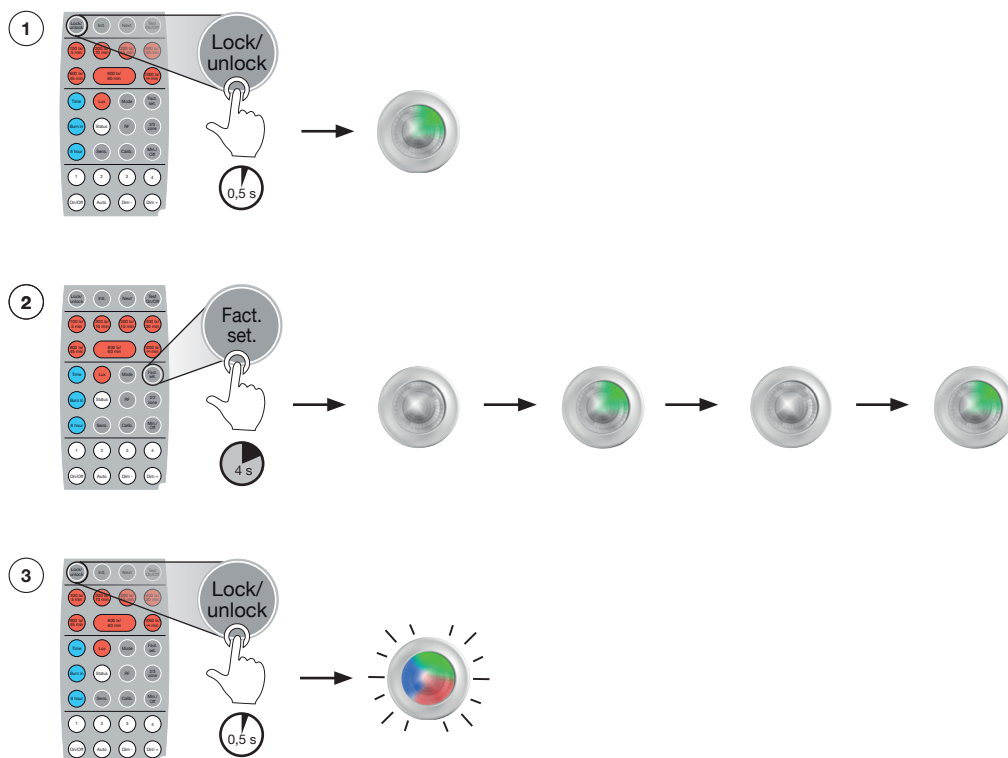 


### 1.31 Program multi-zone (only Mode 1,2,3)

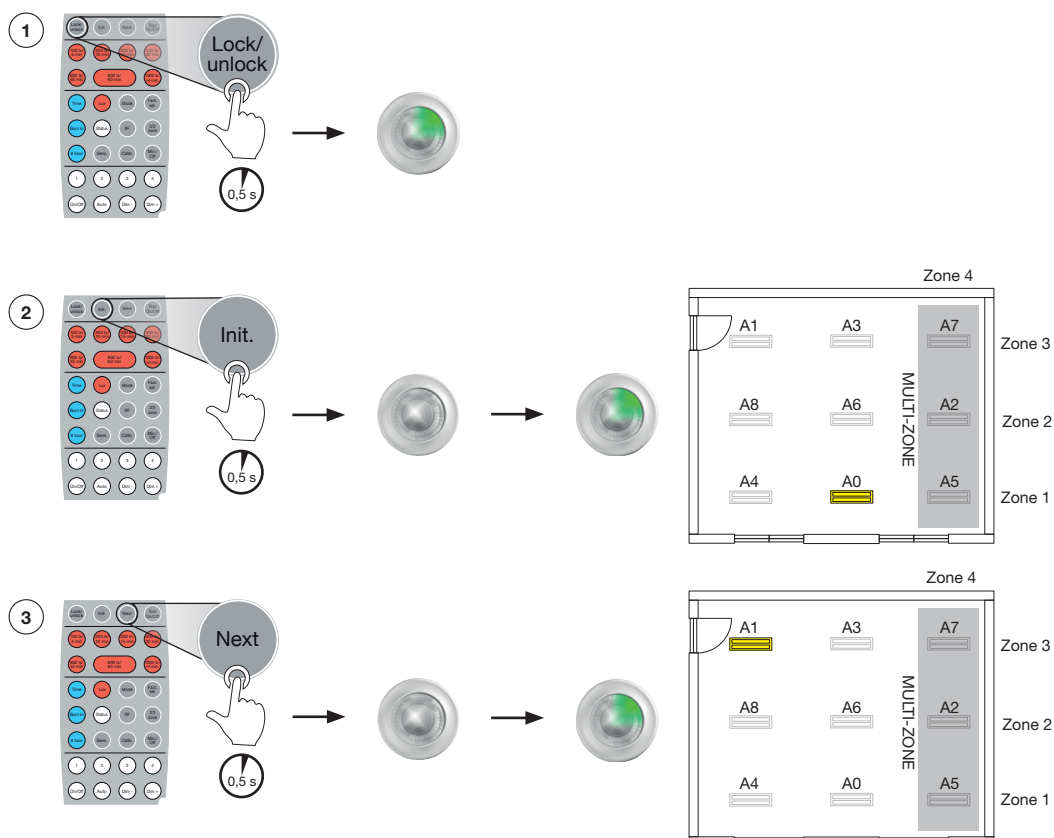 


## 1.31 Program multi-zone

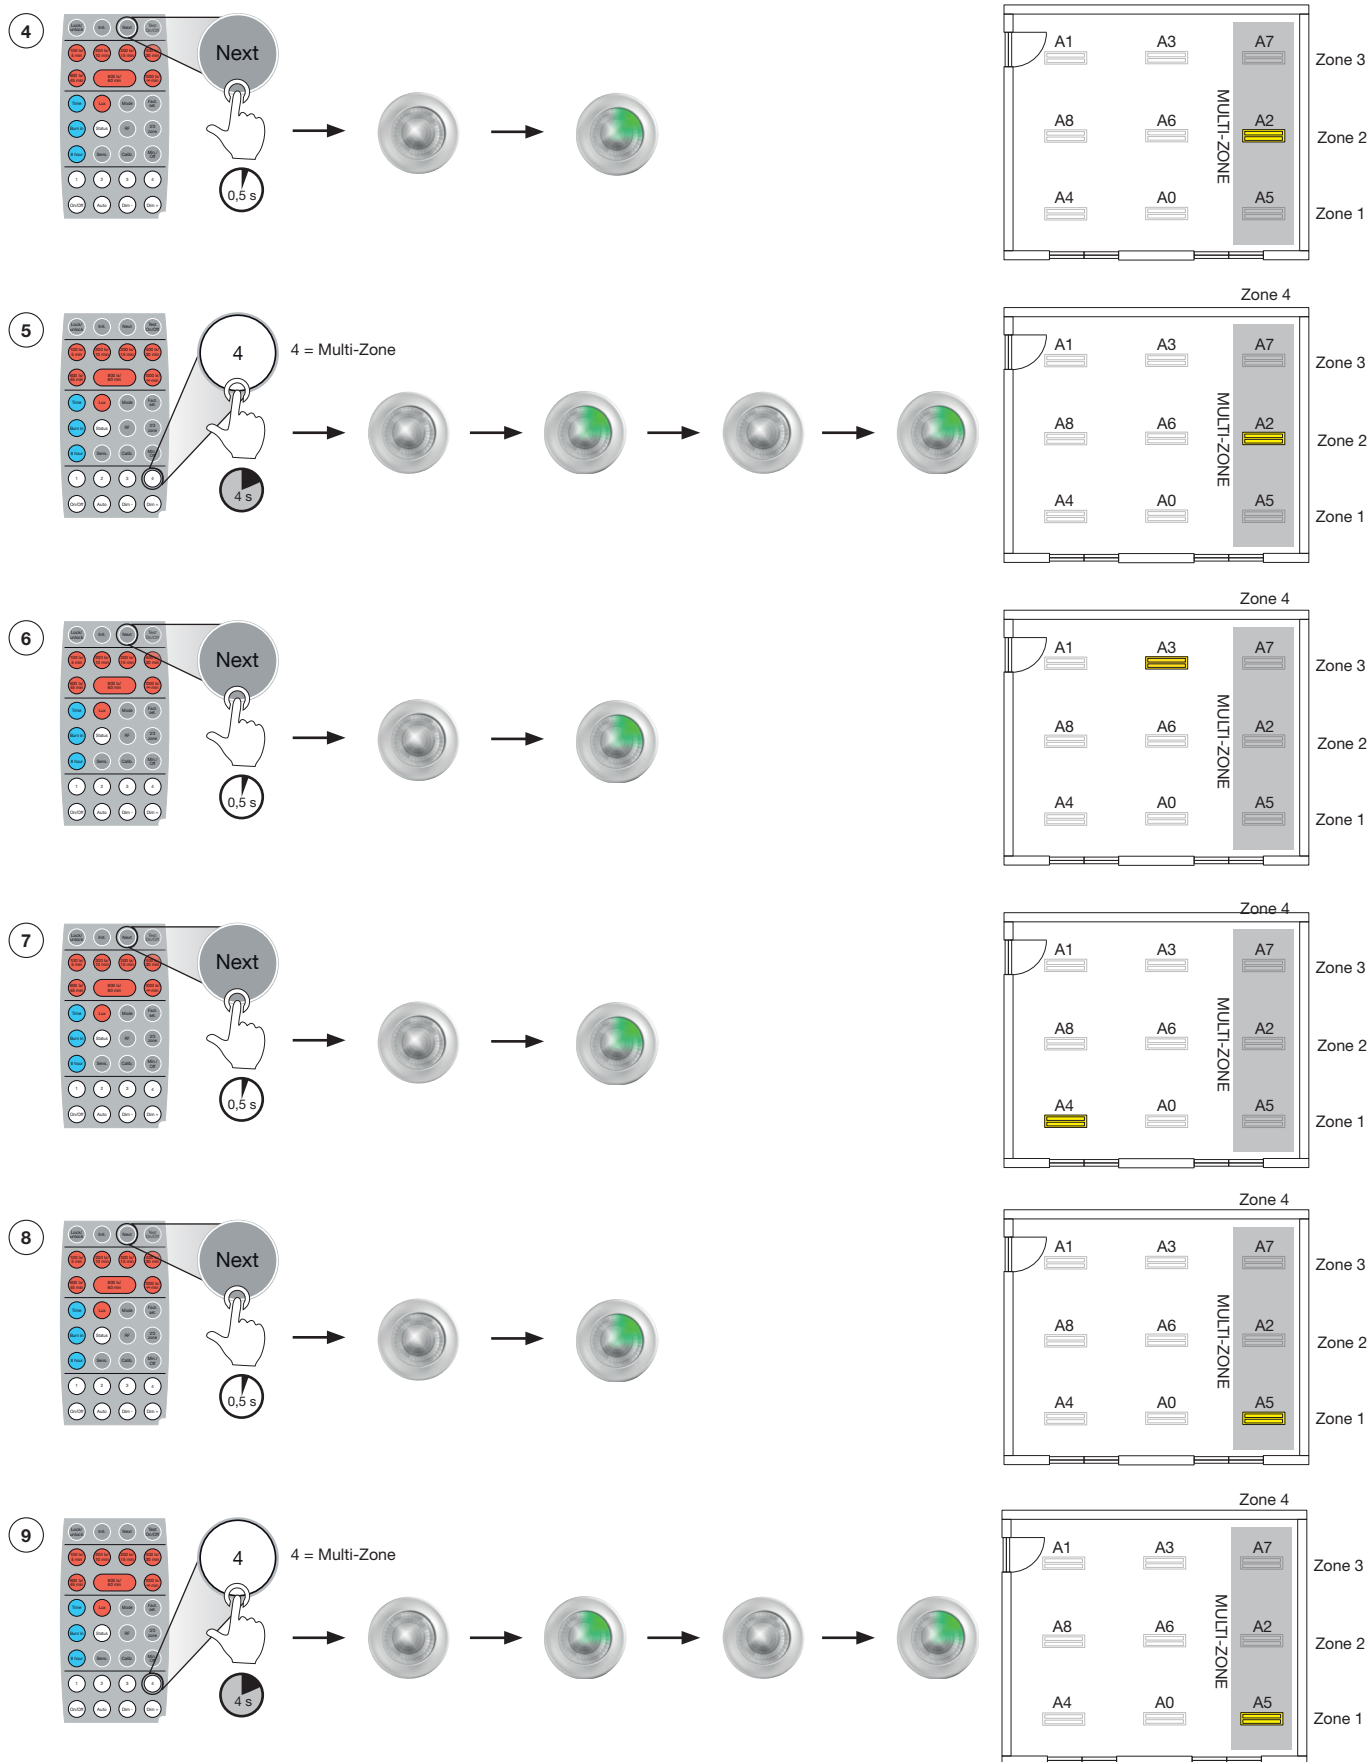 













## 1.31 Program multi-zone

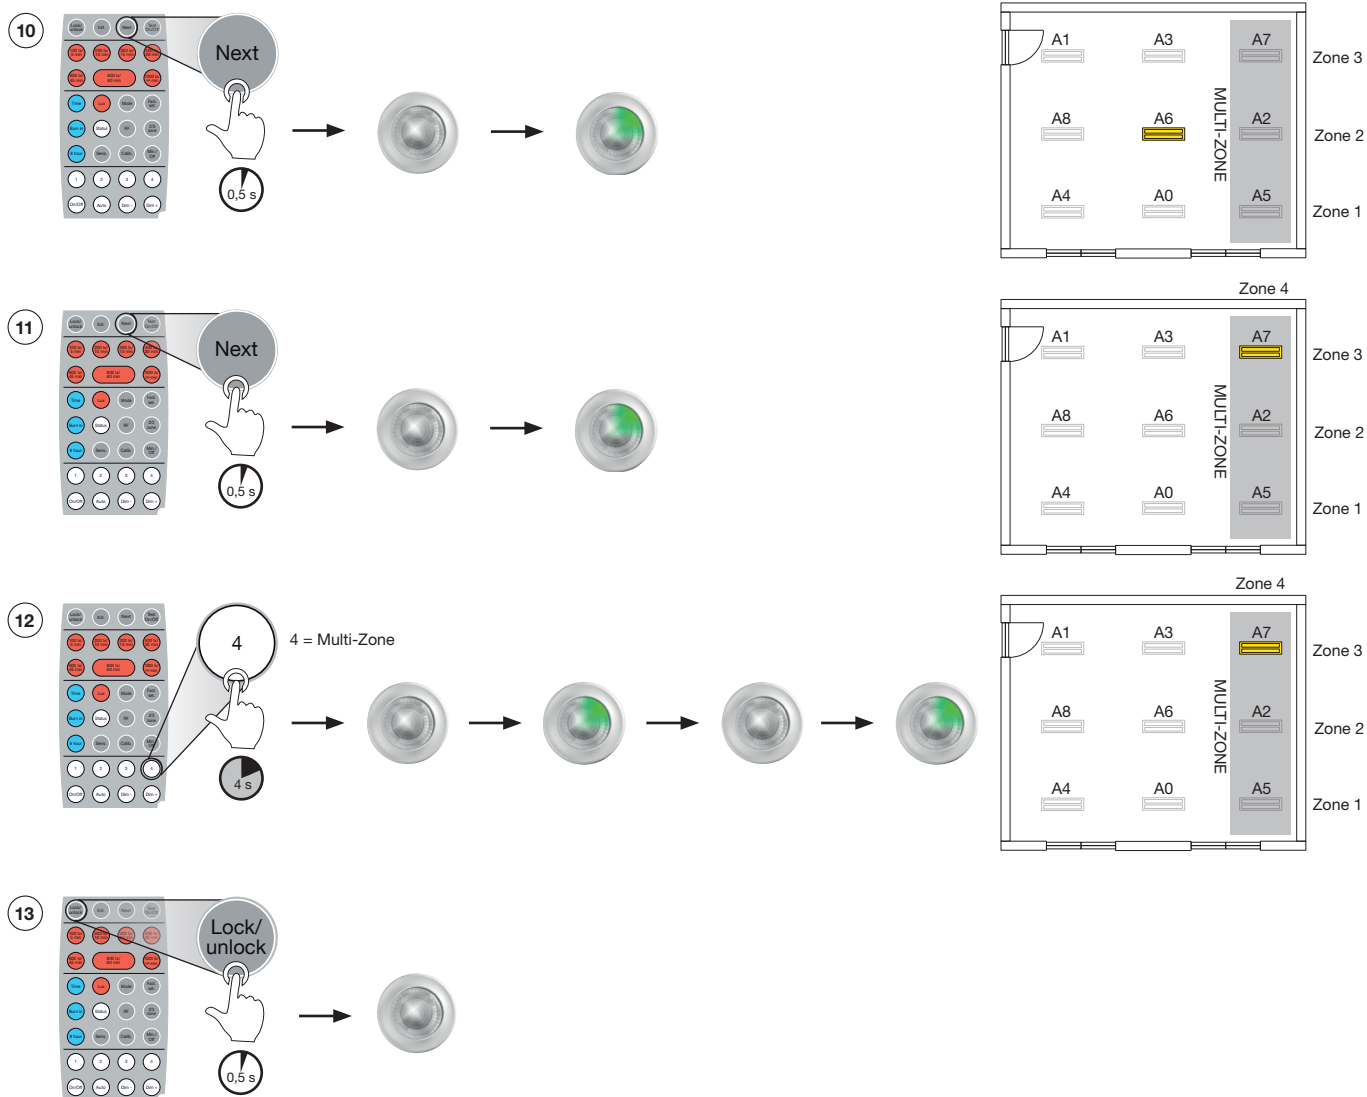 










## 1.32 Remove luminaires from multi-zone

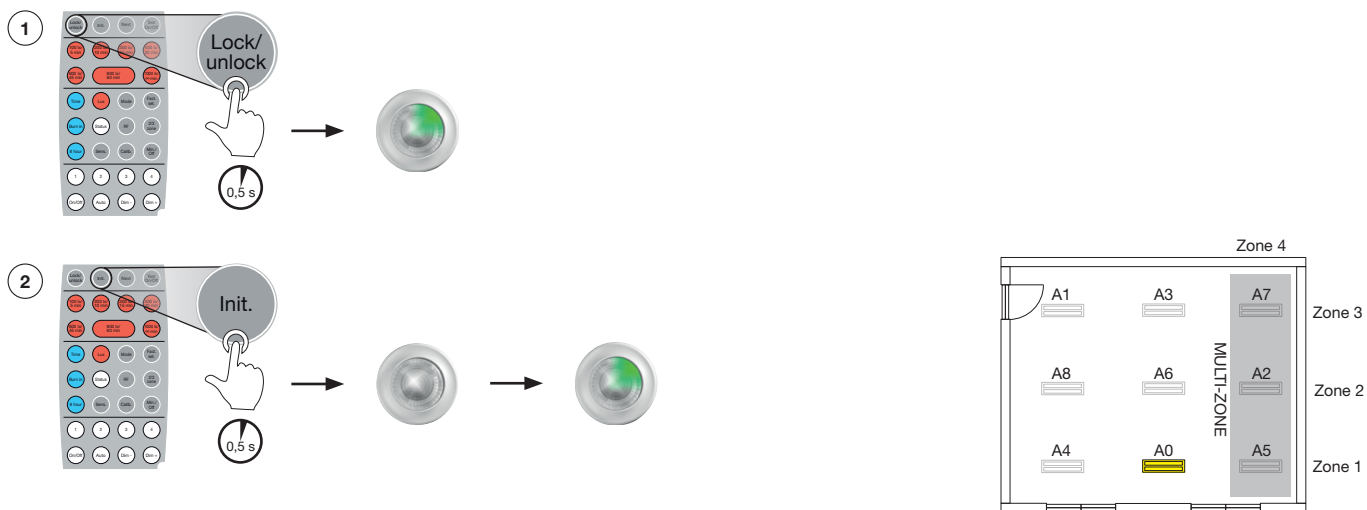 

## 1.32 Remove luminaires from multi-zone

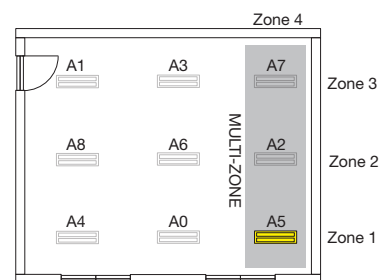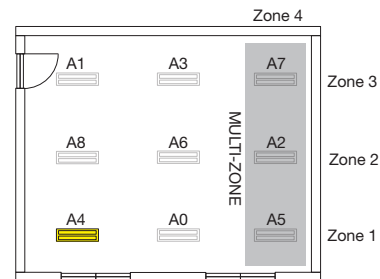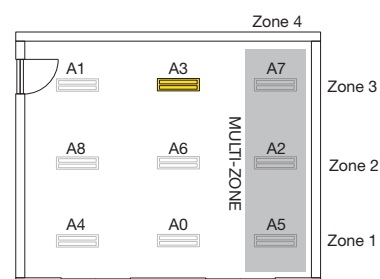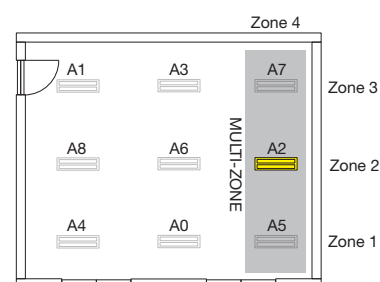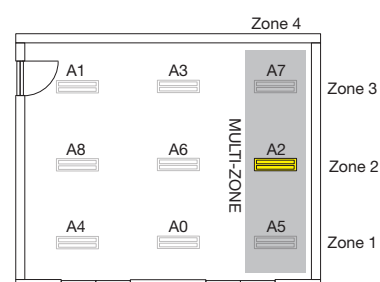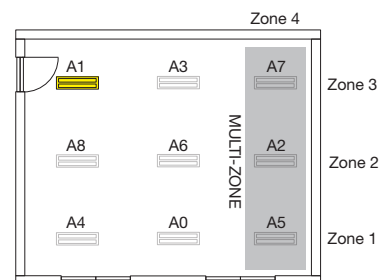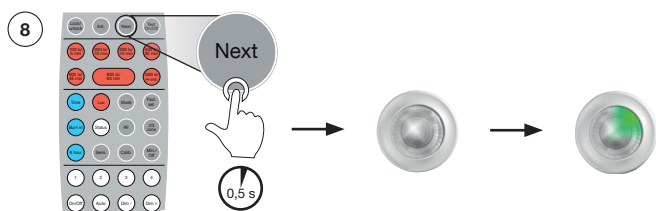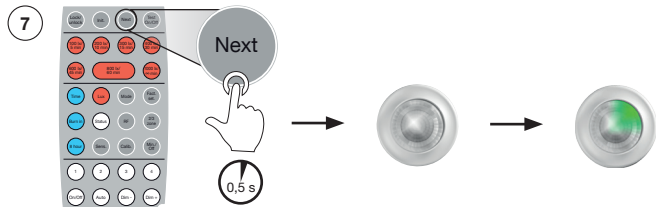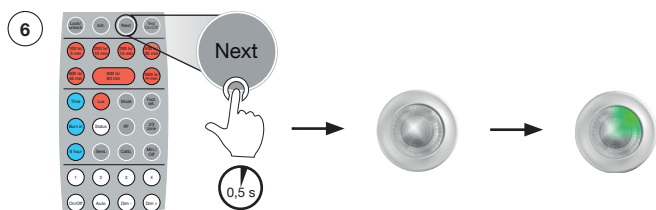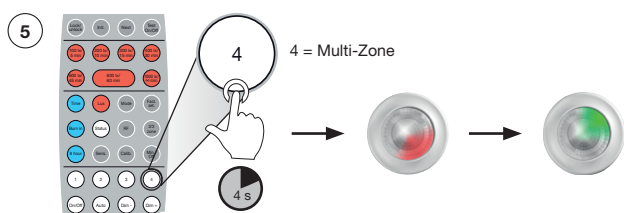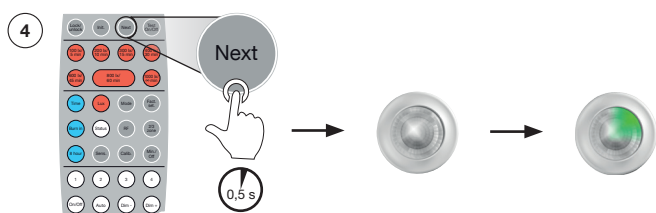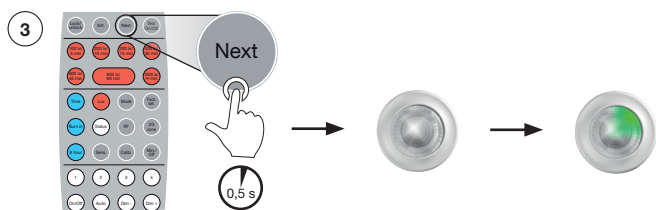            


## 1.32 Remove luminaires from multi-zone

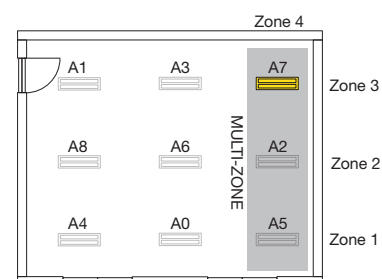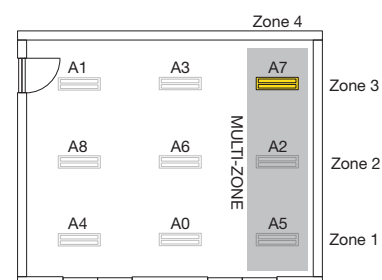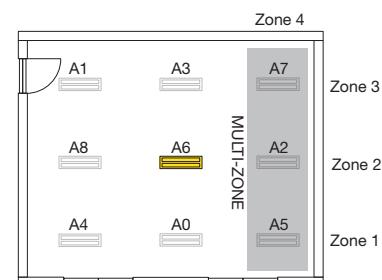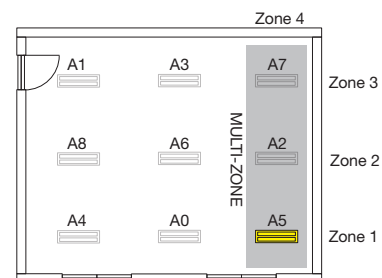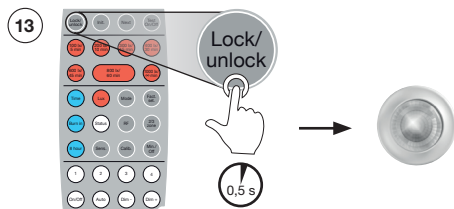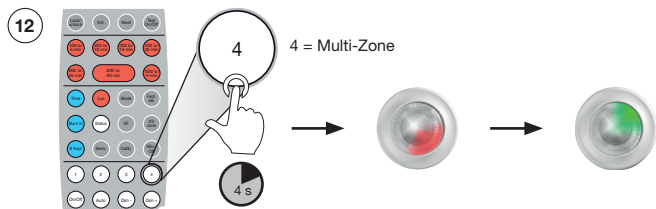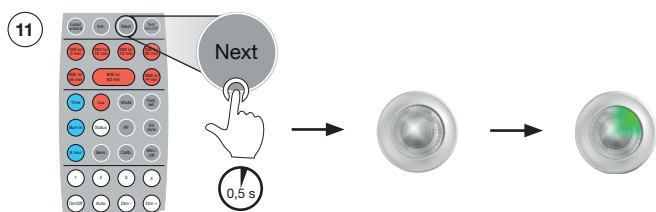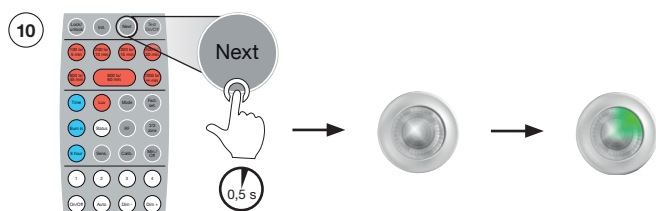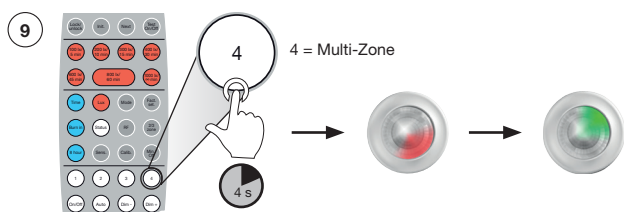         





## 1.33 Program light scene 1

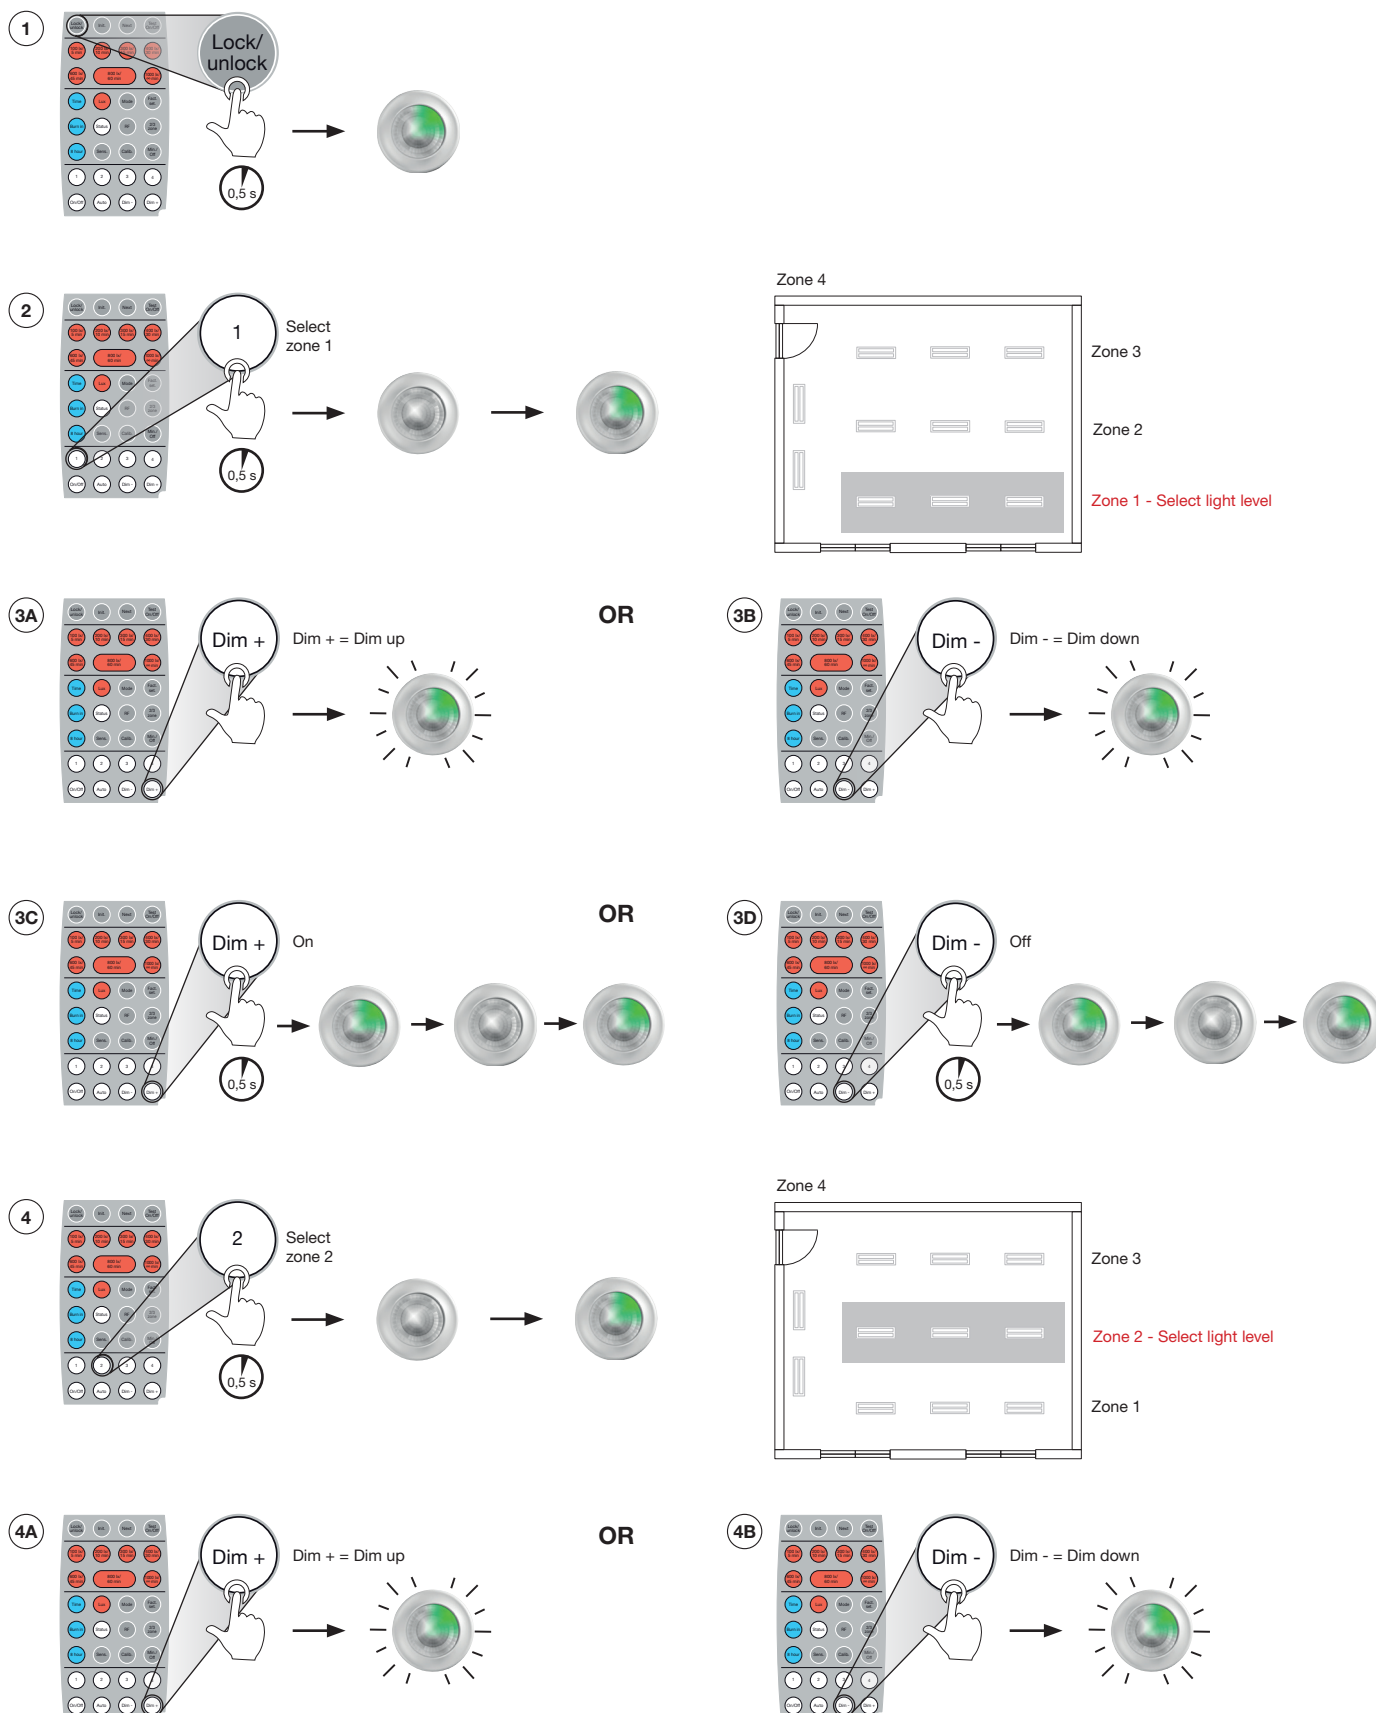 


### 1.33 Program light scene 1

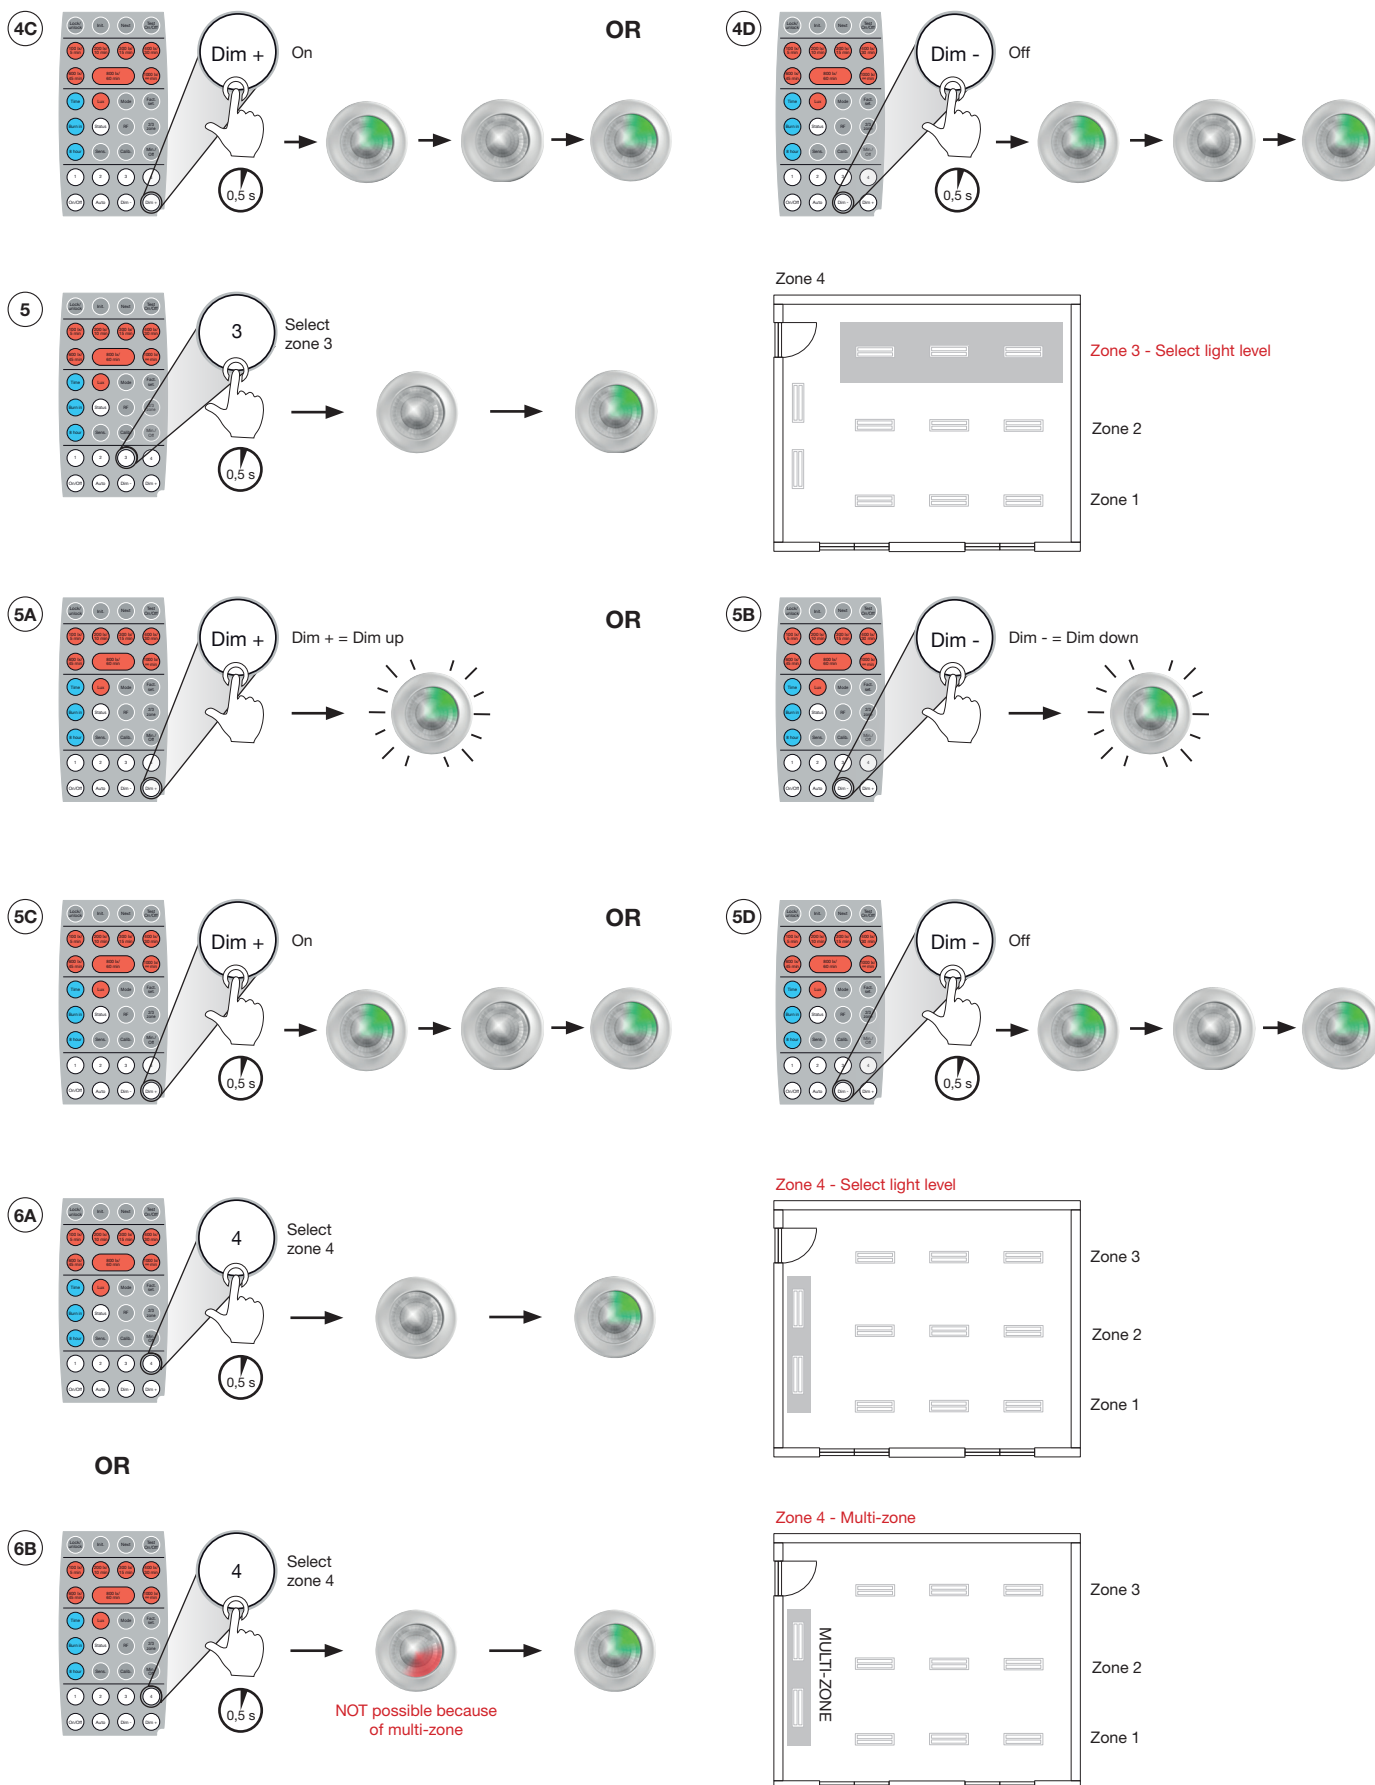 


## 1.33 Program light scene 1

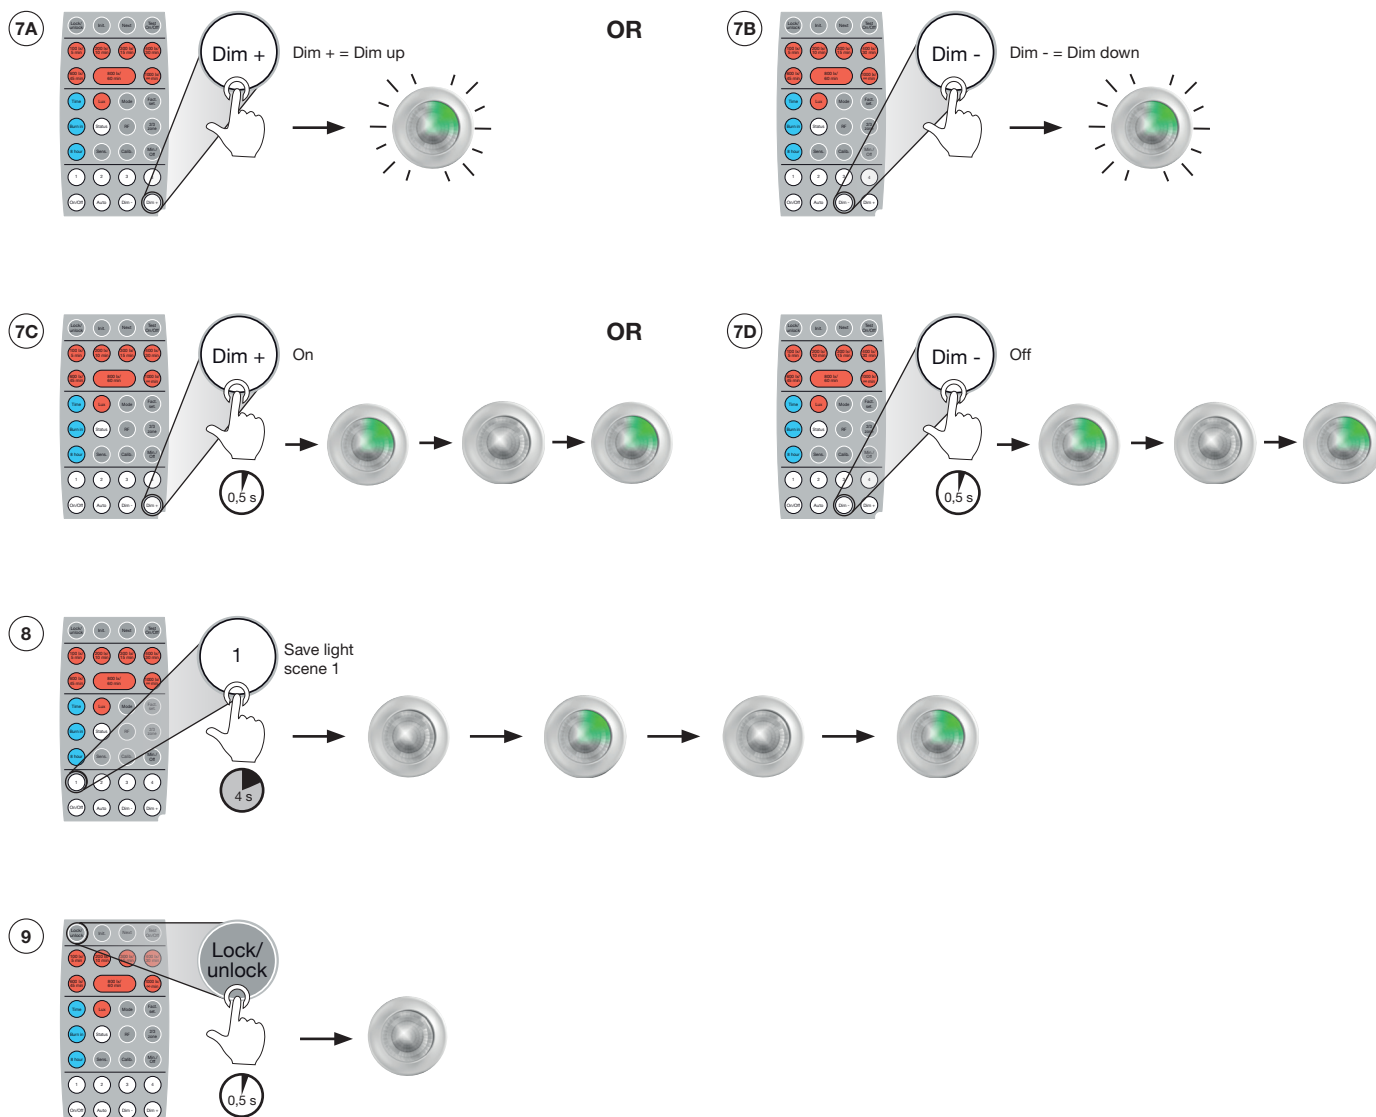 


## 1.34 Program light scene 2

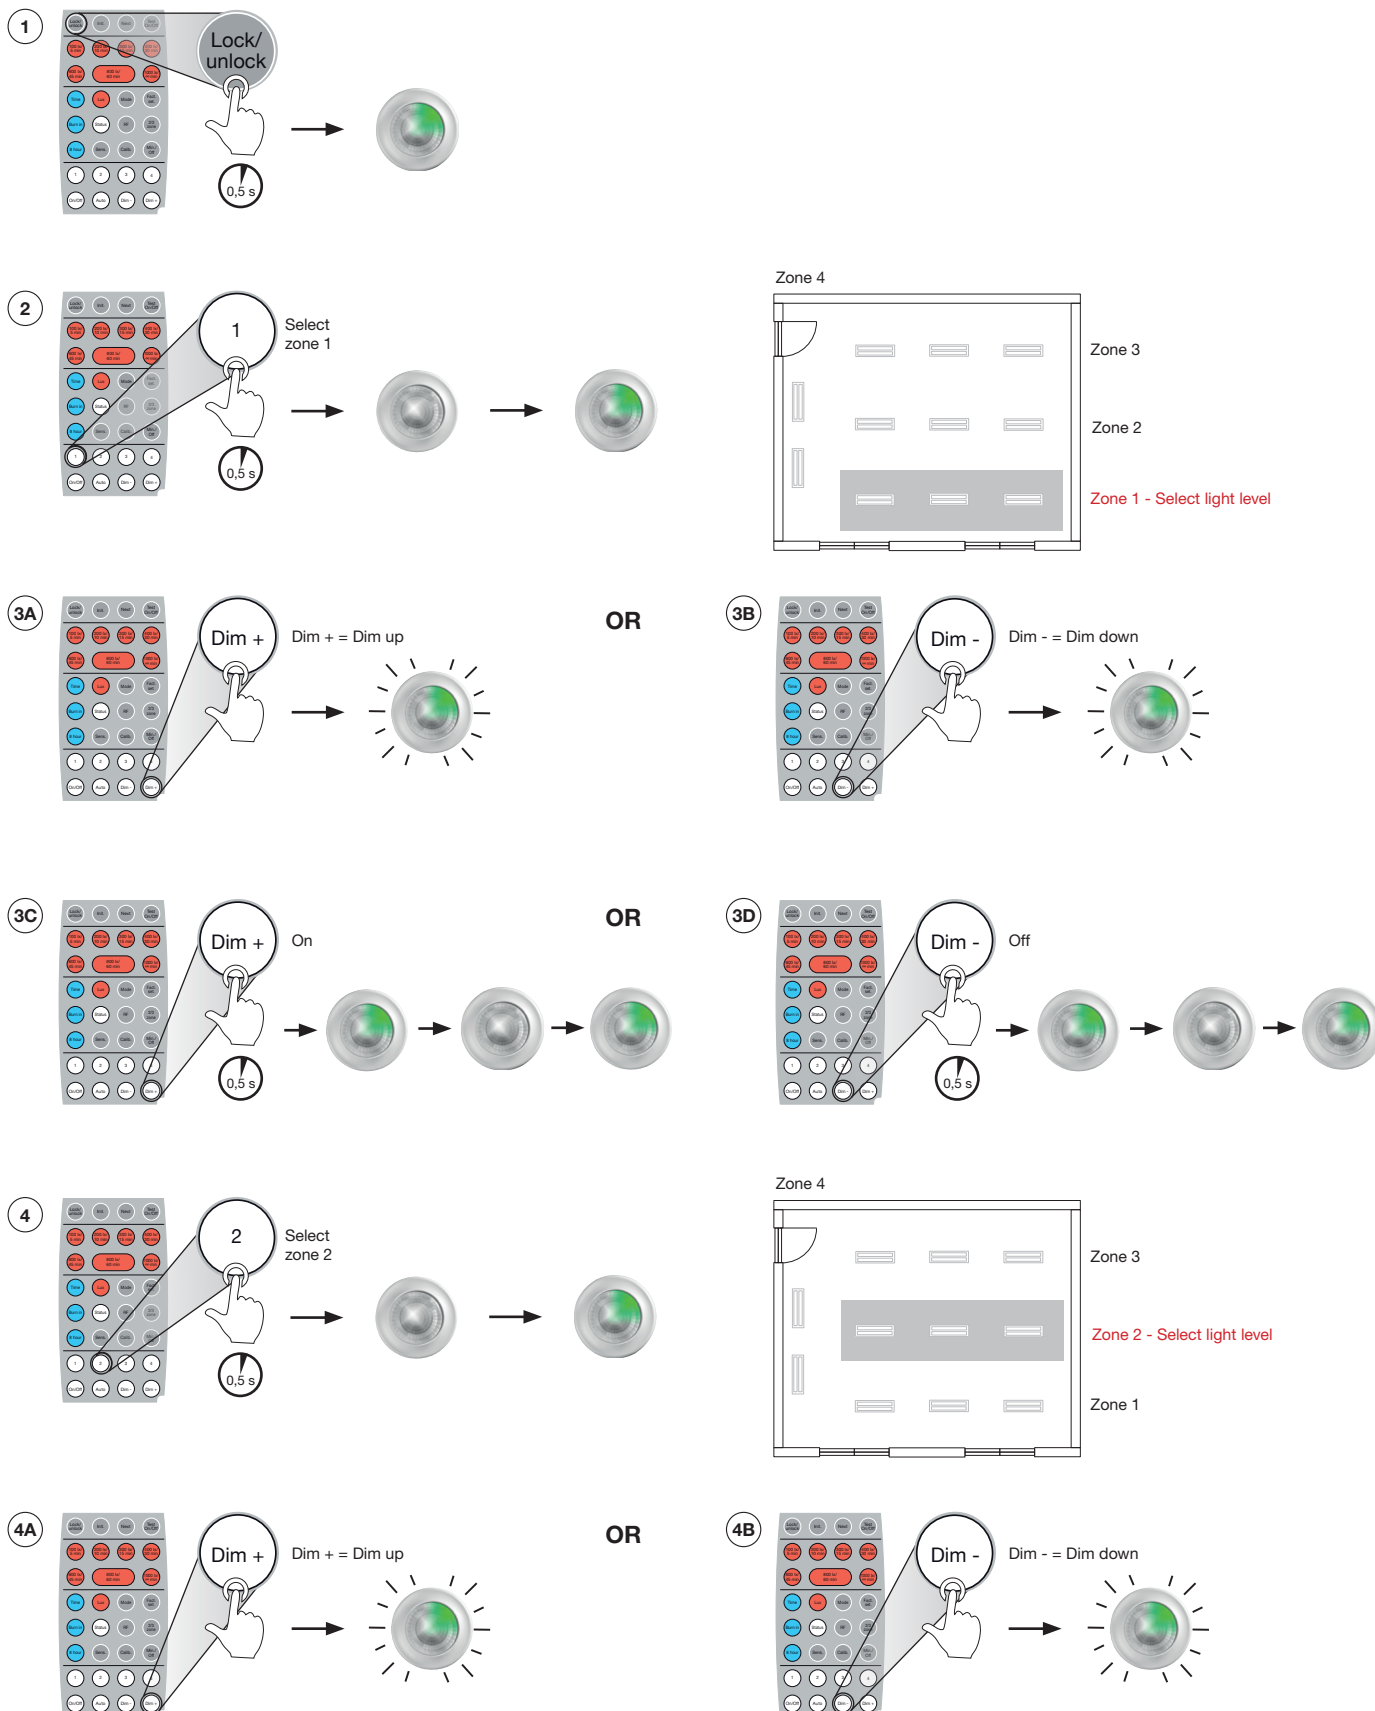 


## 1.34 Program light scene 2

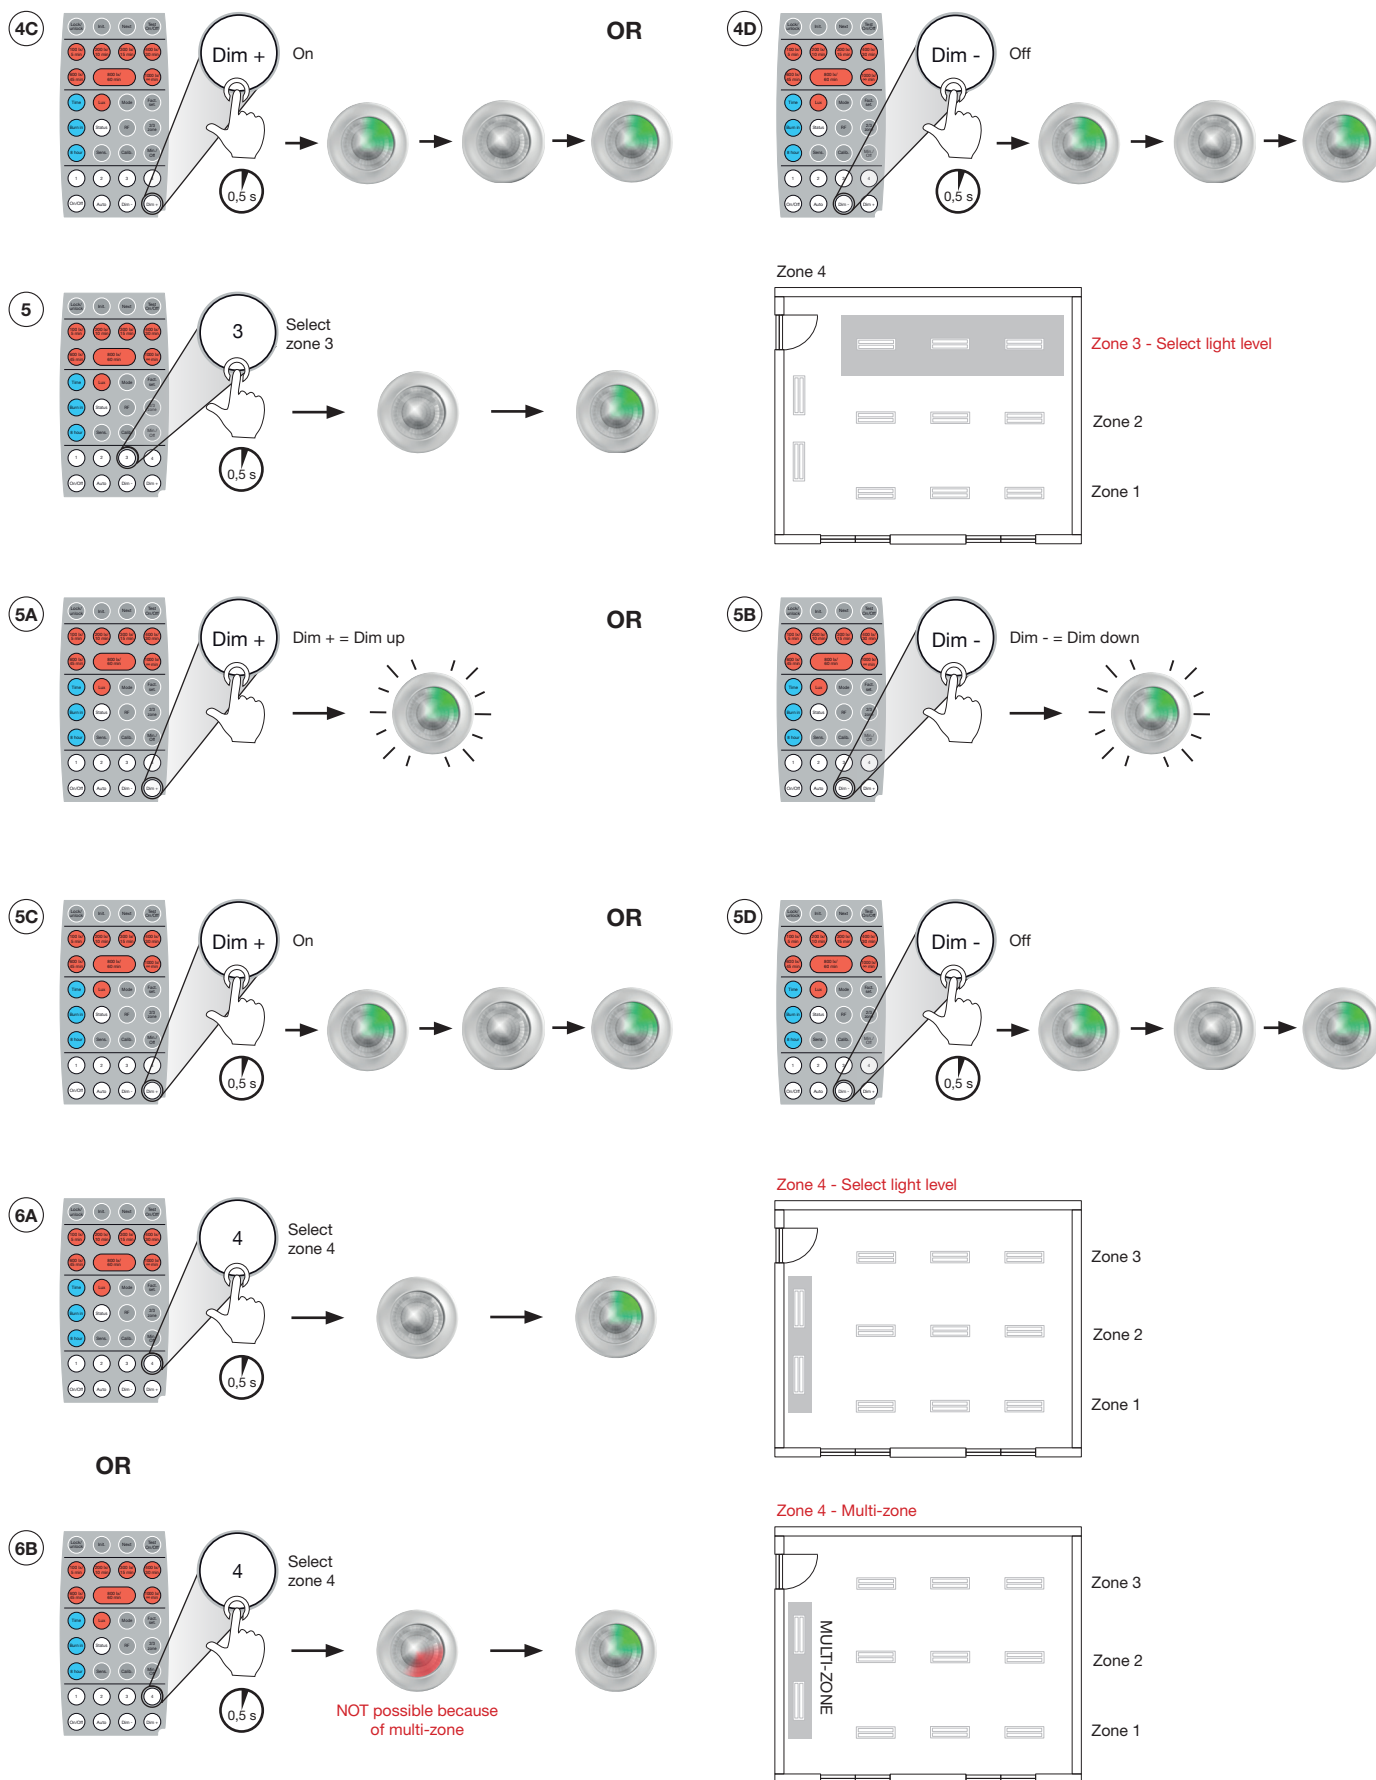 

## 1.34 Program light scene 2

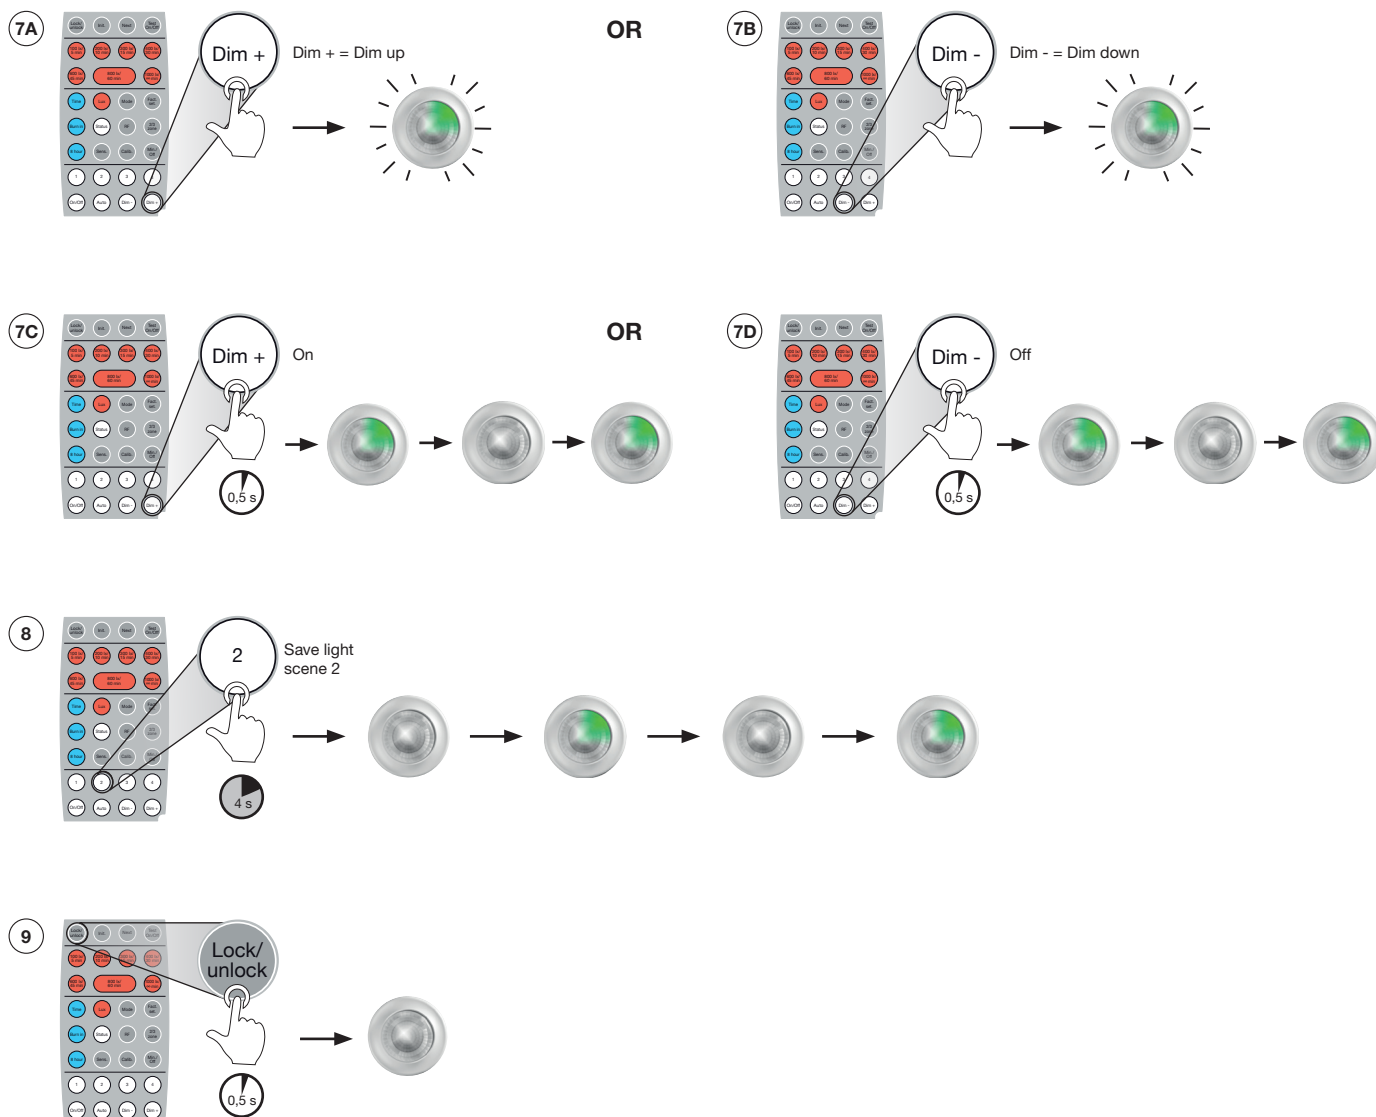 


## 1.35 Program light scene 3

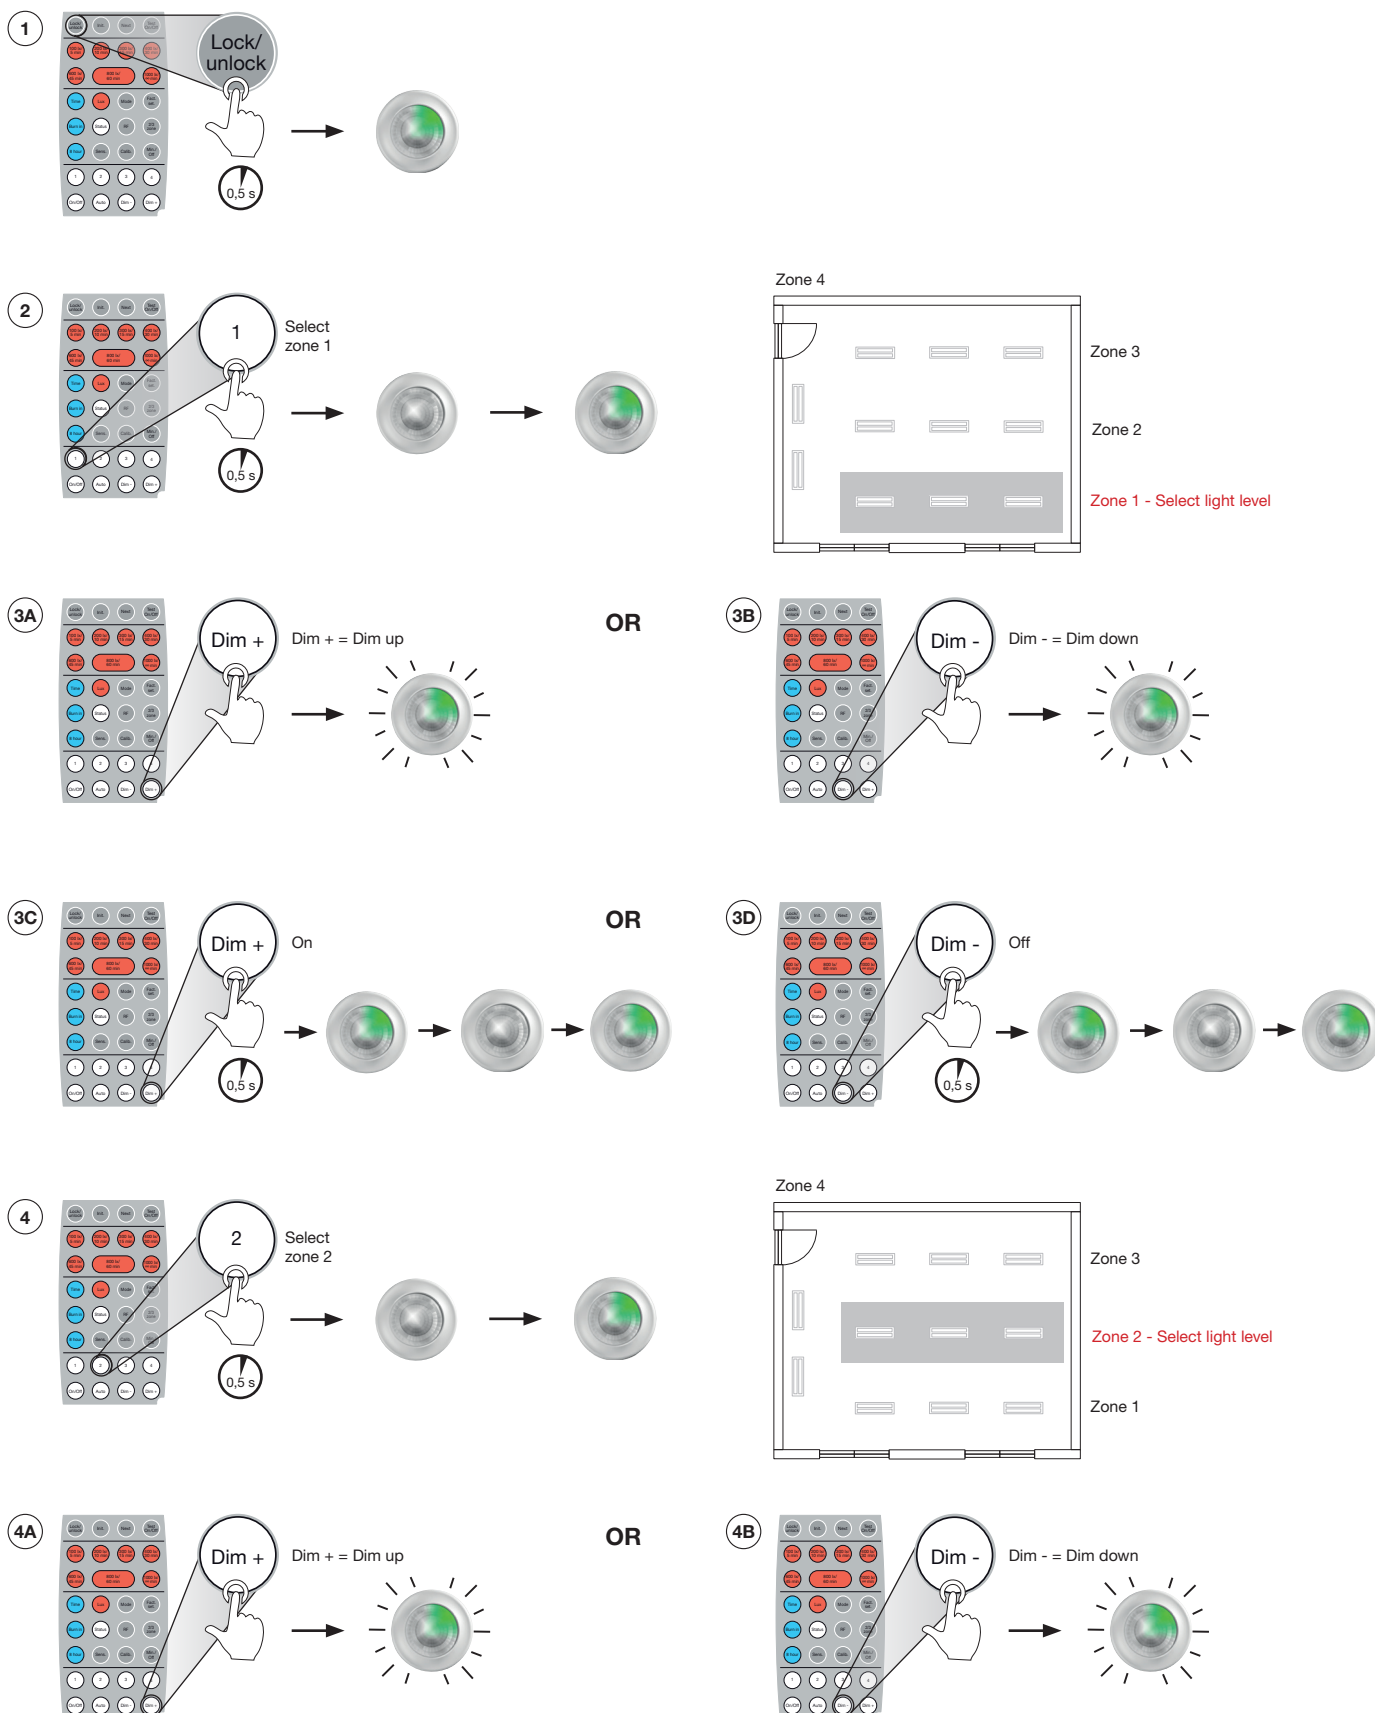 








## 1.35 Program light scene 3

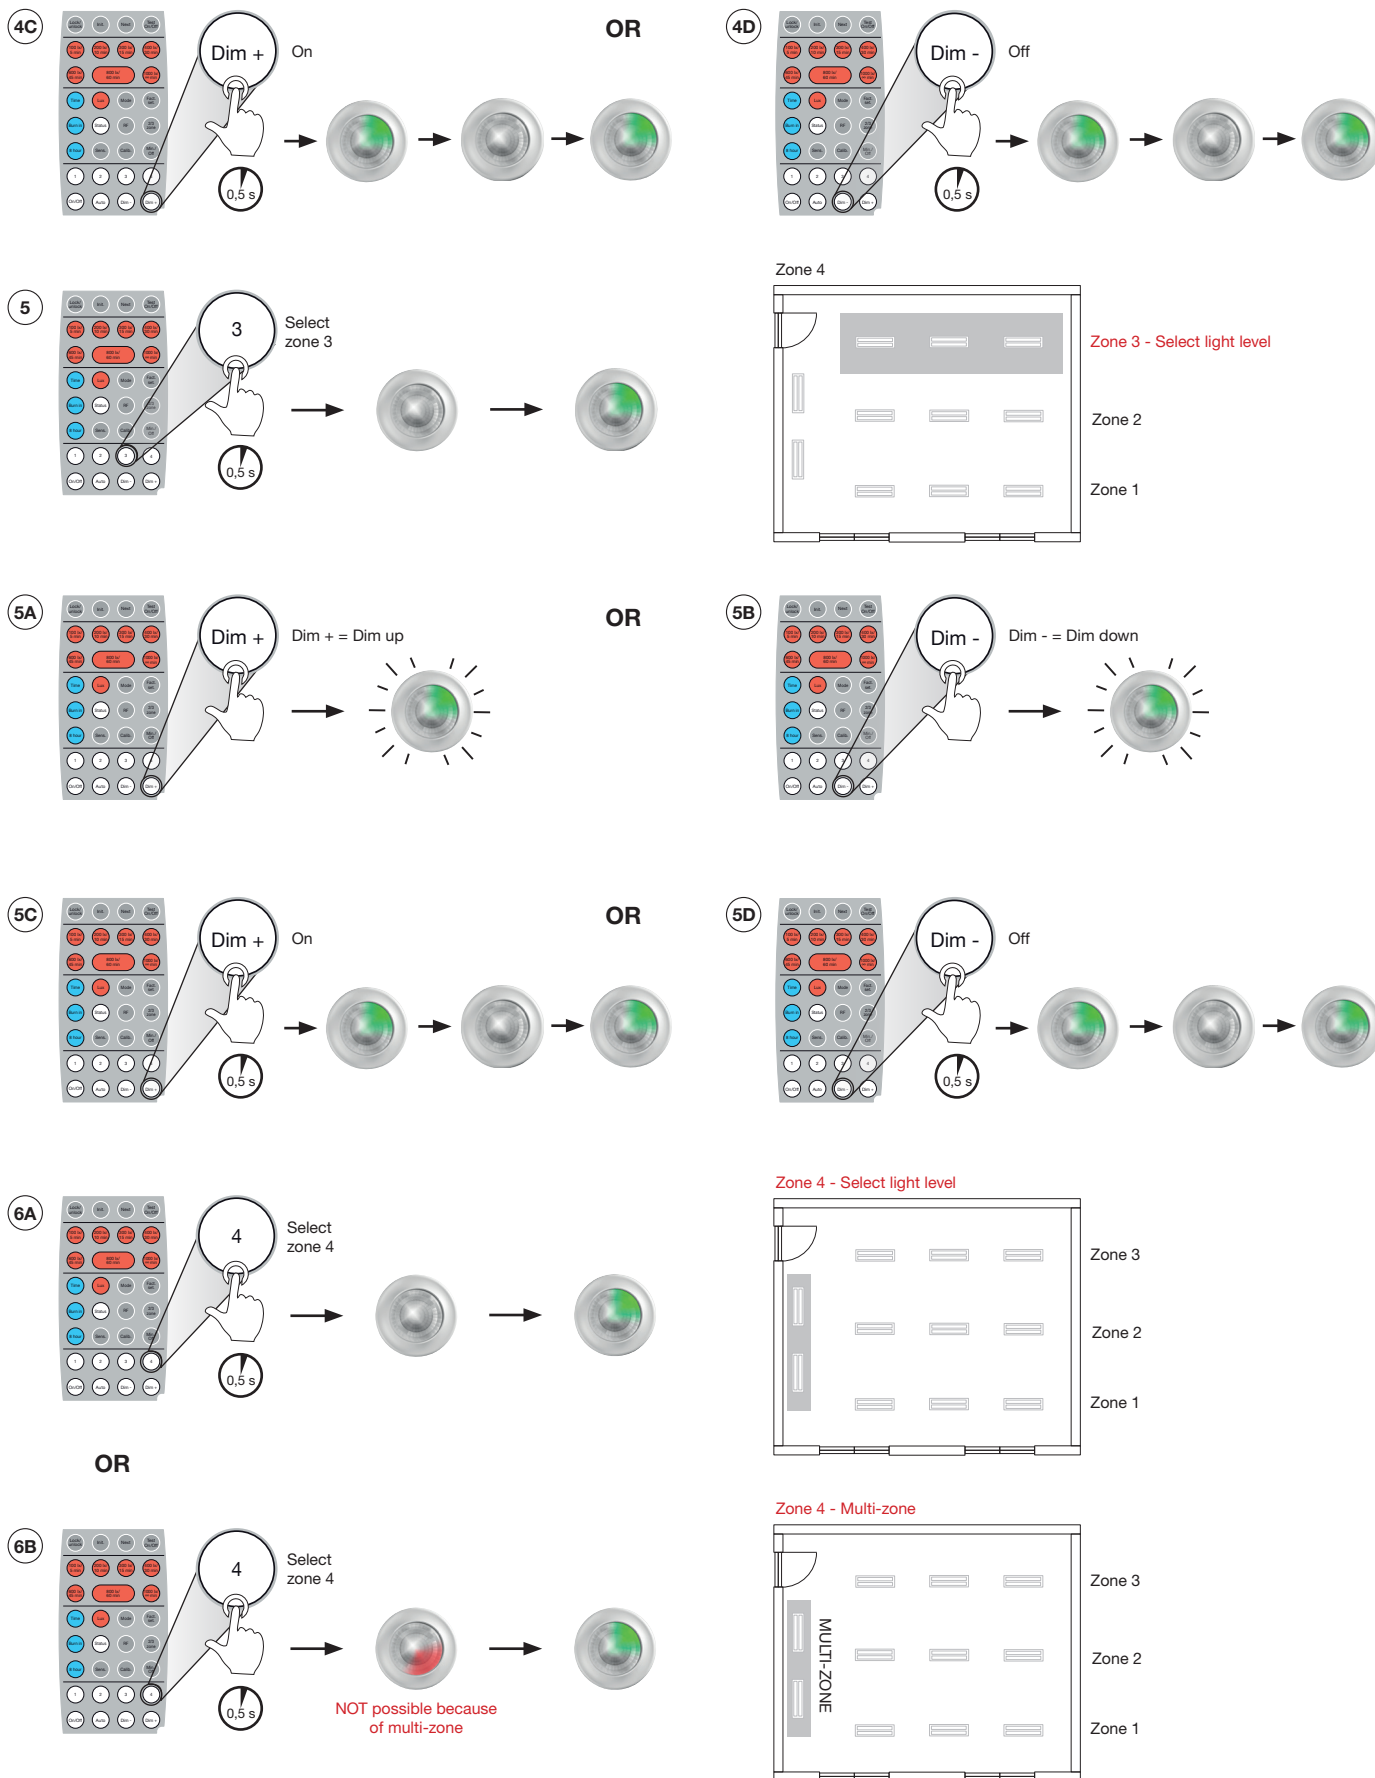 



## 1.35 Program light scene 3

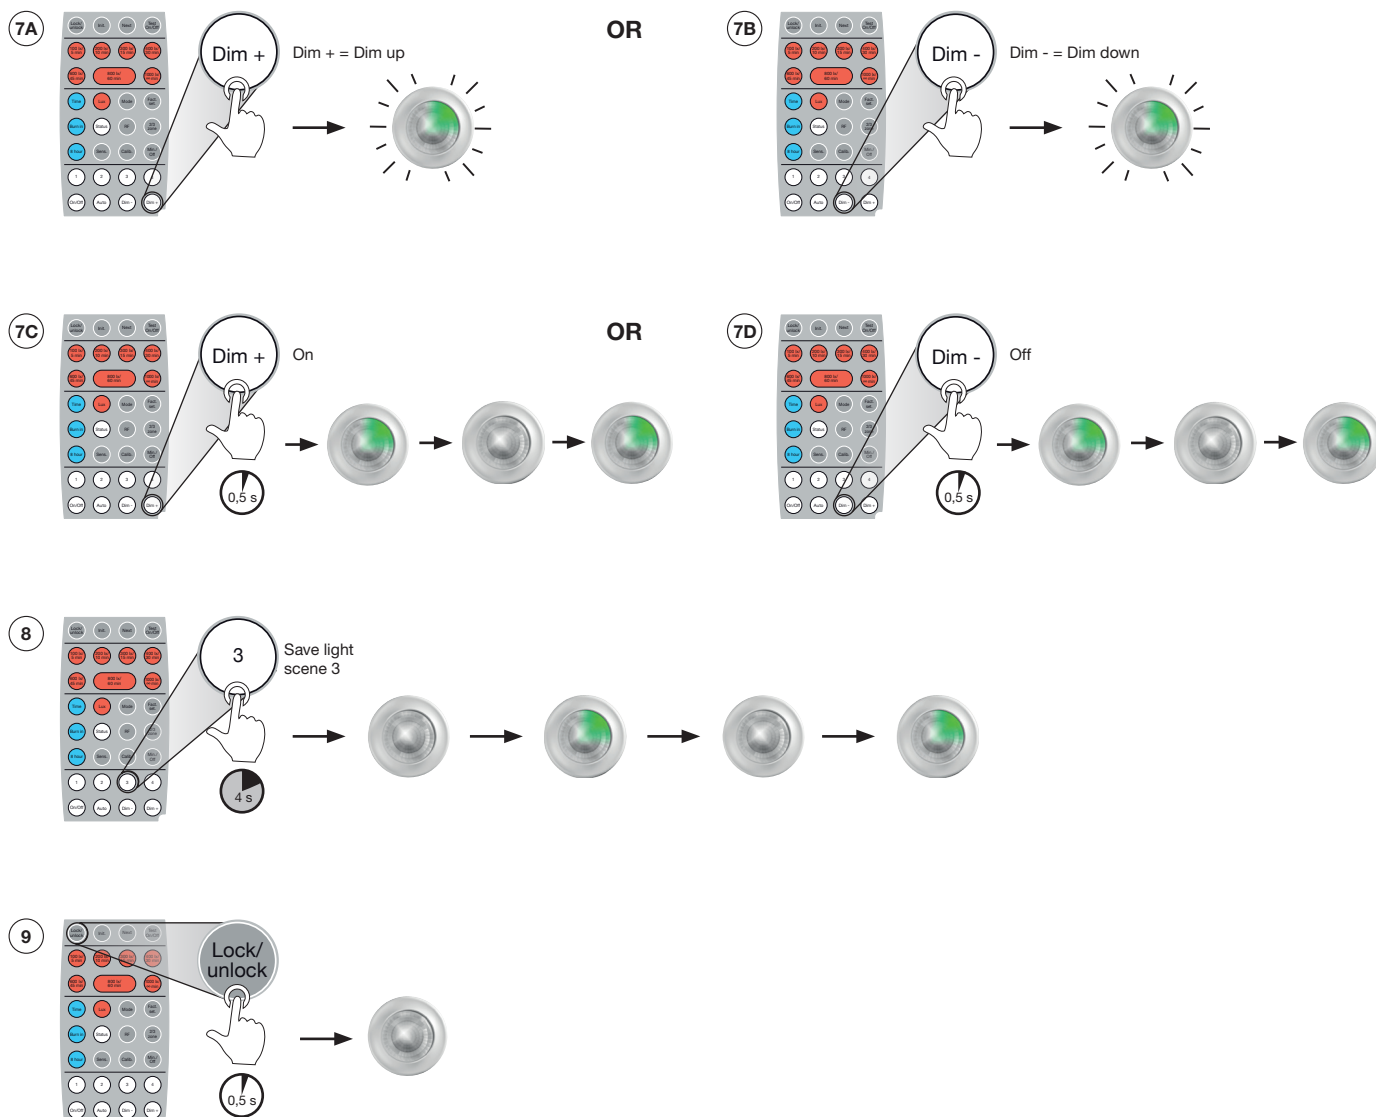 





## 1.36 Program light scene 4

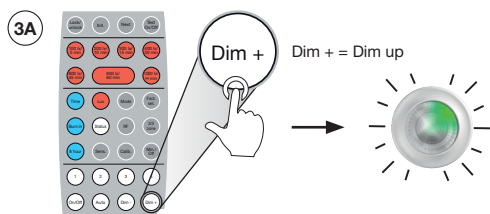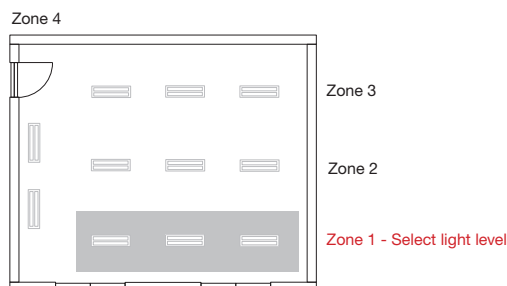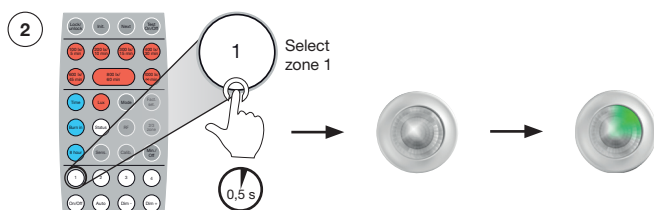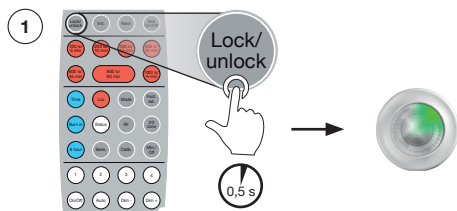    


OR

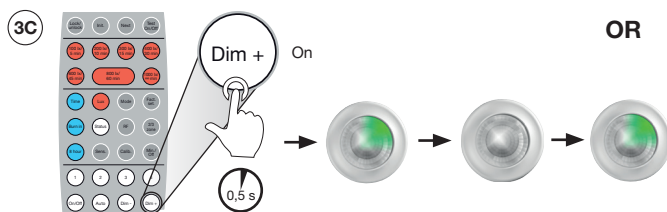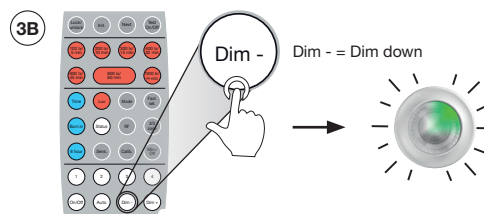  


OR

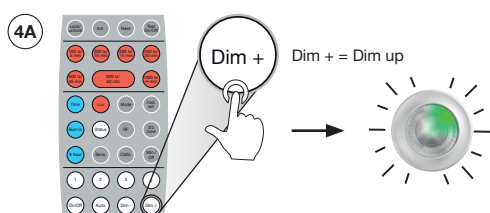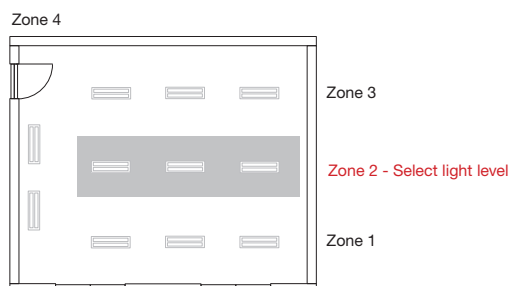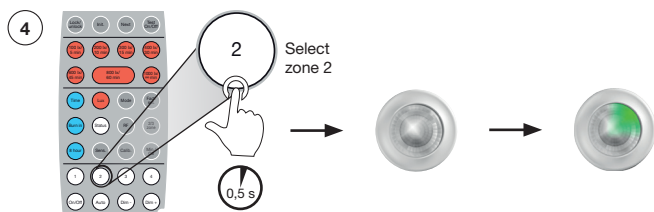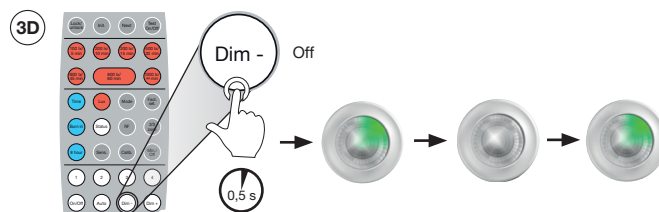    


OR

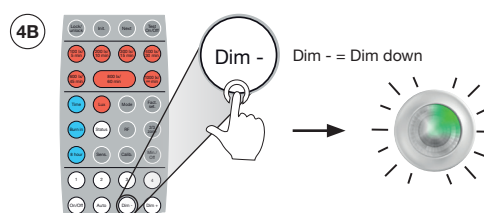 


## 1.36 Program light scene 4

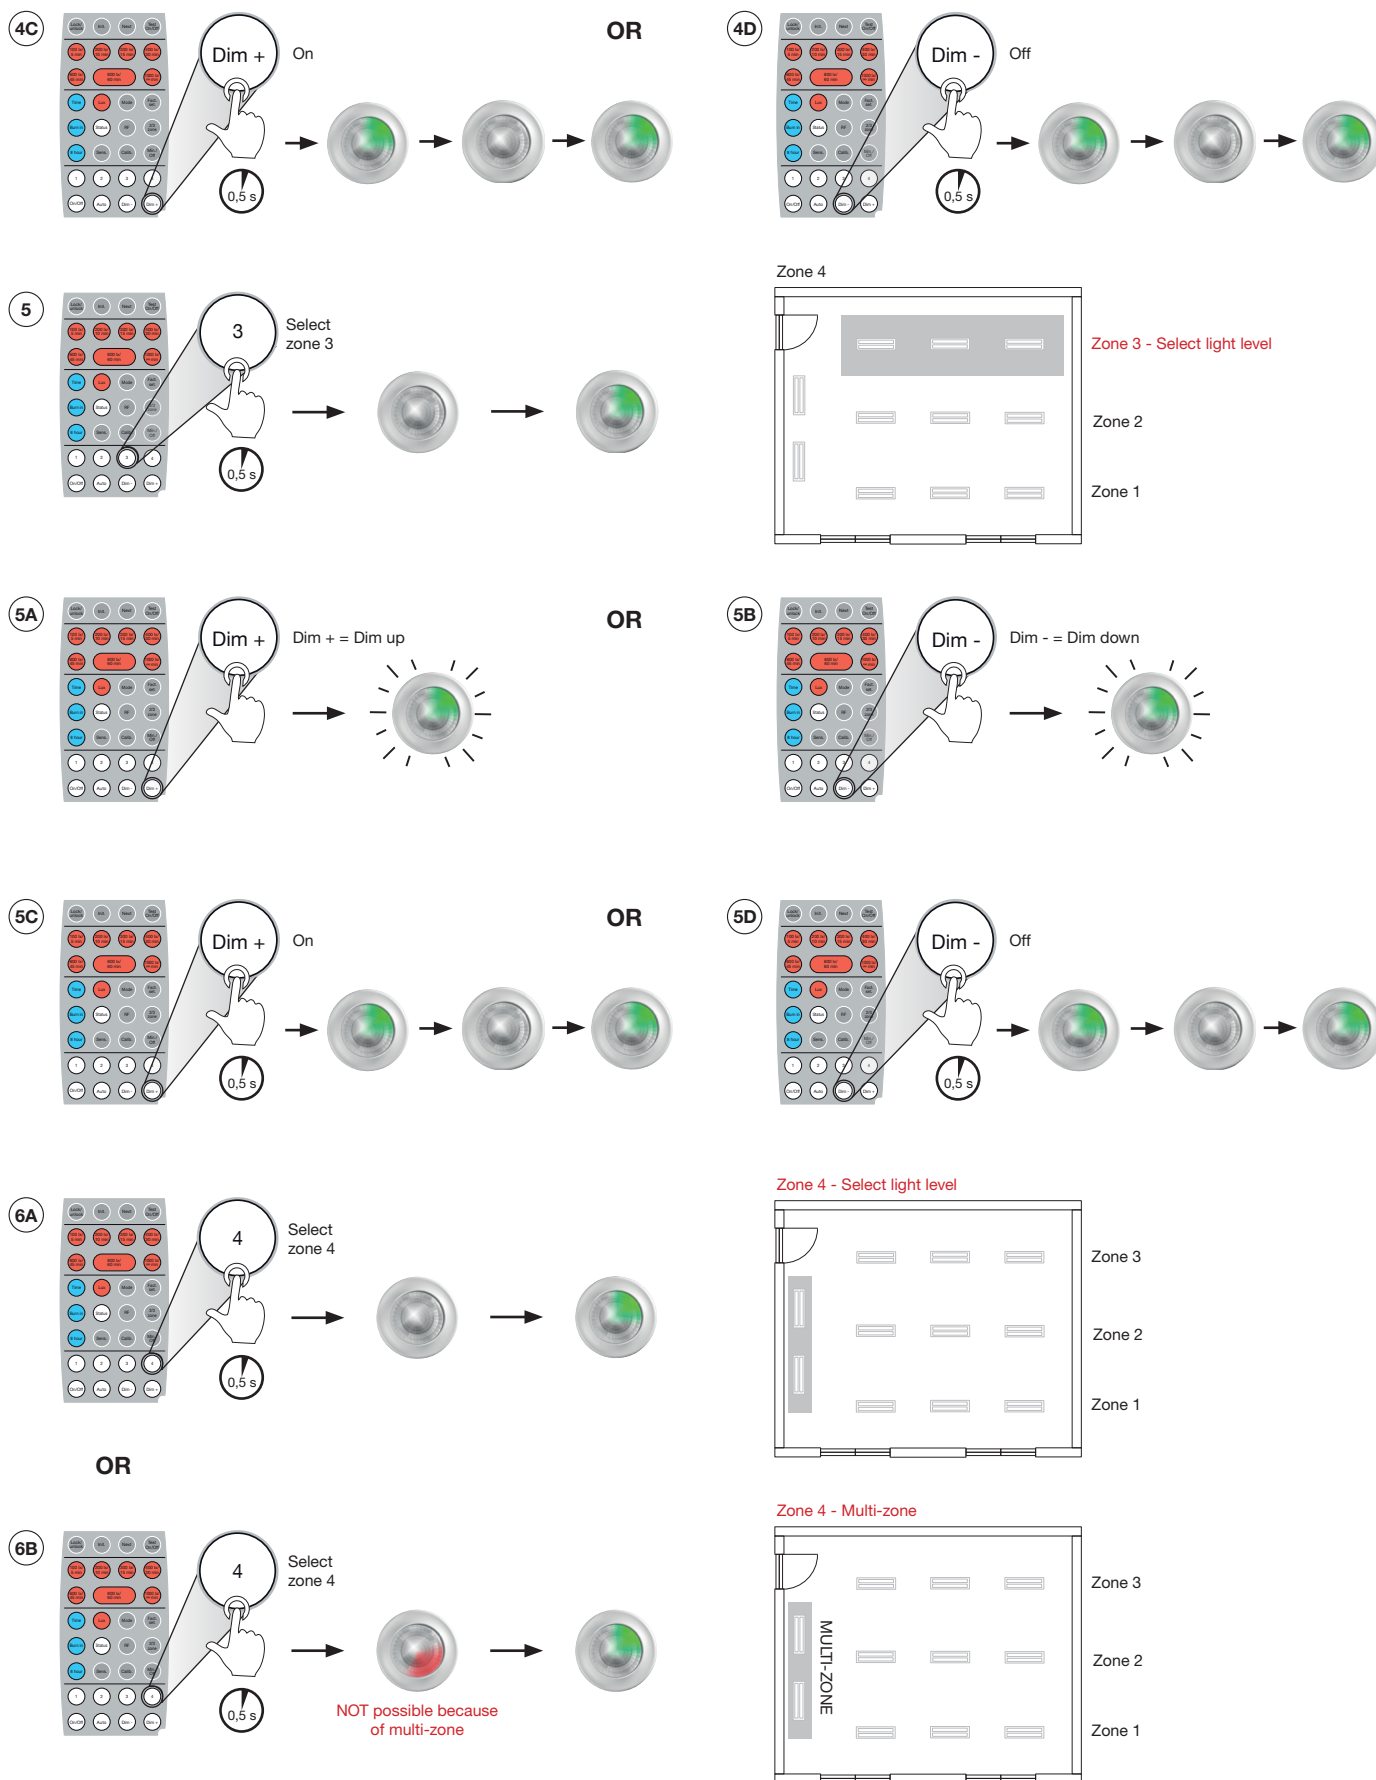 


## 1.36 Program light scene 4

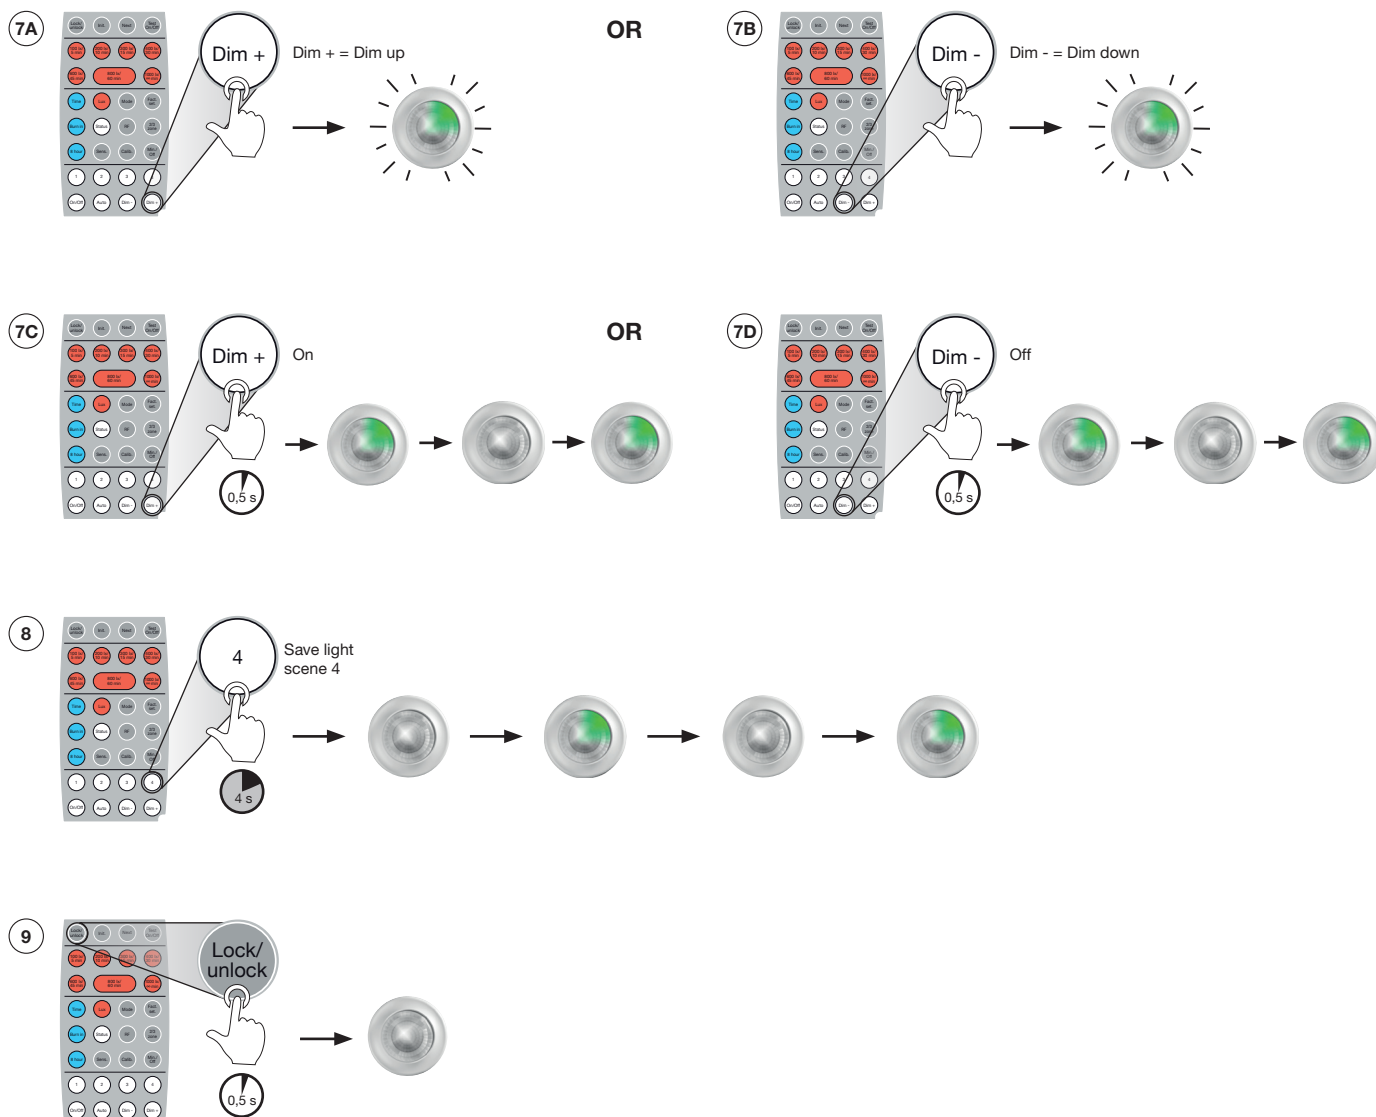 


## 1.37 Add luminaires

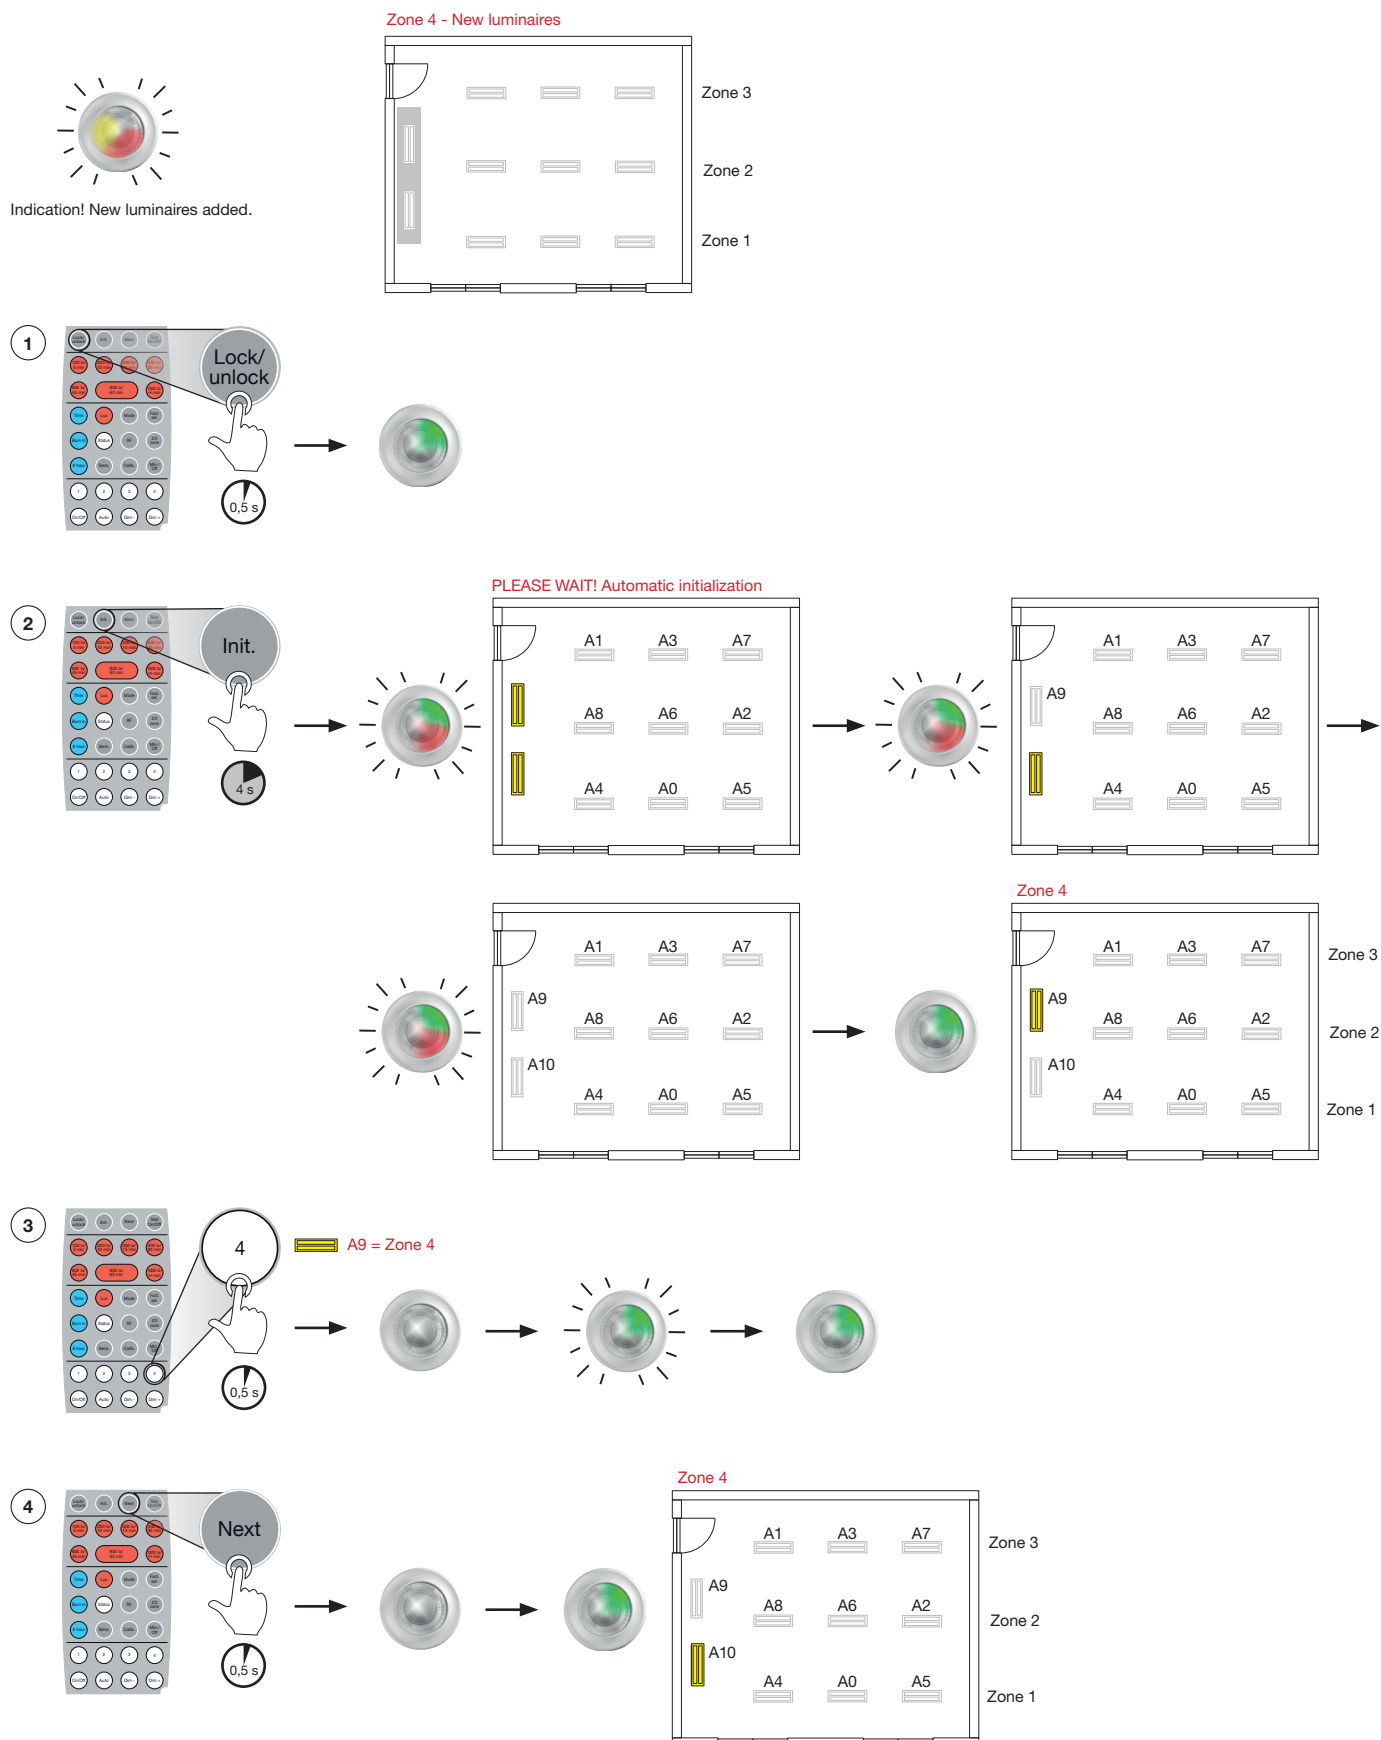 

## 1.37 Add luminaires

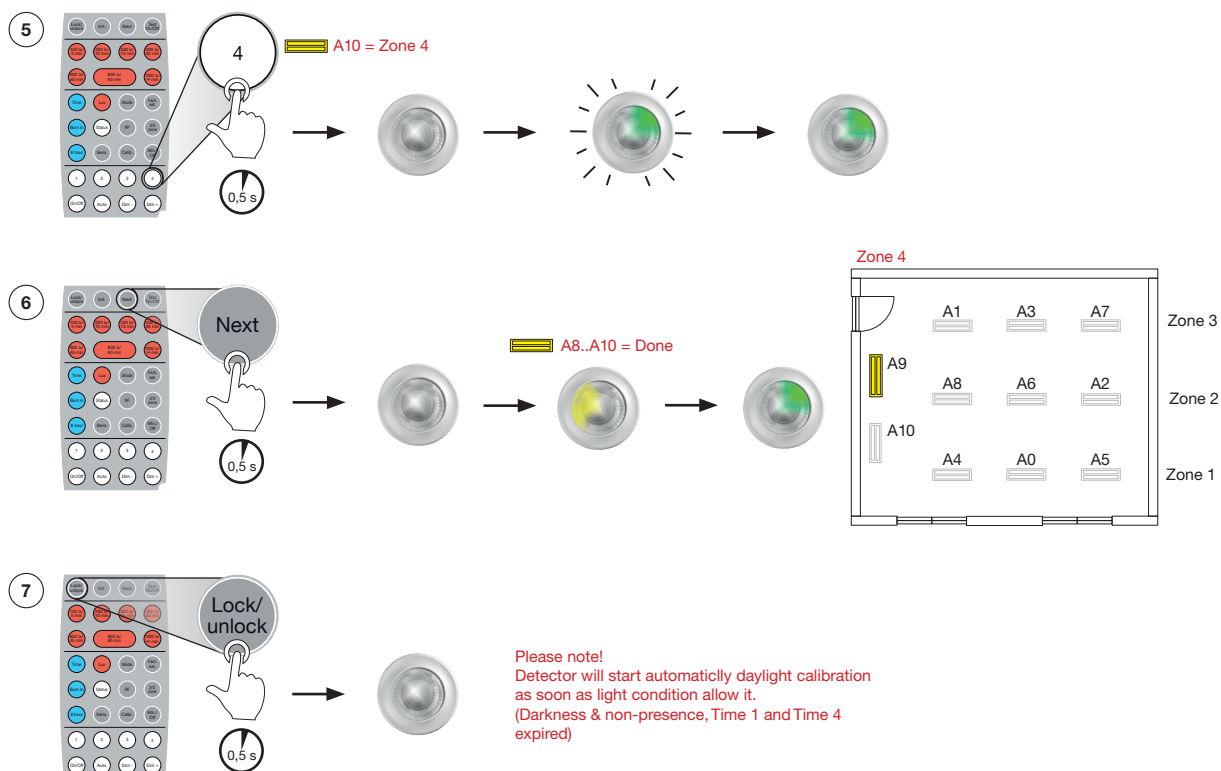 


## 1.38 Non presence light level (night Mode 4)

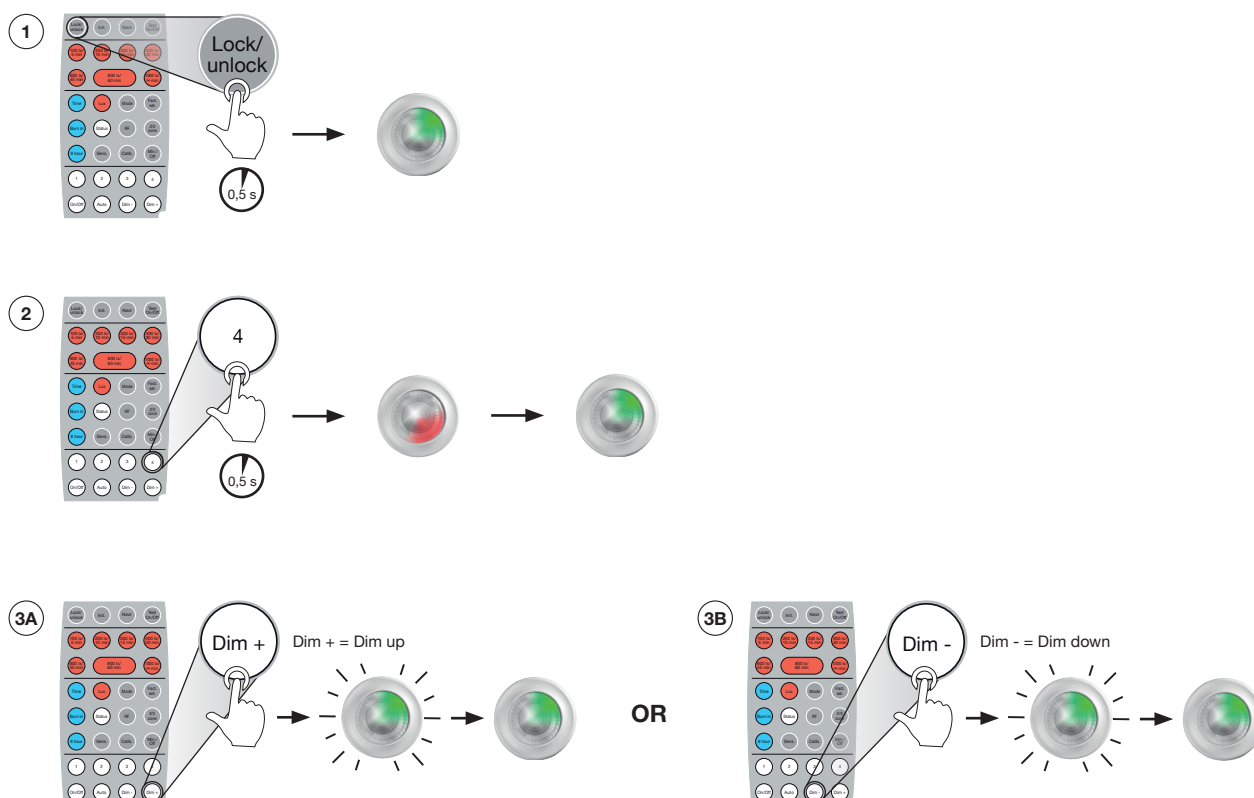 




### 1.38 Non presence light level (night, Mode 4)

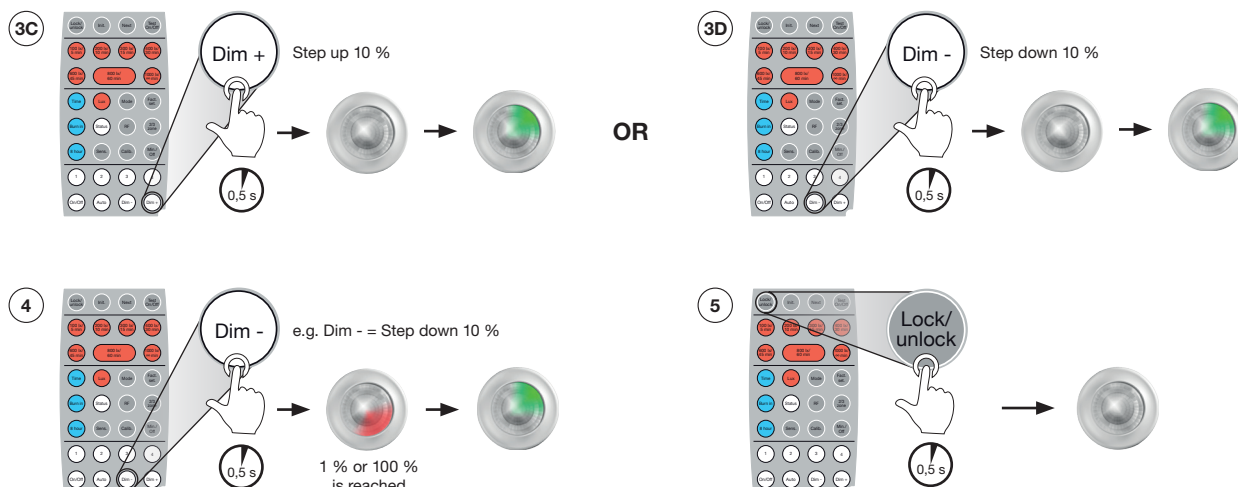 

### 1.39 Presence light level (night, Mode 4)

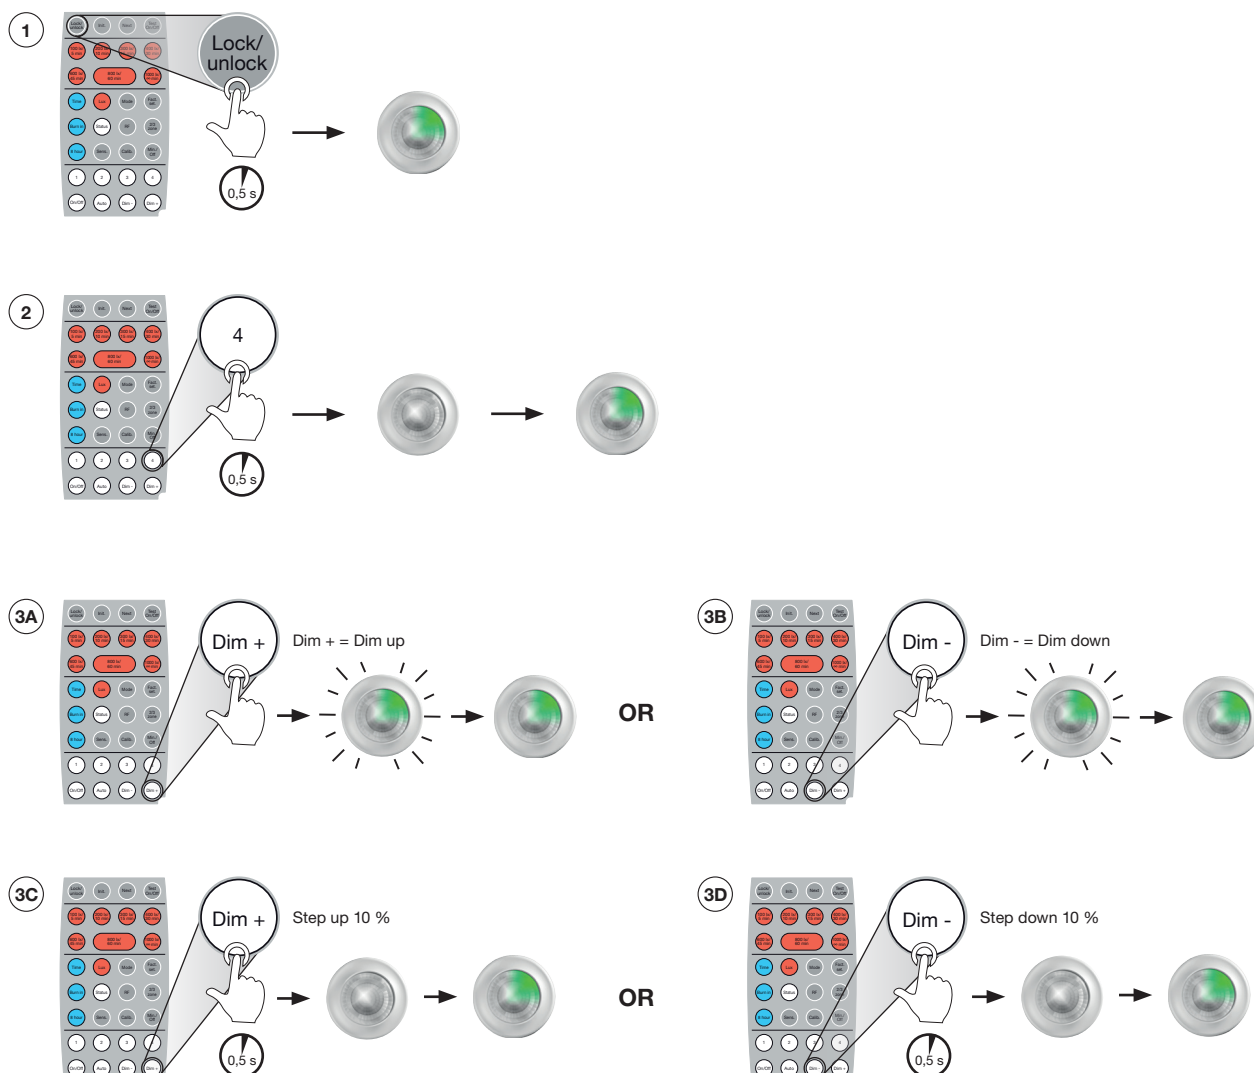 


### 1.39 Presence light level (night, Mode 4)




## 2. Status

 
### 2.1 Status time 1 – Off delay timer

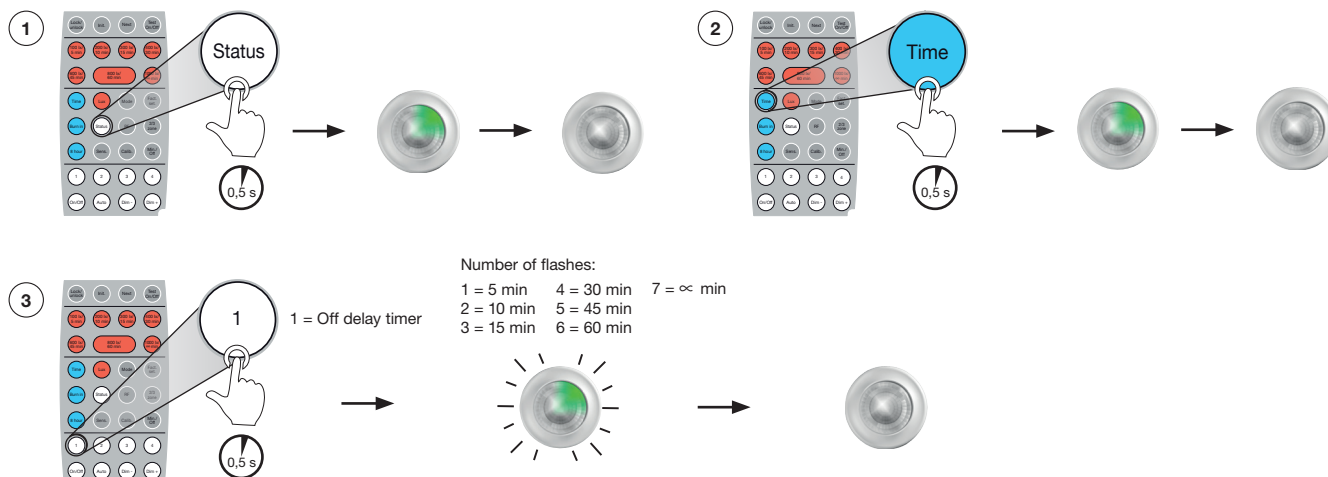


### 2.2 Status time 2 – HVAC timer

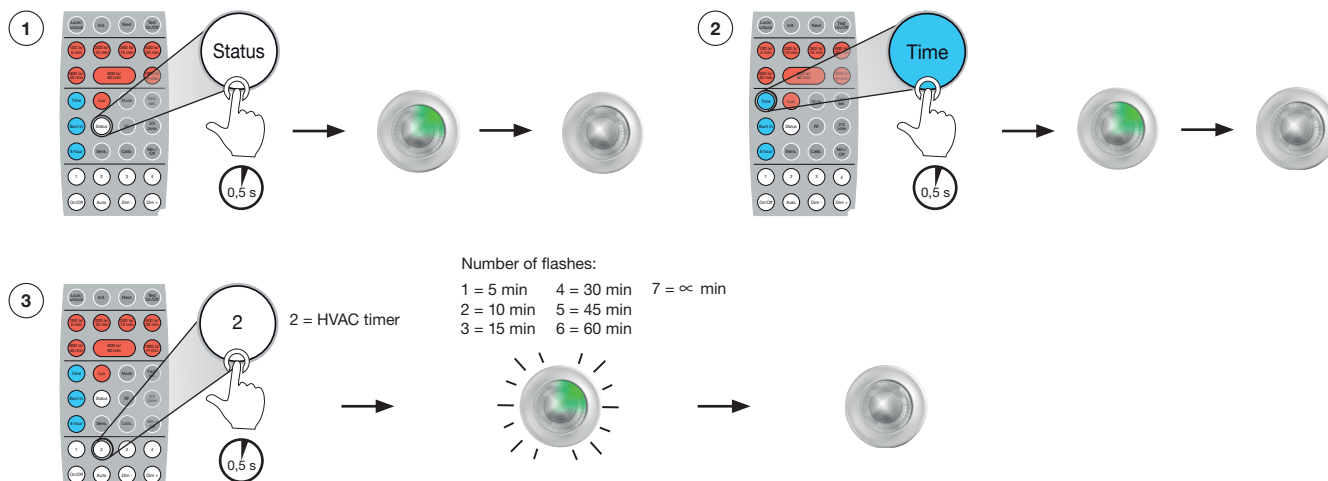 


## 2.3 Status time 3 – Cut-Off timer

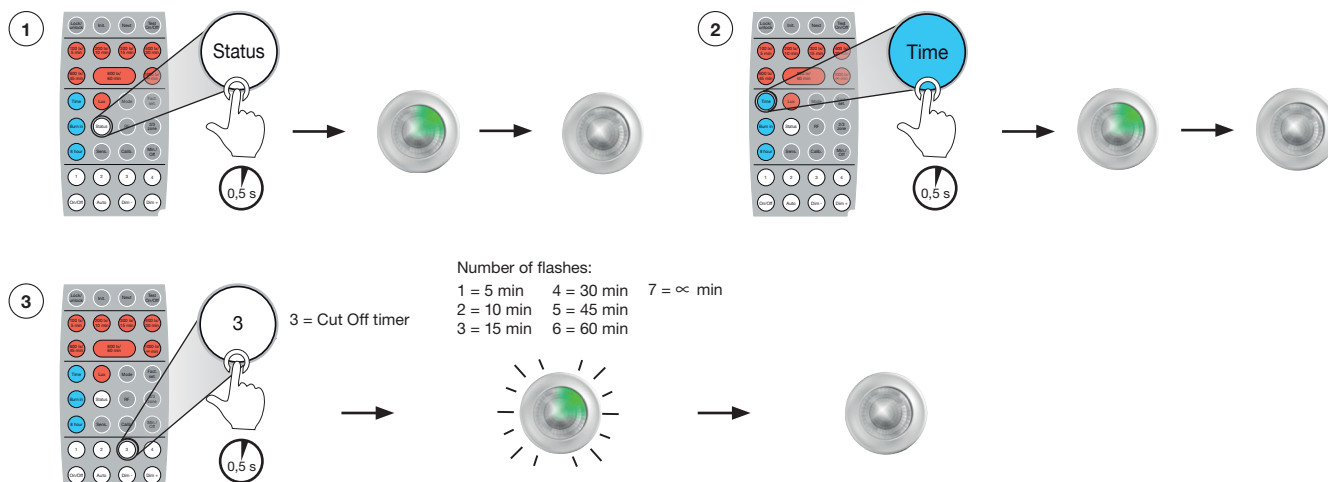 


## 2.4 Status time 4 – Orientation light's timer

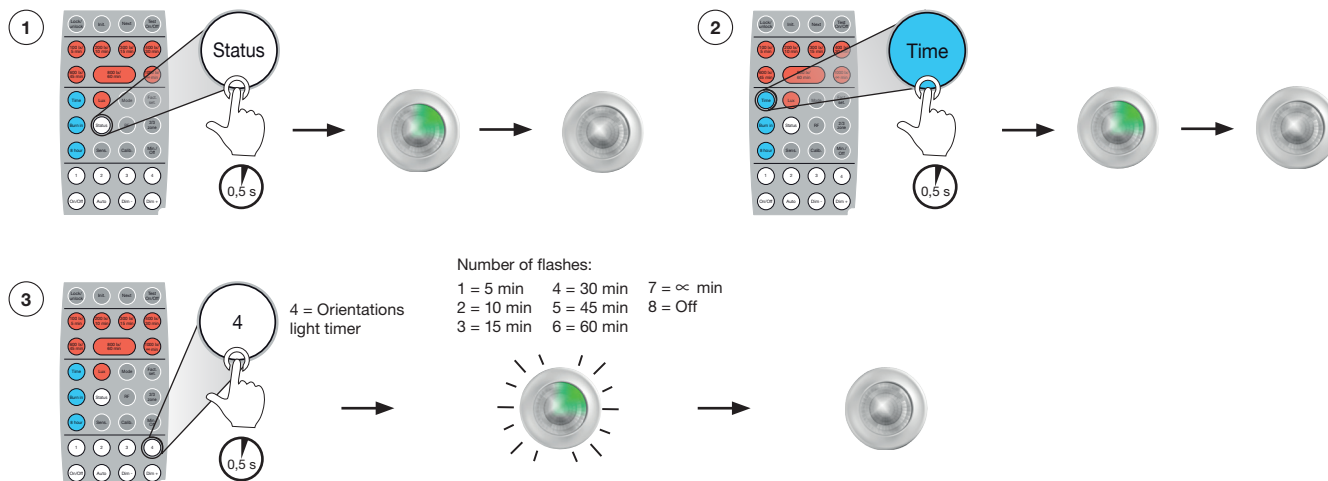 


## 2.5 Status – Lux level

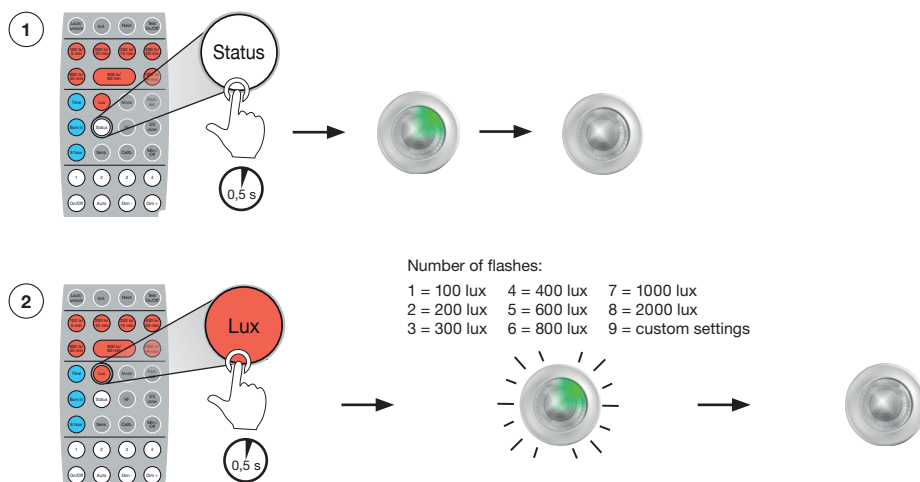 


## 2.6 Status – Sensitivity in sector A (red)

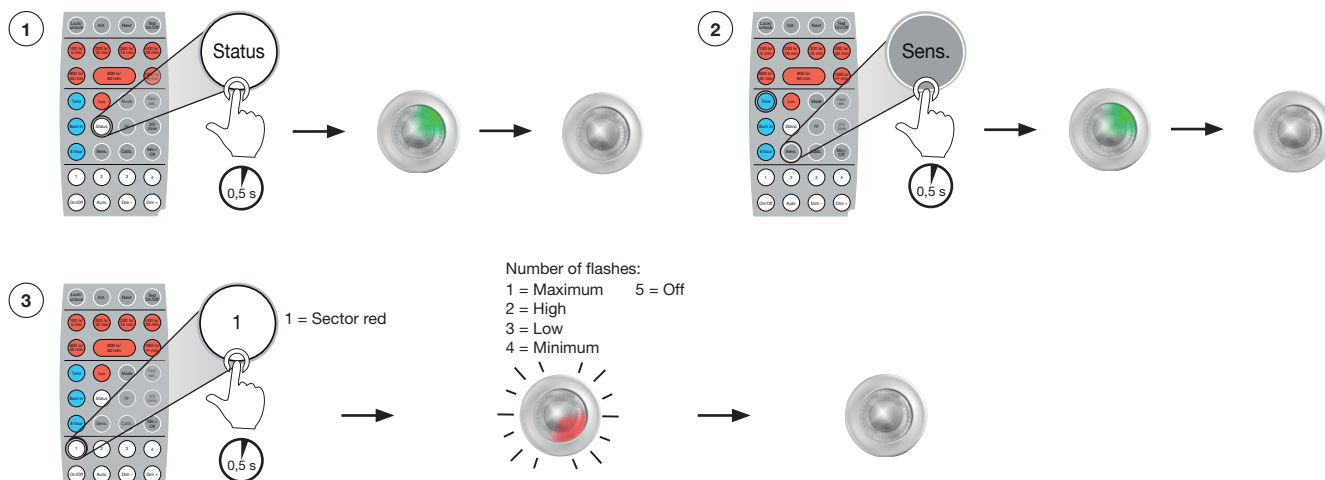 


## 2.7 Status – Sensitivity in sector B (green)

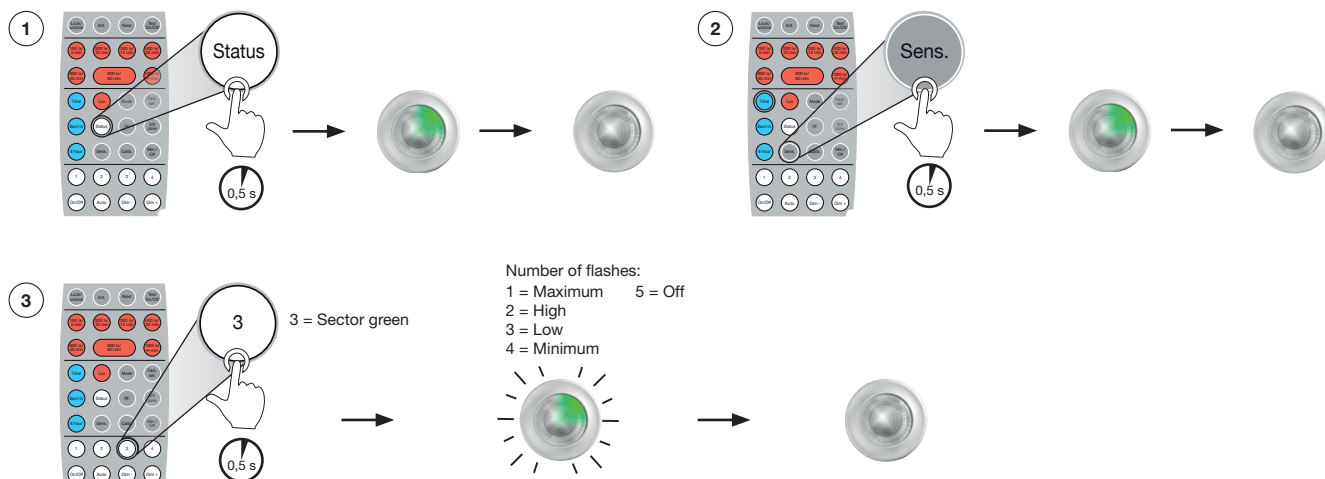 


## 2.8 Status – Sensitivity in sector C (blue)

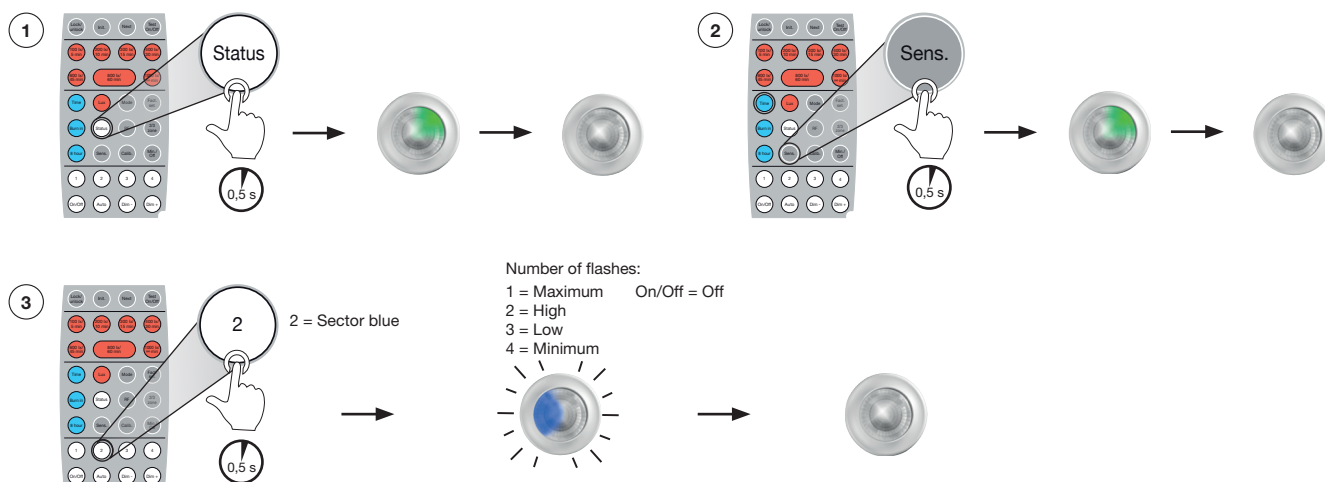 


## 2.9 Status – Burn-in

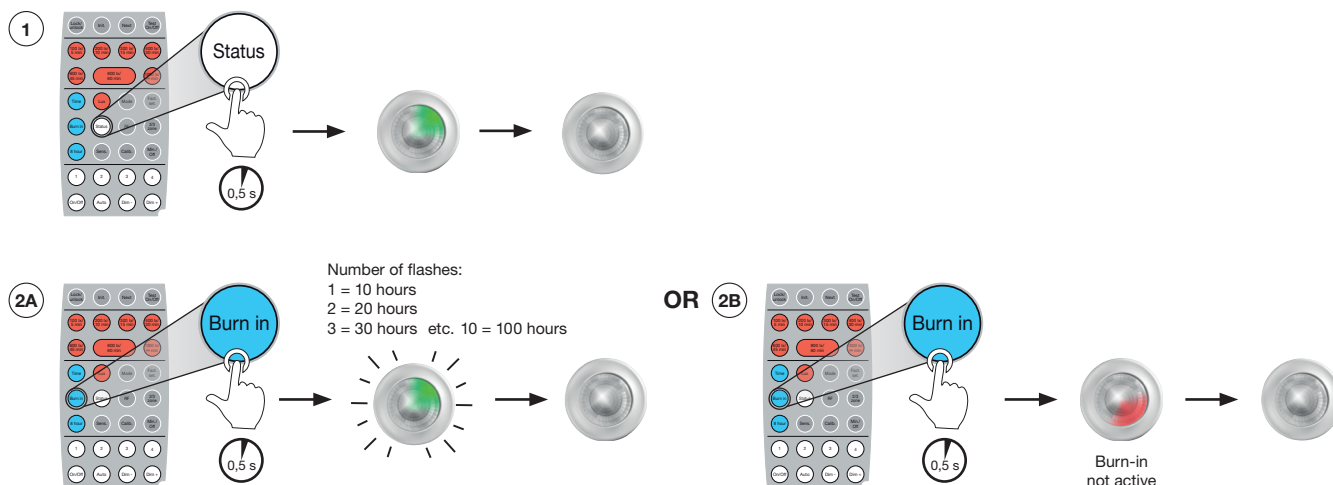 


## 2.10 Status – Constant HVAC output (8 hours)

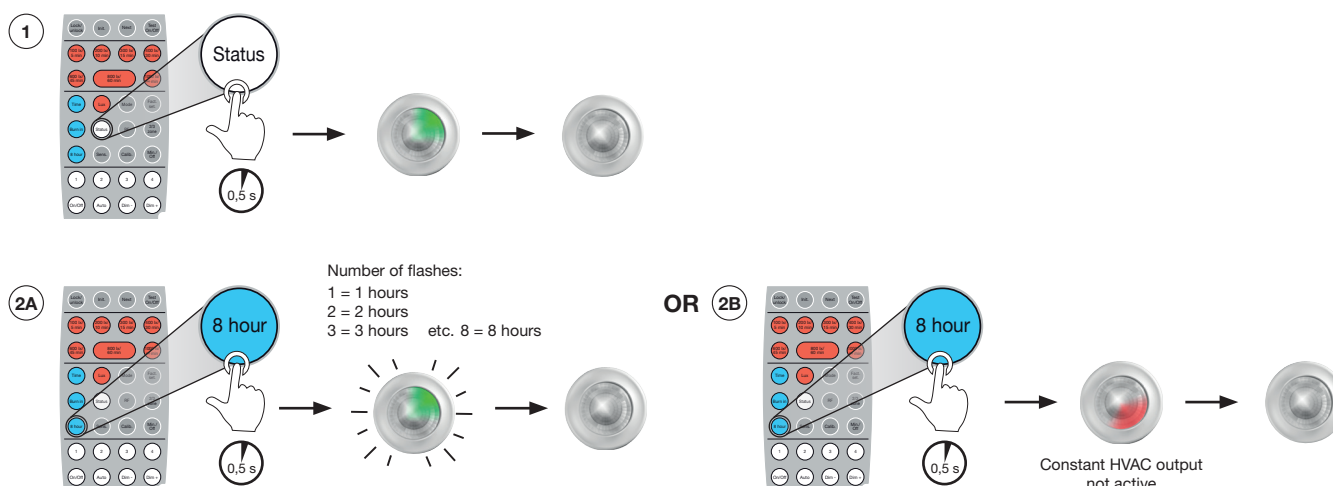 


## 2.11 Status – Mode

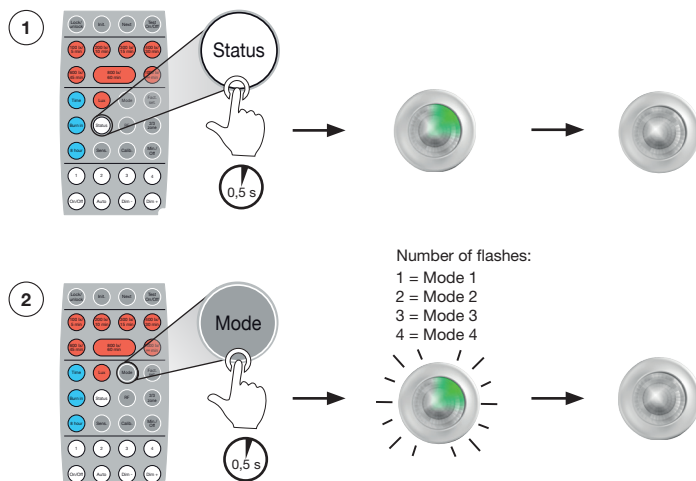 


## 2.12 Status – Minimum or Off, daylight zones

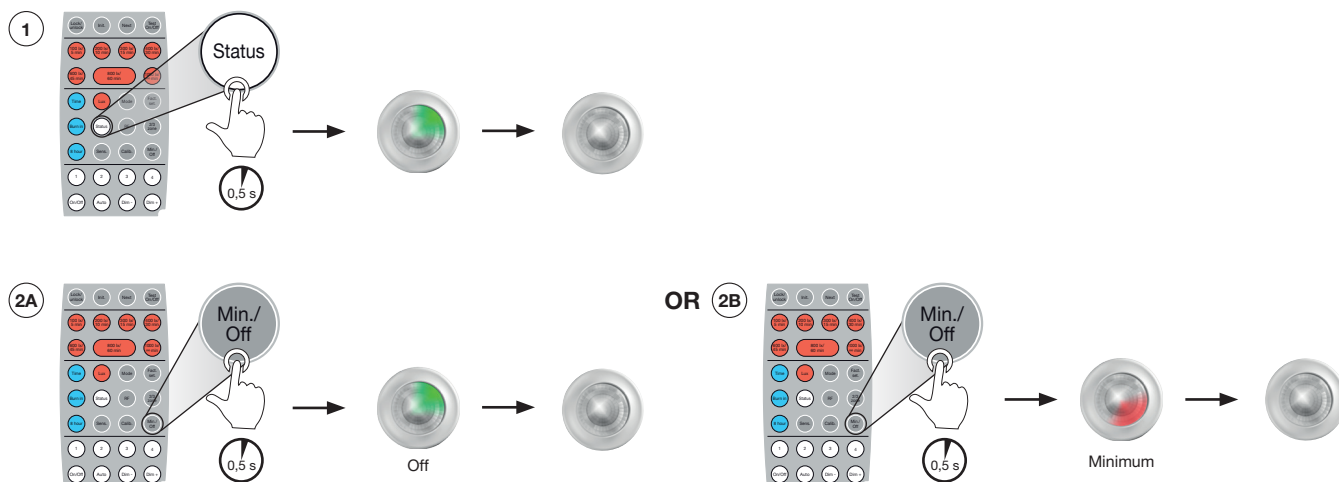 

## 2.13 Status – 2/3 daylight zones

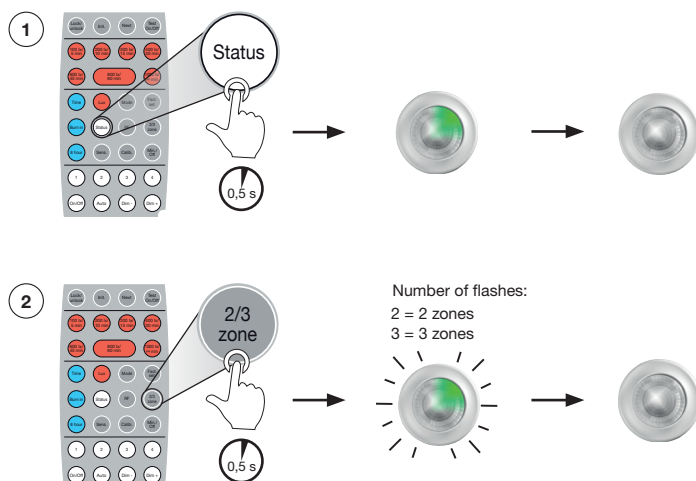 


## 2.14 Status – Zone 1

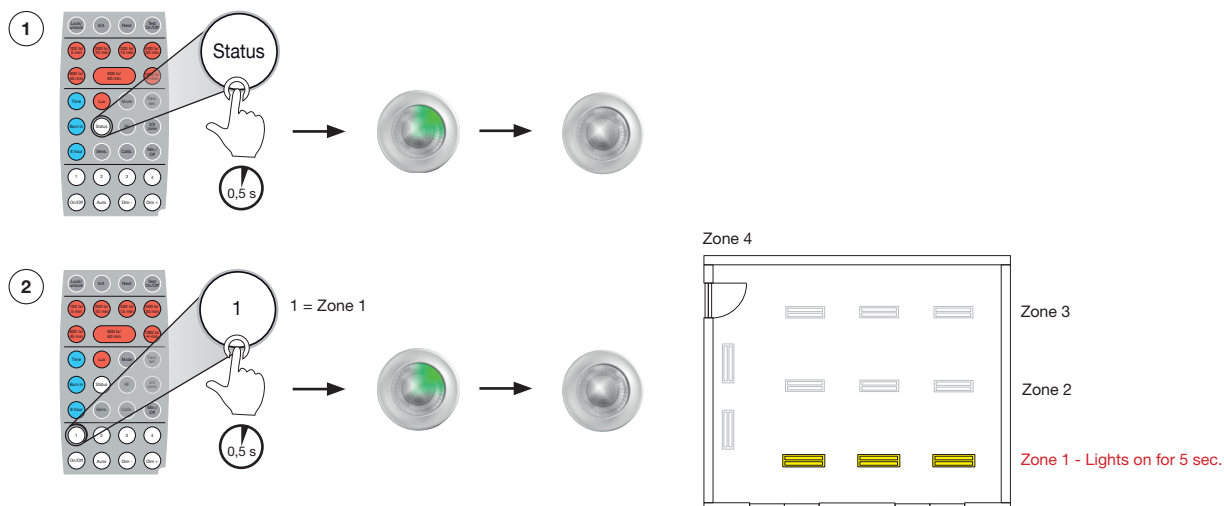 





## 2.15 Status – Zone 2

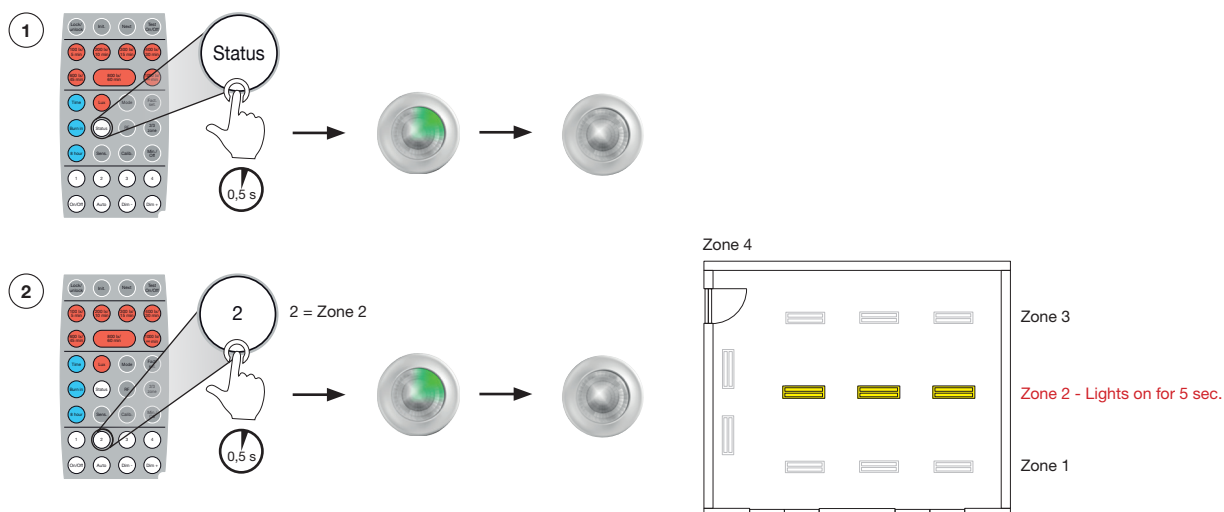 

## 2.16 Status – Zone 3

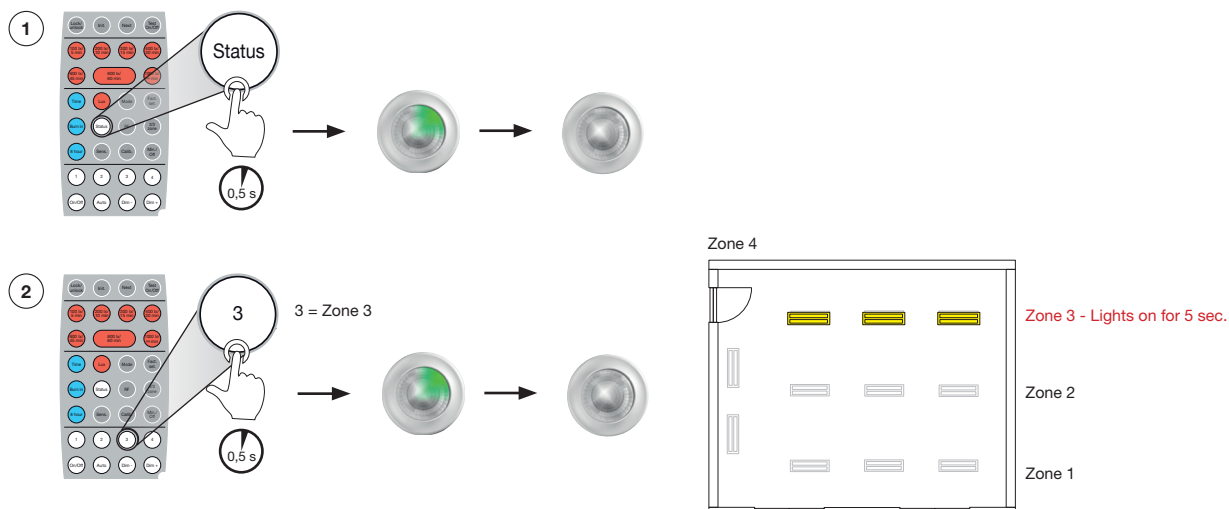 


## 2.17 Status – Zone 4

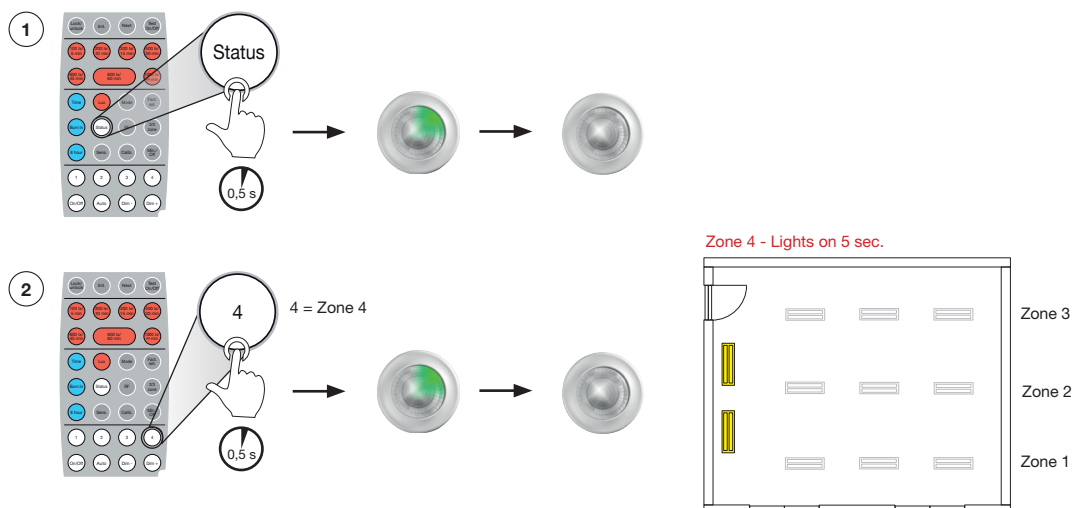 





## 2.18 Status – Automatic On or Semi-Auto On (Zone 1)

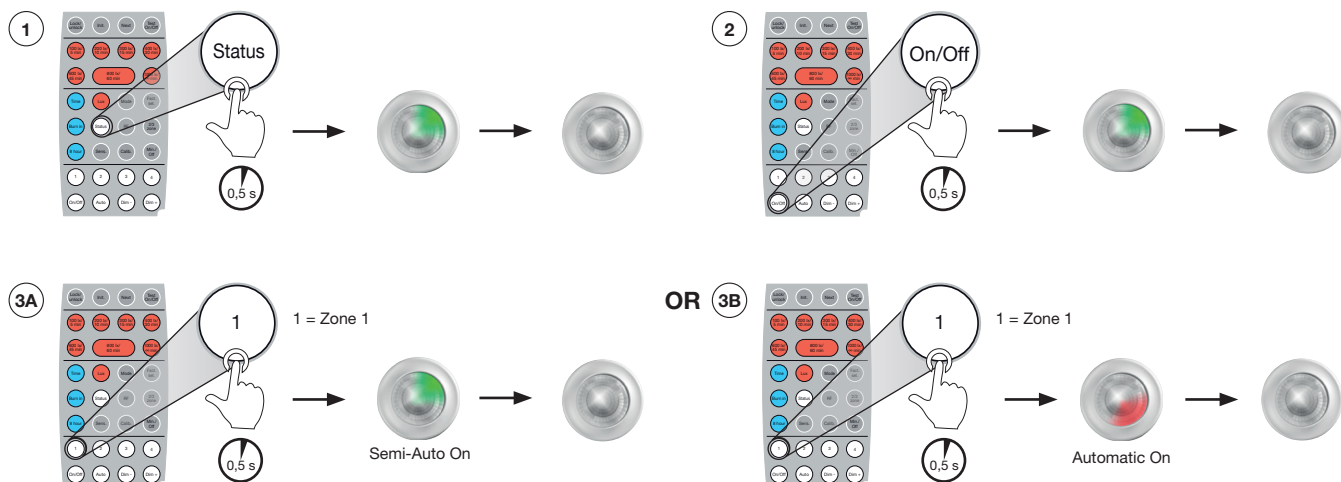 


## 2.19 Status – Automatic On or Semi-Auto On (Zone 2)

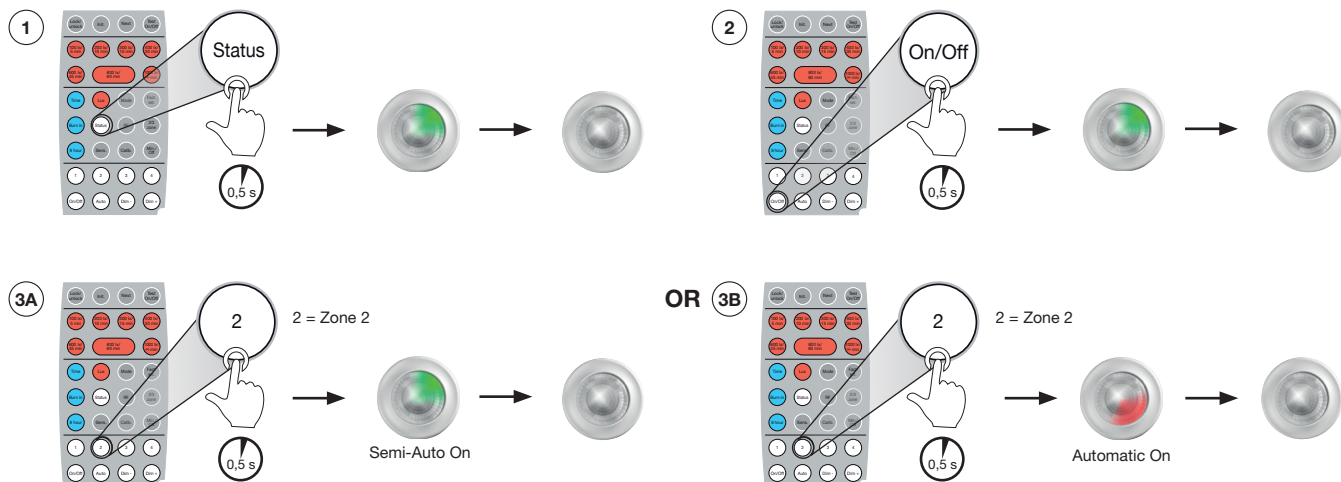 


## 2.20 Status – Automatic On or Semi-Auto On (Zone 3)

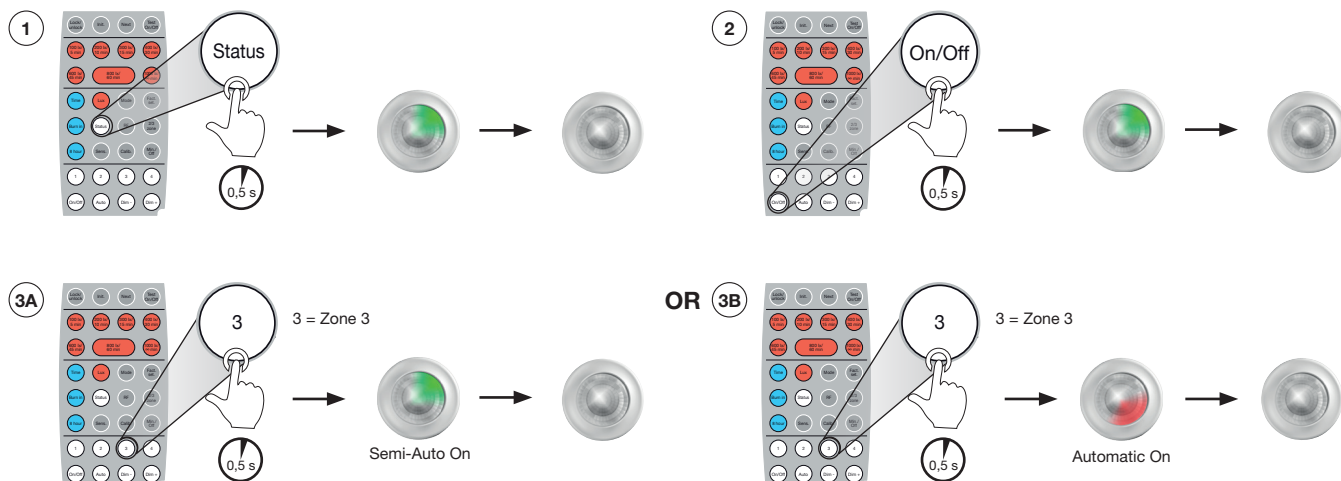 


## 2.21 Status – Automatic On or Semi-Auto On (Zone 4)

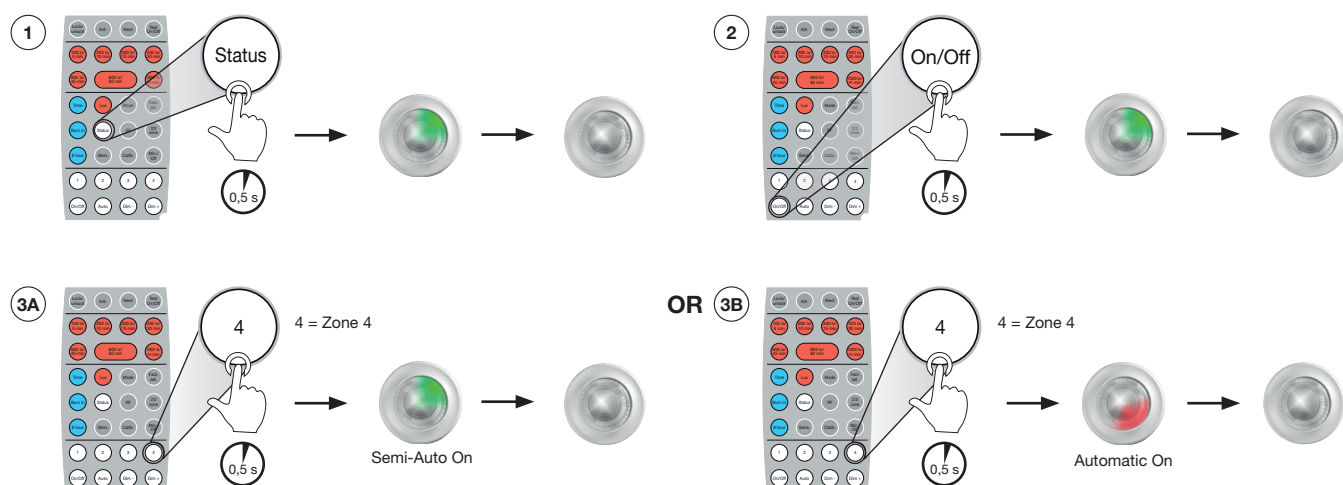 

## 2.22 Status - Daylight calibration

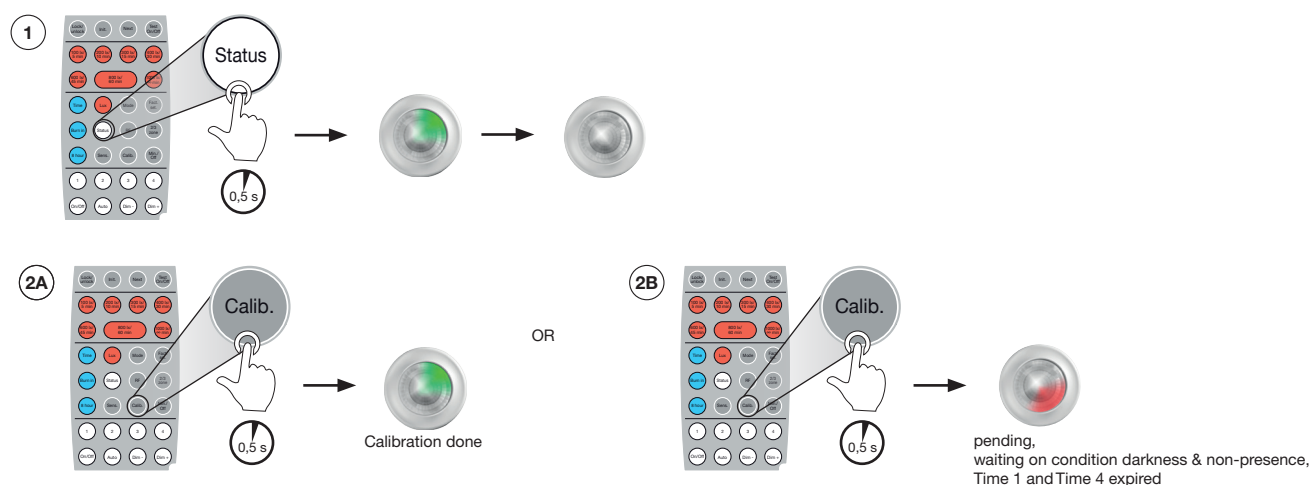 


## 2.23 Status - Firmware Release

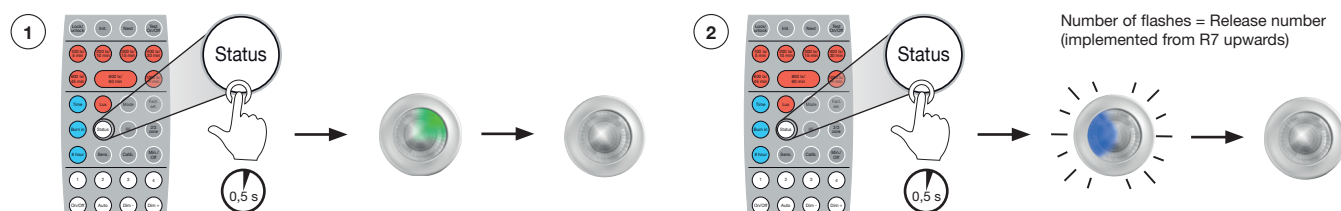 


### 3. Operation

 
#### 3.1 Operation – On/Off (All zones)

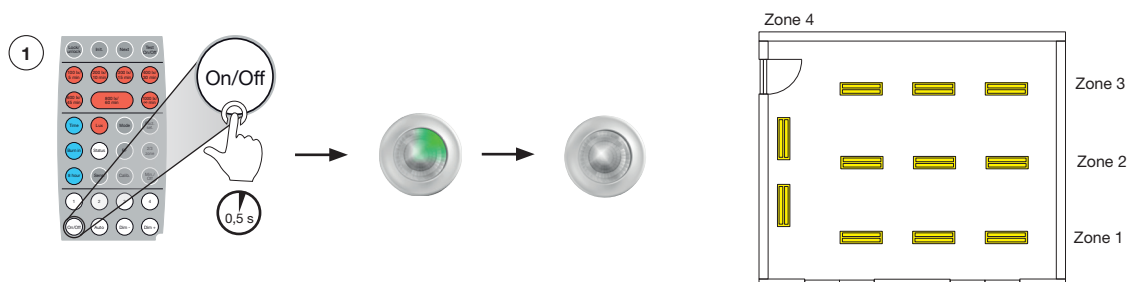


#### 3.2 Operation – Dim up (All zones)

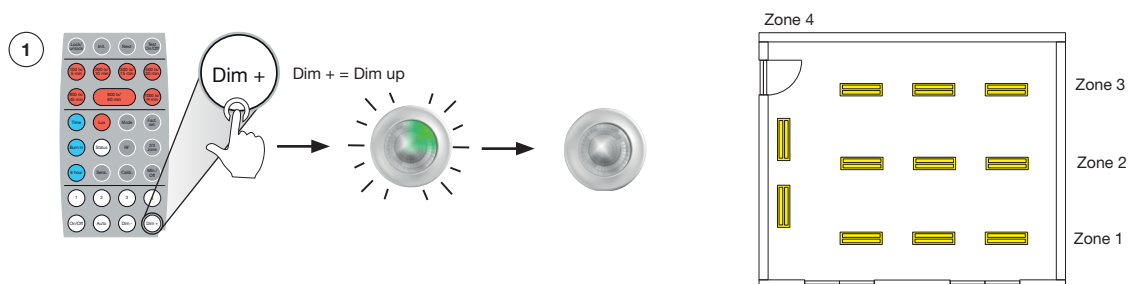 




#### 3.3 Operation – Dim down (All zones)

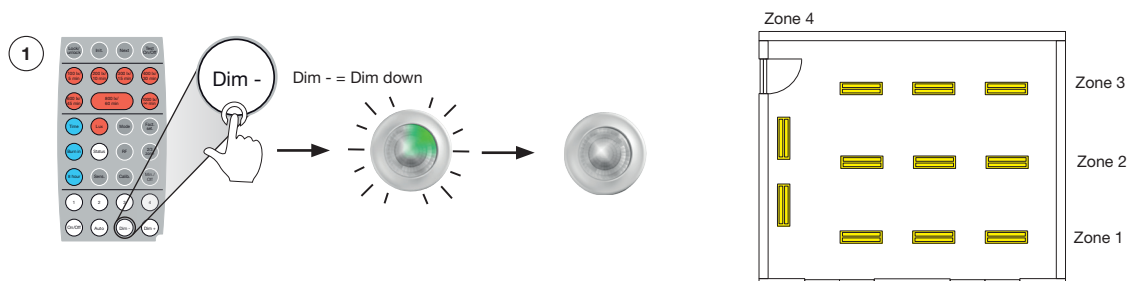 




### 3.4 Operation – Daylight zones to daylight control (Auto)

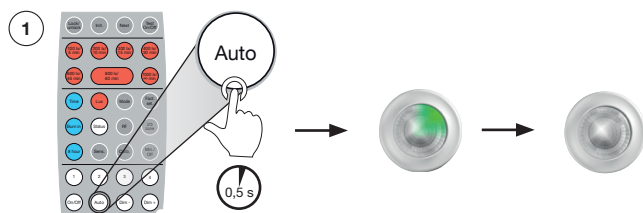 


### 3.5 Operation – Luminaires On/Off (Zone 1)

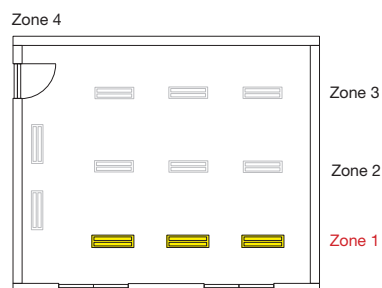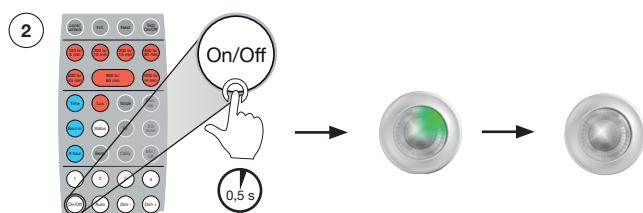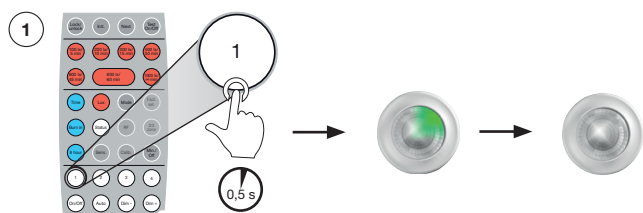   


### 3.6 Operation – Luminaires On/Off (Zone 2)

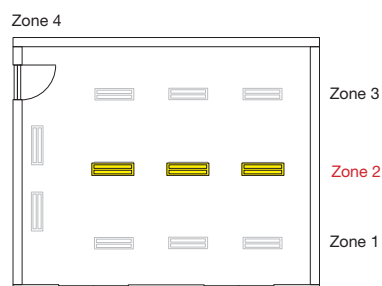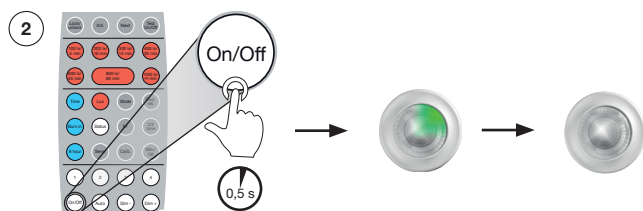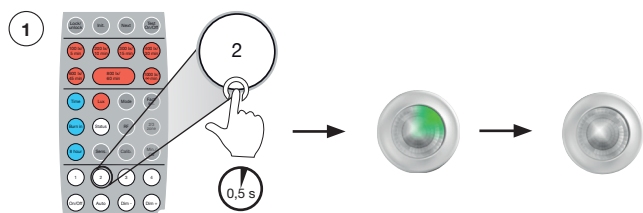   


### 3.7 Operation – Luminaires On/Off (Zone 3)

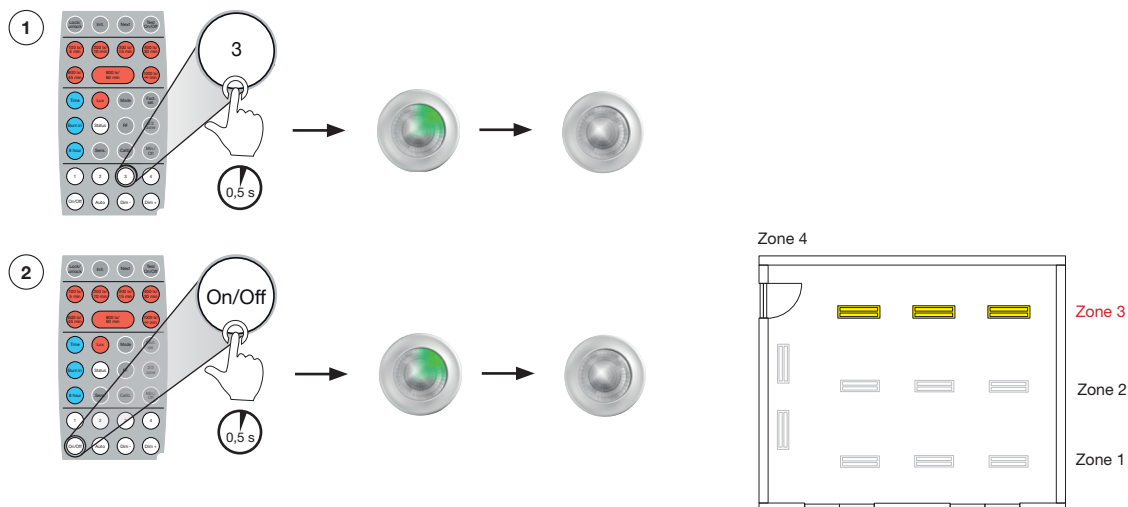 


### 3.8 Operation – Luminaires On/Off (Zone 4)

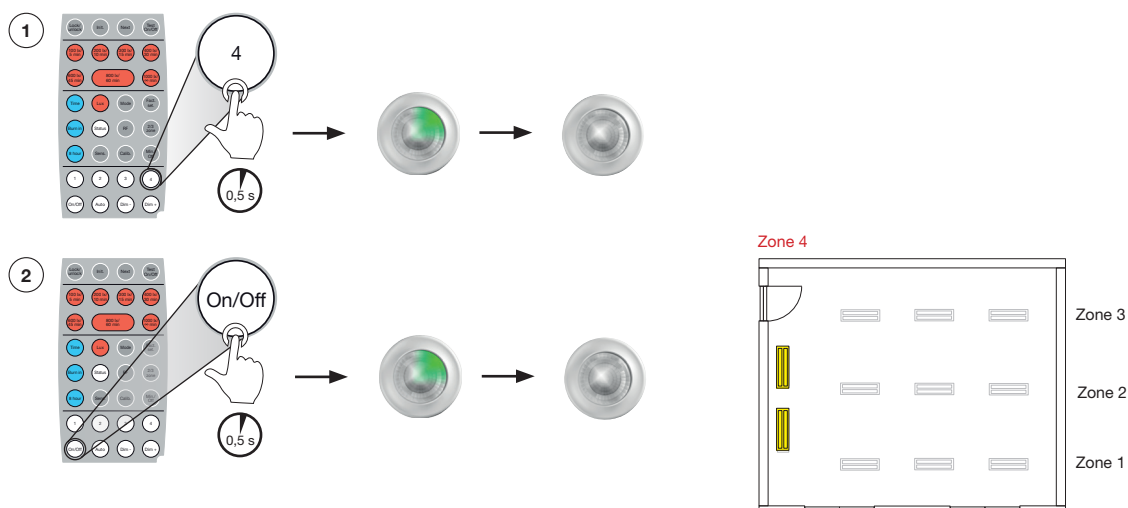 


### 3.9 Operation – Dim up/down luminaires (Zone 1)

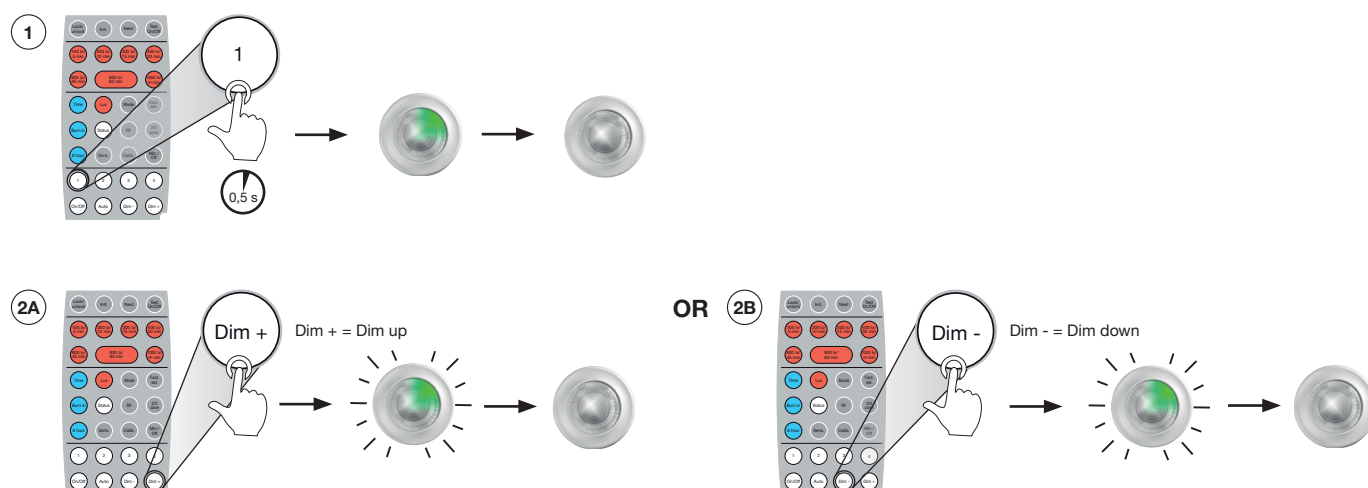 


### 3.10 Operation – Dim up/down luminaires (Zone 2)

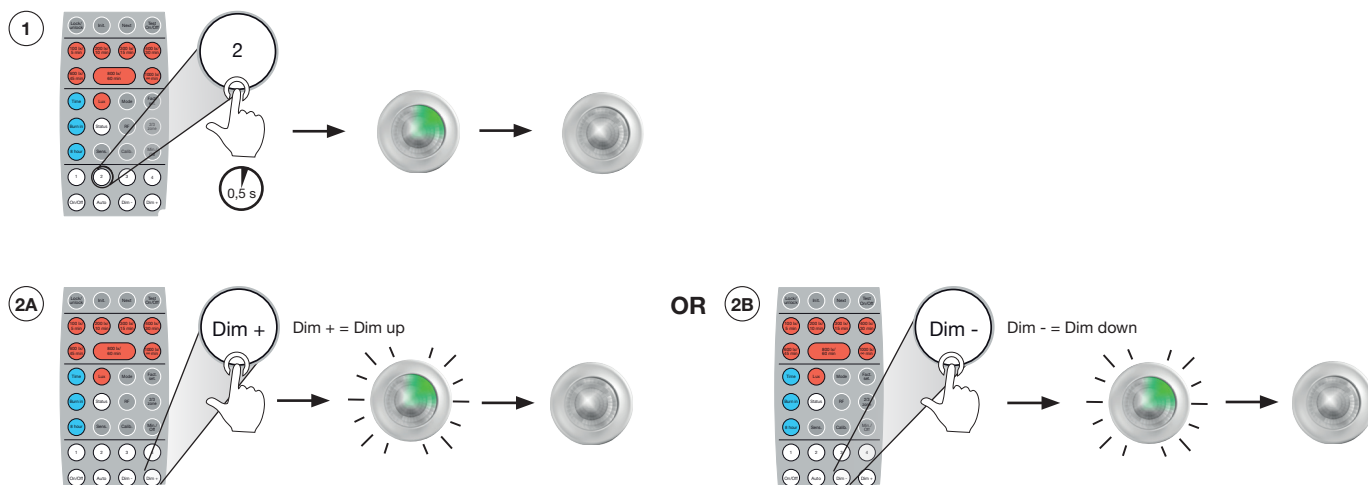 


### 3.11 Operation – Dim up/down luminaires (Zone 3)

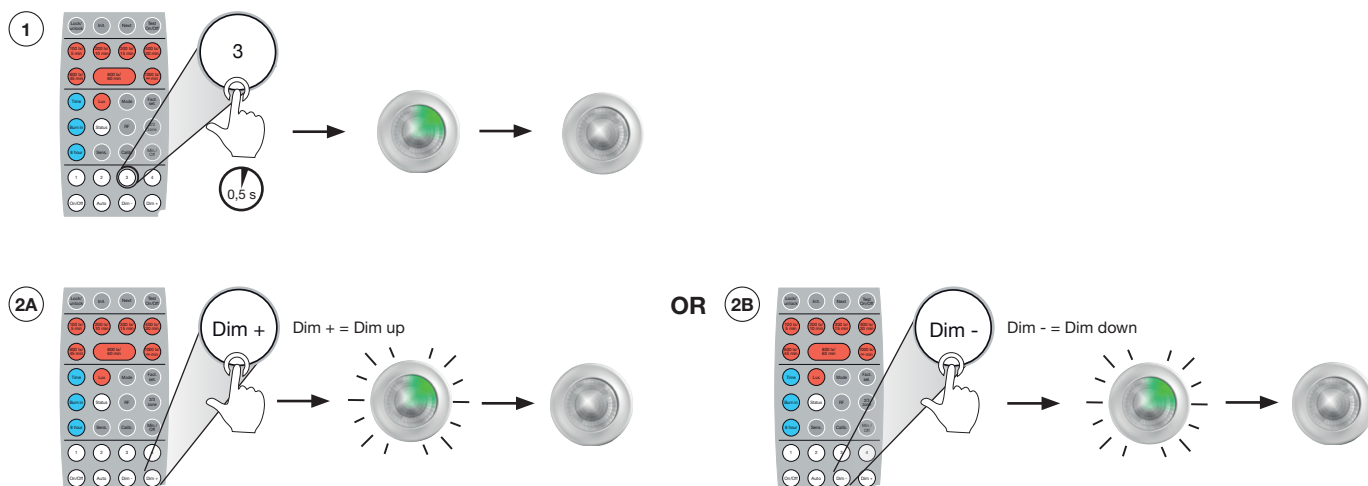 


### 3.12 Operation – Dim up/down luminaires (Zone 4)

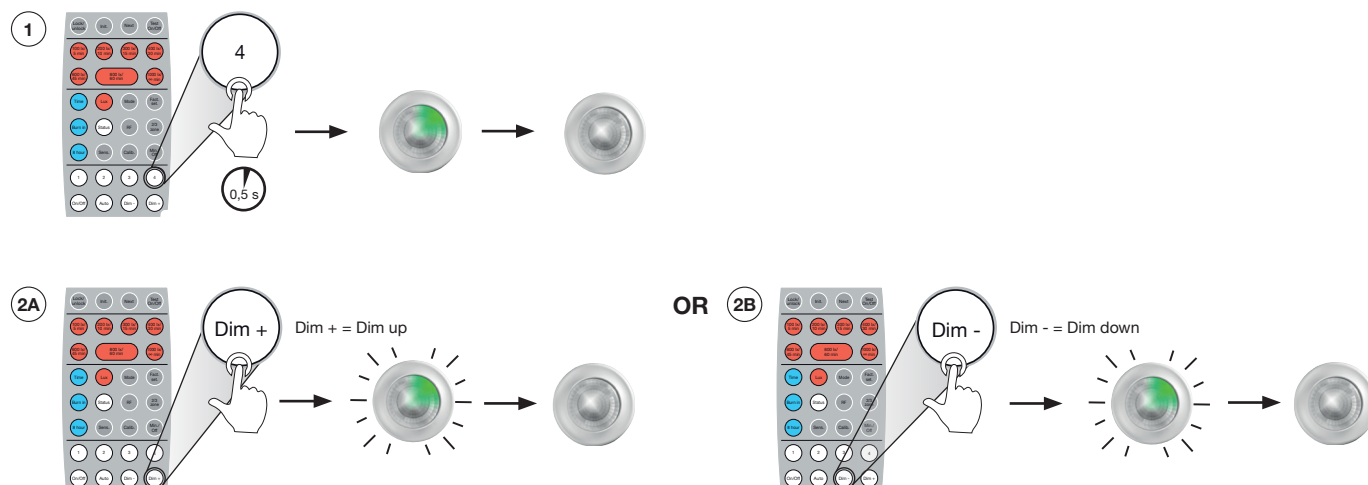 


### 3.13 Operation – Light scene 1

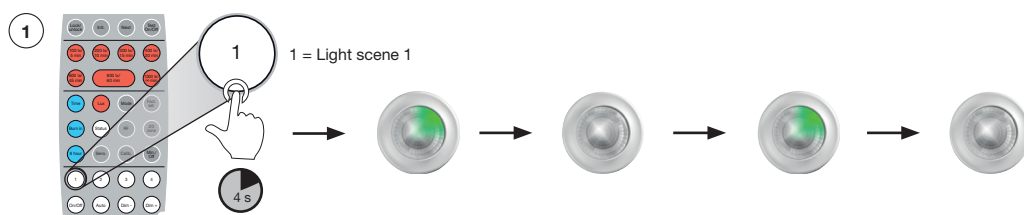 

### 3.14 Operation – Light scene 2

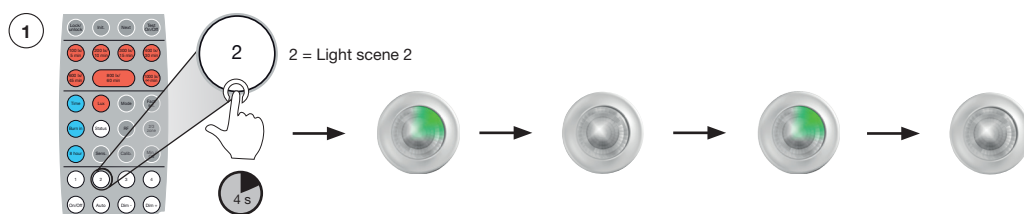 

### 3.15 Operation – Light scene 3

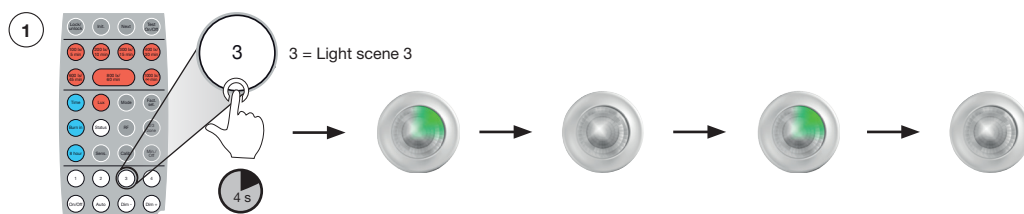 

### 3.16 Operation – Light scene 4

